



## Quick Installation Guide



**TV-IP400**  
**TV-IP400W**

# Table of Contents

English .....	1
1. Before You Start .....	1
2. Hardware Installation .....	2
3. Configure the Internet Camera .....	3
Troubleshooting .....	5

# 1. Before You Start



 
## Package Contents

- TV-IP400/TV-IP400W
- Quick Installation Guide
- Mounting plate
- Utility CD-ROM
- AC Power Adapter
- 1 x 2dBi Detachable Antenna (TV-IP400W)

## System Requirements

- CD-ROM Drive
- 10/100Mbps Ethernet
- CPU: 1GHz or above
- Memory: 256MB or above
- VGA Resolution: 800 x 640 or above
- Web Browser: Internet Explorer 5.0 or above

## Application

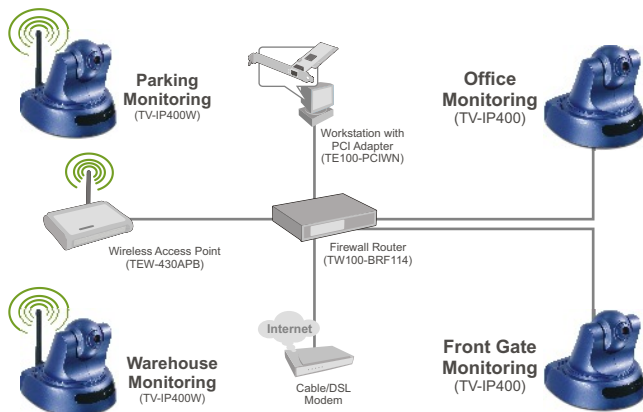

## 2. Hardware Installation

1. Place the camera on a flat, level surface.

2. Attach the Antenna. (TV-IP400W)

3. Connect the AC Power Adapter to the back of the camera.

4. Connect the AC Power Adapter to a power outlet.

 
5. Connect a RJ-45 network cable from a Switch/Hub to the **Ethernet** port of the Internet Camera.




## 3. Configure the Internet Camera

**Note:** It is recommended that you configure the Internet Camera from a wired computer. Before the Internet Camera can be configured, a Static IP address must be assigned on your computer's network adapter in the subnet of 192.168.0.x. Since the Internet Camera's default IP address is 192.168.0.20, make sure no other network devices are assigned an IP address of 192.168.0.20. (Refer to the Troubleshooting section on how to configure TCP/IP settings on your PC.)

1. Open your web browser, type **http://192.168.0.20** in the Address bar, and press **Enter**.



 2. Click **Administration**.

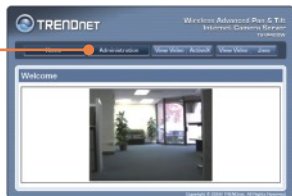


3. Click **Configuration** and then click **Network**. Configure the network settings to be in the same subnet as your network. Then click **Save**.



4. Click **Wireless**. Configure your wireless settings to match your wireless network's settings and then click **Save**. (TV-IP400W only)



 5. Click **ActiveX** or **Java Mode**.

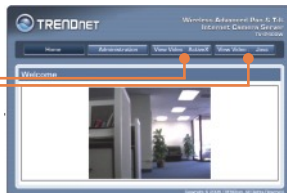


**Your installation is now complete.**

**Note:** For detailed information regarding the **TV-IP400/TV-IP400W** configuration and advanced settings, please refer to the Troubleshooting section, User's Guide on the Utility CD-ROM, or TRENDnet's website at <http://www.trendnet.com>.

## Q1: How do I configure TCP/IP settings on my computer?

 1. Go into the **Control Panel** and double-click the **Network Connections** icon, and then right-click the **Local Area Connection** icon and then click **Properties**.

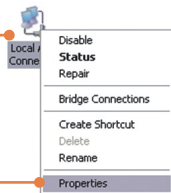

2. Click **Internet Protocol (TCP/IP)** and then click **Properties**. Then click on **Use the following IP address**, and make sure you assign your network adapter an IP address in the subnet of 192.168.0.x.



## Q2: When I click on ActiveX or Java, the image does not load?

**A2:** First, make sure that you are using a browser that supports ActiveX or Java. Second, make sure that ActiveX or Java is installed and enabled.

## Q3: How do I connect the TV-IP400W to my wireless router or access point?

**A3:** Make sure that you configure the camera to have the same SSID, encryption mode and key (if enabled). Follow the instructions in section 2 to configure the camera with the SSID and encryption key.

## Q4: After I successfully configured the TV-IP400/TV-IP400W to match my wireless network settings, I can not connect to the camera.

**A4:** First, verify that the wireless settings match your wireless network settings. Second, verify that the **LINK LED** is lit orange. Third, press on the reset button using a paper clip for 15 seconds, then let go. Then reconfigure the camera.

If you still encounter problems or have any questions regarding the **TV-IP400/TV-IP400W**, please contact TRENDnet's Technical Support Department.

## Certifications

This equipment has been tested and found to comply with FCC and CE Rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received. Including interference that may cause undesired operation.



Waste electrical and electronic products must not be disposed of with household waste. Please recycle where facilities exist. Check with you Local Authority or Retailer for recycling advice.



**NOTE:** THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

## ADVERTENCIA

En todos nuestros equipos se mencionan claramente las características del adaptador de alimentación necesario para su funcionamiento. El uso de un adaptador distinto al mencionado puede producir daños físicos y/o daños al equipo conectado. El adaptador de alimentación debe operar con voltaje y frecuencia de la energía eléctrica domiciliar existente en el país o zona de instalación.





## TRENDnet Technical Support

### US • Canada

**Toll Free Telephone:** 1(866) 845-3673

24/7 Tech Support



### Europe (Germany • France • Italy • Spain • Switzerland • UK)

**Toll Free Telephone:** +00800 60 76 76 67

English/Espanol - 24/7

Francais/Deutsch - 11 am-8pm, Monday - Friday MET

### Worldwide

**Telephone:** +(31) (0) 20 504 05 35

English/Espanol - 24/7

Francais/Deutsch - 11 am-8pm, Monday - Friday MET

## Product Warranty Registration

Please take a moment to register your product online.

Go to TRENDnet's website at <http://www.trendnet.com>

**TRENDnet**<sup>®</sup>  
20675 Manhattan Place  
Torrance, CA 90501  
USA