

TEW-412APBO

54Mbps 802.11g 9dBi High Power
Wireless Outdoor AP Bridge

TEW-413APBO

54Mbps 802.11g High Power
Wireless Outdoor AP Bridge

User's Guide



TRENDnet[®]
TRENDware, USA
What's Next in Networking

Copyright Statement

No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, whether electronic, mechanical, photocopying, recording, or otherwise without the prior writing of the publisher.

JUL. 2004



Contents

1. Introduction	4
2. Safety Notification	5
3. AP Default Settings	6
4. Web Management Settings	7
4.1. Primary Setup.....	8
4.2. System.....	12
4.3. Operating Mode.....	13
4.4. Status.....	15
4.5 Traffic Log.....	16
4.6 Access Control.....	17
4.7 Advanced Wireless.....	18
4.8. SNMP INFO.....	20
4.9. Upgrade Firmware.....	21
5. Troubleshooting	23

1. Introduction

Thank you for purchasing TRENDnet's Wireless 802.11g Outdoor AP Bridge.

This user guide will assist you with the installation procedure.

The package you have received should contain the following items:

For TEW-412APBO

- TEW-412APBO
- User's Guide CD-ROM
- Quick Installation Guide
- POE Host & Power Cord
- Mounting Kit
- Cat.5 Ethernet Cable (1.5m/5ft.)

For TEW-413APBO

- TEW-412APBO
- User's Guide CD-ROM
- Quick Installation Guide
- POE Host & Power Cord
- N-type Male to N-type Male Cable (2meters)
- Mounting Kit
- Cat.5 Ethernet Cable (1.5m/5ft.)

Note: if anything is missing, please contact your vendor

2. Safety Notification

This device should be professionally installed; the installer shall be responsible for ensuring that the proper antenna is employed without exceeding local regulation.

Your Wireless AP should be placed in a safe and secure location. To ensure proper operation, please keep the unit away from water and other damaging elements. Please read the user manual thoroughly before you install the device. The device should only be repaired by authorized and qualified personnel.

- Please do not try to open or repair the device yourself.
- Do not place the device in a damp or humid location, i.e. a bathroom.
- The device should be placed in a sheltered and non-slip location within a temperature range of 5°~40°C.
- Please do not expose the device to direct sunlight or other heat sources. The housing and electronic components may be damaged by direct sunlight or heat sources.

3. AP Default Settings

The default settings are shown following.

User	admin
Password	admin
AP IP Address	192.168.1.250
AP Subnet Mask	255.255.255.0
RF ESSID	ap11g
11g RF Channel	6
Mode	11b+g
Encryption	Disabled

4. Web Management Settings

TURN ON POWER SUPPLY

Quick power cycle can caused system corruption. When power on, be careful not to shut down in about 5 seconds, because data is writing to the flash.

START UP & LOGIN

In order to configure the outdoor Wireless 11g AP, you must use your web browser and manually input `http://192.168.1.250` into the Address box and press Enter. The Main Page will appear.



To start configure the outdoor Wireless 11g AP, you must login as **“admin”** in the **User Name** box. And input password **“admin”** on the password section.

Once you have logged-in as administrator, it is a good idea to change the administrator password to ensure a secure protection to the outdoor Wireless 11g AP. The Security Settings section described later in this manual describes how to change the password.

Once you have input the correct password and logged-in, the screen will change to the Setup page screen.

4.1. Primary Setup

MAKE CORRECT NETWORK SETTINGS OF YOUR COMPUTER

To change the configuration, use Internet Explorer (IE) or Netscape Communicator to connect the WEB management **192.168.1.250**.

Primary Setup

This screen contains all of the AP's basic setup functions.

54Mbps 2.4 Wireless-G

Primary Setup System Operating Mode Status Traffic Log Advanced Setup Help

Primary Setup

This section contains the primary configuration for the Access Point. You should be able to customize easily the Ethernet and Wireless interface in this section. **Remember to press Apply for finalizing your configuration.**

AP Name:

LAN MAC Address: **00:0C:41:13:69:00**

Configuration type:

IP Address: . . . This is the IP Address, Subnet Mask and

Subnet Mask: . . . Default Gateway of the Access Point as it is

Gateway: . . . seen by your local network.

Wireless MAC Address: **00:11:22:33:44:56**

Mode:

SSID: SSID Broadcast:

Channel:

Domain: USA

Security: Enable Disable


Firmware Version: v1.1.02, Jul 31, 2003

Most users will be able to configure the AP and get it working properly using the settings on this screen.

LAN IP Address and Subnet Mask: This is the AP's IP Address and Subnet Mask as seen on the internal LAN. The default value is 192.168.1.250 for IP Address and 255.255.255.0 for Subnet Mask.

Wireless: This section provide the Wireless Network settings for your WLAN

Wireless Settings



Wireless

MAC Address: 00:11:22:33:44:56

Mode: 11b+g

SSID: ap11g

Channel: 6

Domain: USA

Security: Enable Disable

SSID Broadcast: Enable


SSID: The service set identifier (SSID) or network name. It is case sensitive and must not exceed 32 characters, which may be any keyboard character. You shall have selected the same SSID for all the APs that will be communicating with mobile wireless stations.

Channel: Select the appropriate channel from the list provided to correspond with your network settings. You shall assign a different channel for each AP to avoid signal interference.

Security: There are 3 types of security to be selected. To secure your Wireless Networks, it's strongly recommended to enable this feature.

-WEP

Make sure that all wireless devices on your network are using the same encryption level and key. WEP keys must consist of the letters "A" through "F" and the numbers "0" through "9."

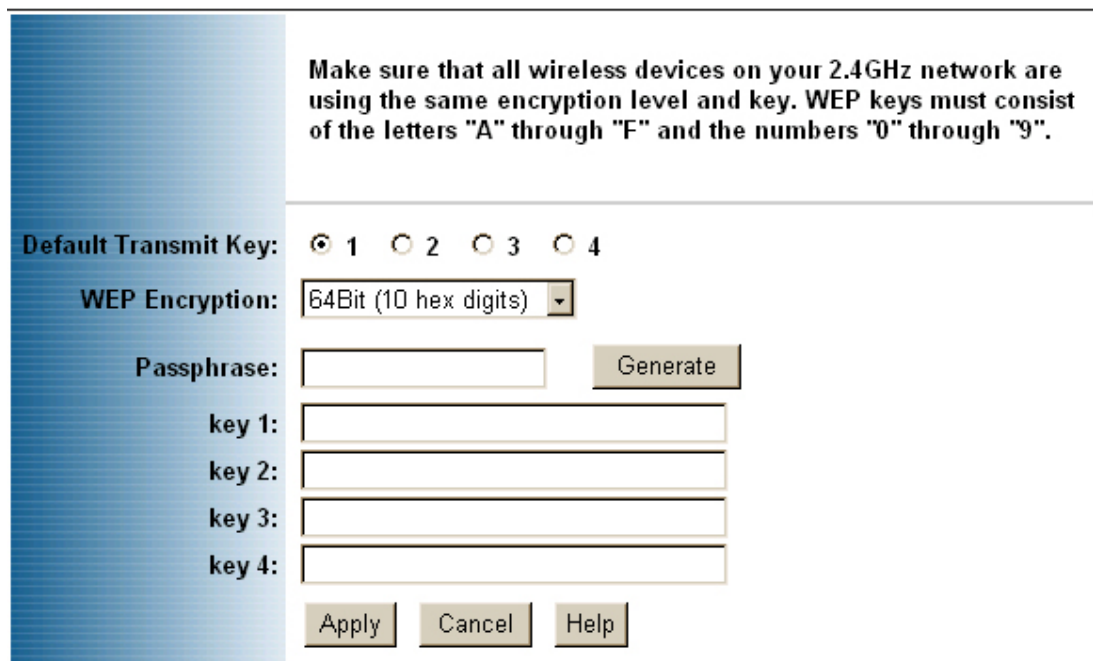

Make sure that all wireless devices on your 2.4GHz network are using the same encryption level and key. WEP keys must consist of the letters "A" through "F" and the numbers "0" through "9".

Default Transmit Key: 1 2 3 4

WEP Encryption: 64Bit (10 hex digits)

Passphrase:

key 1:

key 2:

key 3:

key 4:


Important Notice

In order to make right use of WPA, please ensure that your current Wireless Adapter's driver, and Wireless Utility can support it, WPA needs 802.1x authentication (when RADIUS mode is chosen), though the Operating System must also support 802.1x protocol. For Microsoft's OS family, only Windows XP has incorporated this by default. The rest of the OS must installed 3er party's client software such as Funk ODySSey.

-WPA-Preshared key

There are two encryption options for WPA Pre-Shared Key, TKIP and AES. TKIP stands for Temporal Key Integrity Protocol. TKIP utilizes a stronger encryption method and incorporates Message Integrity Code (MIC) to provide protection against hackers. AES stands for Advanced Encryption System, which utilizes a symmetric 128-Bit block data encryption.

To use WPA Pre-Shared Key, enter a password in the WPA Shared Key field between 8 and 63 characters long. You may also enter a Group Key Renewal Interval time between 0 and 99,999 seconds.

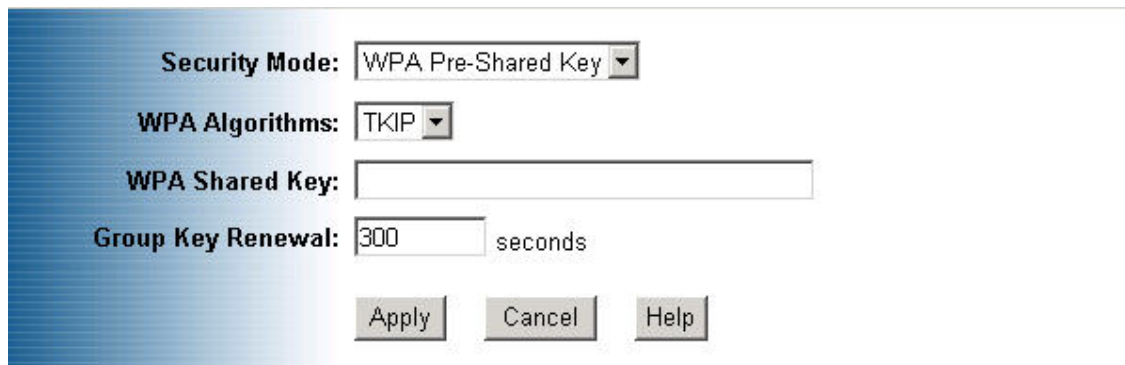


The screenshot shows a configuration window with a blue gradient background. It contains the following fields and controls:

- Security Mode:** A dropdown menu with "WPA Pre-Shared Key" selected.
- WPA Algorithms:** A dropdown menu with "TKIP" selected.
- WPA Shared Key:** An empty text input field.
- Group Key Renewal:** A text input field containing "300" followed by the label "seconds".
- At the bottom, there are three buttons: "Apply", "Cancel", and "Help".

WPA Algorithms	Please choose your algorithms method. You can select between TKIP or AES.
WPA Shared Key	Please input the Pre-Shared Key. The key should be 8 characters or 63 characters in alphanumeric.
Group Key Renewal	Please input the period of renewal time. The default selection is 300 seconds.

-WPA RADIUS

WPA RADIUS uses an external RADIUS server to perform user authentication. To use WPA RADIUS, enter the IP address of the RADIUS server, the RADIUS Port (default is 1812) and the shared secret from the RADIUS server.

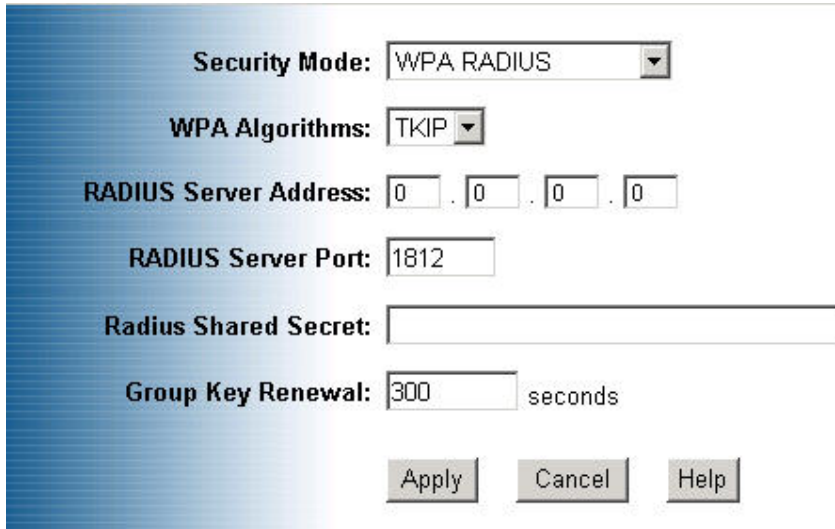

Security Mode:

WPA Algorithms:

RADIUS Server Address: . . .

RADIUS Server Port:

Radius Shared Secret:

Group Key Renewal: seconds

WPA Algorithms	Please choose your algorithms method. You can select between TKIP or AES.
Radius Server Address	Please input your RADIUS Server IP address.
RADIUS Server Port	Please input the Authentication port of your RADIUS server. The default port being used is 1812
RADIUS Shared Key	The RADIUS server will accept the authentication if both Shared Key matched.
Group Key Renewal	Please input the period of renewal time. The default selection is 300 seconds.

* Click **Apply** to save your settings.

4.2. System

The screenshot shows the 'System' configuration page of a wireless router. At the top, there is a navigation menu with tabs for 'Primary Setup', 'System', 'Operating Mode', 'Status', 'Traffic Log', 'Advanced Setup', and 'Help'. The 'System' tab is selected. Below the navigation menu, the page title is 'System'. A message states: 'It is strongly recommended to change the default password for you Access Point in order to avoid any security risks. In this section you can also Restore and Backup the Setting to a Profile.' The 'AP Password' section contains two input fields, both containing '****'. The first field is labeled '(Enter New Password)' and the second is labeled '(Re-enter to Confirm)'. Below this is the 'Restore Factory Defaults' section with radio buttons for 'YES' and 'NO', where 'NO' is selected. A note below reads: 'Note: If YES, all setting will be restored as factory defaults set.' The 'Backup/Restore Setting' section has two buttons: 'Backup Setting' and 'Restore Setting'. A note below reads: 'Note: Click on "Backup Setting" to create and save the setting on your local hard drive. Click on "Restore Setting" to load the setting profile from your hard drive.' The 'Firmware Upgrade' section has a 'Current Version:' label and a 'Firmware Upgrade' button. At the bottom of the page are three buttons: 'Apply', 'Cancel', and 'Help'.

AP Password: Changing the password for the AP is as easy as typing the password into the **Enter New Password** field. Then, type it again into the Re-enter to confirm.

* Click the **Apply** button to save the setting.

Use the default password when you first open the configuration pages, after you have configured these settings, you should set a new password for the AP (using the Password screen). This will increase security, protecting the AP from unauthorized changes.

Restore Factory Defaults: Click the **Yes** button to reset all configuration settings to factory default values. Note: Any settings you have saved will be lost when the default settings are restored. Click the **No** button to disable the Restore Factory Defaults feature.

Click the **Apply** button to save the setting.

Backup/Restore Setting: Click Backup to store the Access Point's configuration on your local PC. Click Restore to restore Access Point's configuration from your local PC

* Check all the settings and click **Apply** to save them.

4.3. Operating Mode

The screenshot shows the configuration page for a Wireless-G 2.4 device. The top navigation bar includes links for Primary Setup, System, Operating Mode (selected), Status, Traffic Log, Advanced Setup, and Help. The main content area is titled "Operating Mode" and contains the following text:

Please assign the operating mode to the device. You can select between "AP", "AP Repeater" or "Wireless Bridge" mode. The default operating mode of the device is "AP". For further understanding on Operating Mode selection, please refer to the User Guide or Help.

LAN MAC Address: **00:0C:41:13:69:00**

Access Point (Default Selection)

AP Repeater

Please input the MAC Address of the remote AP:

Enable LAN port

Note: Please leave the option "Enable LAN port" selected. This will allow your wired PC to join the remote AP's network. In other case, you will only be able to configure the unit through Wireless Interface.

Wireless Bridge

Please input the MAC Address of the remote Wireless Bridge:

Note: When the unit is operating as "Wireless Bridge", it will interact only with other remote Wireless Bridge on the MAC Address list.


Access Point: This mode provides access for wireless stations to wired LANs and from wired LANs to wireless stations.

Important

Both units must be selected as AP Repeater mode in order to establish the Wireless link communication. The remote AP MAC address to be filled at this selection should be the LAN MAC address that is displaying at the Operating Mode's web pages


AP Repeater: This mode allows the AP to keep the AP function role and at the same time performing a communication with other 802.11g AP to establish and extend your Wireless Network cover. Please enter the Remote Access Point's MAC address to enable this feature.

Repeater Application

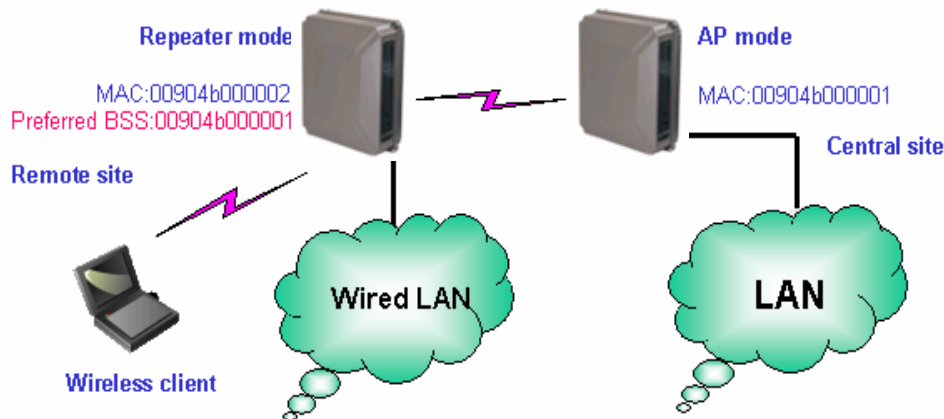

Wireless Bridge: This mode allows the connection of one or more remote LANs with a central LAN.

Bridge Application

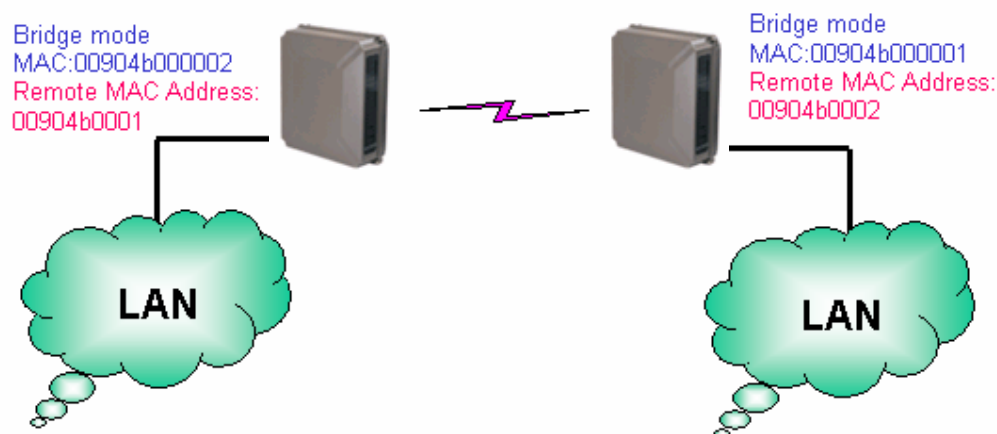

* Click **Apply** to save your settings.

4.4. Status

The screenshot shows a web interface for an AP. At the top left is the logo '54Mbps 2.4 Wireless-G'. A navigation bar contains tabs: 'Primary Setup', 'System', 'Operating Mode', 'Status' (selected), 'Traffic Log', 'Advanced Setup', and 'Help'. The main content area is divided into sections: 'Status' with a description, 'AP Name: ap11g_radius' and 'Firmware Version: v1.1.03, Aug 04, 2003', 'LAN' with MAC Address '00:0C:41:13:69:00' and a table of configuration (Static IP Address, 210.66.97.239, 255.255.255.0), and 'Wireless' with MAC Address '00:11:22:33:44:56' and a table of settings (SSID: ap11g_radius, Mode: 11b+g, Channel: 11, Security: WPA Radius) and traffic statistics (Send: 84445 Good, 0 Dropped; Received: 44679 Good, 0 Dropped). A 'Note' and 'Refresh/Help' buttons are at the bottom.

LAN		
MAC Address:	00:0C:41:13:69:00	
Configuration Type:	Static IP Address	
IP Address:	210.66.97.239	
Subnet Mask:	255.255.255.0	

Wireless		
MAC Address: 00:11:22:33:44:56		
SSID:		ap11g_radius
Mode:		11b+g
Channel:		11
Security:		WPA Radius
Send	Good Packets:	84445
	Dropped Packets:	0
Received	Good Packets:	44679
	Dropped Packets:	0

This screen displays the IEEE 802.11g AP's current status and settings. This information is read-only. This page will auto re-flash every 5 seconds to keep most update information.

LAN section will be displaying all information related on AP, such as the IP address and the current configuration type.

Wireless section will be displaying information related on the Wireless interface, such as SSID, Channel, Encryption and statistics of network traffic.

*Click the **Refresh** button to refresh the AP's status and settings.

4.5 Traffic Log

The screenshot shows the 'Traffic Log' configuration page. At the top, there is a navigation bar with the following tabs: Primary Setup, System, Operating Mode, Status, Traffic Log (selected), Advanced Setup, and Help. The page title is '54Mbps Wireless-G'. The main content area is titled 'Traffic Log' and contains the following text: 'Select **Enable** to enable monitoring of traffic between the Network and the Internet. The Incoming Access and Outgoing Access Logs display information about the incoming and outgoing traffic.'

Below the text, there is a 'Traffic Log:' label followed by a dropdown menu set to 'Enable'. Underneath, there is a 'Send Log information to:' label followed by the IP address '192.168.1.' and an empty input field. Below the input field is a 'View Log' button. At the bottom of the form are three buttons: 'Apply', 'Cancel', and 'Help'.

Traffic Log: The AP can keep logs of all incoming or outgoing traffic for your network traffic. This feature is disabled by default. To keep activity logs, select **Enable**.

To keep a permanent record of activity logs as a file on your PC's hard drive, Log viewer software must be used. In the Send Log to field, enter the fixed IP address of the PC running the Log viewer software. The AP will send updated logs to that PC.

To see a temporary log of the AP's most recent traffic, click the **View Log** button..

Click the **Apply** button to save the setting.

4.6 Access Control

The screenshot shows the 'Access Control' configuration page. At the top, there is a navigation bar with 'Access Control' selected. The main heading is 'Access Control' with a sub-instruction: 'Please input the MAC address of each target workstation in order to Permit or Deny the connection to the network.' Below this, there is a dropdown menu for 'Access Control' set to 'Enable'. Two radio buttons are present: 'Deny wireless connection to join the unit from the list.' and 'Allow wireless connection to join the unit from the list.'. A dropdown menu for 'MAC Addresses 1~20' is shown, with a note: '(Enter the MAC Addresses in the this format:xxxxxxxxxxxx)'. Below this are two columns of input fields labeled 'MAC 01' through 'MAC 20'. At the bottom, there are 'Clear', 'Apply', 'Cancel', and 'Help' buttons.

Access Control: Deny wireless connection to join the unit from the list. Allow wireless connection to join the unit from the list.

MAC Addresses 1~20

(Enter the MAC Addresses in the this format:xxxxxxxxxxxx)

MAC 01	<input type="text"/>	MAC 11	<input type="text"/>
MAC 02	<input type="text"/>	MAC 12	<input type="text"/>
MAC 03	<input type="text"/>	MAC 13	<input type="text"/>
MAC 04	<input type="text"/>	MAC 14	<input type="text"/>
MAC 05	<input type="text"/>	MAC 15	<input type="text"/>
MAC 06	<input type="text"/>	MAC 16	<input type="text"/>
MAC 07	<input type="text"/>	MAC 17	<input type="text"/>
MAC 08	<input type="text"/>	MAC 18	<input type="text"/>
MAC 09	<input type="text"/>	MAC 19	<input type="text"/>
MAC 10	<input type="text"/>	MAC 20	<input type="text"/>

Access Control: This function will allow administrator to have access control by enter MAC address of client stations. When **Enable** this function, two new options will show up.

Depend on the filtering propose, it can be selected to **Deny** or **Allow**.

Fill the client stations MAC list to complete the configuration. The table could store up to **40** different MAC addresses. Please follow the format that it required when an address is input.

* Click **Apply** to save your settings.

4.7 Advanced Wireless

54Mbps 2.4 Wireless-G

Access Control **Advanced Wireless** SNMP Primary

Advanced Wireless The Advanced Wireless settings should be left at their default values. Improper configuration may result in poor network performance.

Authentication Type: (Default: Auto)

Transmission Rates: (Default: Auto)

RTS/CTS: (Default: Disable)

Beacon Interval: (Default: 100, Milliseconds, Range: 20-1000)

RTS Threshold: (Default: 2346, Range: 256-2346)

Fragmentation Threshold: (Default: 2346, Range: 256-2346)

DTIM Interval: (Default: 3, Range: 1-255)

Authentication Type:

Auto: Auto is the default authentication algorithm. It will change its authentication type automatically to fulfill client's requirement.

Open System: Open System authentication is not required to be successful while a client may decline to authenticate with any particular other client.

Shared Key: Shared Key is only available if the WEP option is implemented. Shared Key authentication supports authentication of clients as either a member of those who know a shared secret key or a member of those who do not. IEEE 802.11 Shared Key authentication accomplishes this without the need to transmit the secret key in clear. Requiring the use of the WEP privacy mechanism.

Transmission Rate: The rate of data transmission should be set depending on the speed of your wireless network. You can select from a range of transmission speeds, or you can select **AUTO** to have the AP automatically use the fastest possible data rate and enable the Auto-Fallback feature. Auto-Fallback will negotiate the best possible connection speed between the AP and a wireless client. The default setting is **AUTO**.

Beacon Interval: The Beacon Interval value indicates the frequency interval of the beacon. Enter a value between 20 and 1000. A beacon is a packet broadcast by the AP to synchronize the wireless network. The default value is **100**.

RTS Threshold: This value should remain at its default setting of 2346. Should you encounter inconsistent data flow, only minor modifications are recommended. If a network packet is smaller than the preset RTS threshold size, the RTS/CTS mechanism will not be enabled. The AP sends Request to Send (RTS) frames to a particular receiving station and negotiates the sending of a data frame. After receiving an RTS, the wireless station responds with a Clear to Send (CTS) frame to acknowledge the right to begin transmission.

Fragmentation Threshold: This value specifies the maximum size for a packet before data is fragmented into multiple packets. It should remain at its default setting of 2346. If you experience a high packet error rate, you may slightly increase the Fragmentation Threshold. Setting the Fragmentation Threshold too low may result in poor network performance. Only minor modifications of this value are recommended.

DTIM Interval: This value indicates the interval of the Delivery Traffic Indication Message (DTIM). A DTIM field is a countdown field informing clients of the next window for listening to broadcast and multicast messages. When the Access Point has buffered broadcast or multicast messages for associated clients, it sends the next DTIM with a DTIM Interval value. Access Point Clients hear the beacons and awaken to receive the broadcast and multicast messages.

* Click **Apply** to save your settings.

4.8. SNMP INFO

SNMP INFO Based on Simple Network Management Protocol, you can quickly control and monitor any network device. Please fill out the correspond information on this page to start the monitoring.

SNMP V1/V2c:

Information: Contact:

Unit Name and description:

Physical Location:

SNMP Community:

SNMP INFO: The SNMP screen allows you to customize the Simple Network Management Protocol (SNMP) settings. SNMP is a popular network monitoring and management protocol.

SNMPv2c		To enable the SNMP support feature, select Enable . Otherwise, select Disable .
Identification	Contact	In the contact field, enter contact information for the AP.
	Unit Name and description	In the Unit Name and description field, enter the name of the AP or AP description.
	Physical Location	In the Physical Location field, specify the area or location where the AP resides.
SNMP Community	public	You may change the SNMP Community's name from its default, public . Then configure the community's access as either Read-Only or Read-Write .
	private	You may change the SNMP Community's name from its default, public . Then configure the community's access as either Read-Only or Read-Write .

Click **Apply** to save your settings.

4.9. Upgrade Firmware

System

It is strongly recommended to change the default password for you Access Point in order to avoid any security risks. In this section you can also Restore and Backup the Setting to a Profile.

AP Password: (Enter New Password)
 (Re-enter to Confirm)

Restore Factory Defaults: YES NO

Note: If YES, all setting will be restored as factory defaults set.

Backup/Restore Setting:

Note: Click on "Backup Setting" to create and save the setting on your local hard drive. Click on "Restore Setting" to load the setting profile from your hard drive.

Firmware Upgrade :

Current Version:

To perform the firmware upgrade action, please go to the System section.

Firmware Upgrade: Click the **Firmware Upgrade** button to load new firmware onto the AP. If the AP is not experiencing difficulties, then there is no need to download a more recent firmware version, unless that version has a new feature that you want to use.

Note: When you upgrade the AP's firmware, you may lose its configuration settings, so make sure you write down the AP's settings before you upgrade its firmware.

To upgrade the AP's firmware:

1. Download the firmware upgrade file from the internet.
2. Extract the firmware upgrade file.
3. Click the Firmware Upgrade button.
4. On the Firmware Upgrade screen, click the **Browse** button to find the firmware upgrade file.



5. Double-click the firmware upgrade file.

6. Click the Upgrade button, and follow the on-screen instructions.

Note: Do not power off the AP or press the Reset button while the firmware is being upgraded.

5. Troubleshooting

Basic Functions

My Wireless AP will not turn on. No LED's light up.

Cause:

- The power is not connected.

Resolution:

- Connect the PoE adapter to your AP and plug it into the power outlet.

Note: Only use the PoE adapter provided with your AP. Using any other adapter may damage your AP.

LAN Connection Problems I can't access my AP.

Cause:

- The unit is not powered on.
- There is not a network connection.
- The computer you are using does not have a compatible IP Address.

Resolution:

- Make sure your AP is powered on.
- Make sure that your computer has a compatible IP Address. Be sure that the IP Address used on your computer is set to the same subnet as the AP. For example, if the AP is set to 192.168.1.250, change the IP address of your computer to 192.168.1.15 or another unique IP Address that corresponds to the 192.168.1.X subnet.

Use the Reset button located on the rear of the AP to revert to the default settings.

I can't connect to other computers on my LAN.

Cause:

- The IP Addresses of the computers are not set correctly.
- Network cables are not connected properly.
- Windows network settings are not set correctly.

Resolution:

- Make sure that each computer has a unique IP Address. And the IP must be in the same subnet as the AP.
- Make sure that the Link LED is on. If it is not, try a different network cable.
- Check each computer for correct network settings.

Wireless Troubleshooting

I can't access the Wireless AP from a wireless network card

Cause:

- Out of range.
- IP Address is not set correctly.

Resolution:

- Make sure that the Mode, SSID, Channel and encryption settings are set the same on each wireless adapter.
- Make sure that your computer is within range and free from any strong electrical devices that may cause interference.
- Check your IP Address to make sure that it is compatible with the Wireless AP.

Limited Warranty

TRENDware warrants its products against defects in material and workmanship, under normal use and service, for the following lengths of time from the date of purchase.

Wireless Products – 3 Years Warranty

If a product does not operate as warranted above during the applicable warranty period, TRENDware shall, at its option and expense, repair the defective product or part, deliver to customer an equivalent product or part to replace the defective item, or refund to customer the purchase price paid for the defective product. All products that are replaced will become the property of TRENDware. Replacement products may be new or reconditioned.

TRENDware shall not be responsible for any software, firmware, information, or memory data of customer contained in, stored on, or integrated with any products returned to TRENDware pursuant to any warranty.

There are no user serviceable parts inside the product. Do not remove or attempt to service the product by any unauthorized service center. This warranty is voided if (i) the product has been modified or repaired by any unauthorized service center, (ii) the product was subject to accident, abuse, or improper use (iii) the product was subject to conditions more severe than those specified in the manual.

Warranty service may be obtained by contacting TRENDware office within the applicable warranty period for a Return Material Authorization (RMA) number, accompanied by a copy of the dated proof of the purchase. Products returned to TRENDware must be pre-authorized by TRENDware with RMA number marked on the outside of the package, and sent prepaid, insured and packaged appropriately for safe shipment.

WARRANTIES EXCLUSIVE: IF THE TRENDWARE PRODUCT DOES NOT OPERATE AS WARRANTED ABOVE, THE CUSTOMER'S SOLE REMEDY SHALL BE, AT TRENDWARE'S OPTION, REPAIR OR REPLACEMENT. THE FOREGOING WARRANTIES AND REMEDIES ARE EXCLUSIVE AND ARE IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, EITHER IN FACT OR BY OPERATION OF LAW, STATUTORY OR OTHERWISE, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. TRENDWARE NEITHER ASSUMES NOR AUTHORIZES ANY OTHER PERSON TO ASSUME FOR IT ANY OTHER LIABILITY IN CONNECTION WITH THE SALE, INSTALLATION MAINTENANCE OR USE OF TRENDWARE'S PRODUCTS.

TRENDWARE SHALL NOT BE LIABLE UNDER THIS WARRANTY IF ITS TESTING AND EXAMINATION DISCLOSE THAT THE ALLEGED DEFECT IN THE PRODUCT DOES NOT EXIST OR WAS CAUSED BY CUSTOMER'S OR ANY THIRD PERSON'S MISUSE, NEGLIGENCE, IMPROPER INSTALLATION OR TESTING, UNAUTHORIZED ATTEMPTS TO REPAIR OR MODIFY, OR ANY OTHER CAUSE BEYOND THE RANGE OF THE INTENDED USE, OR BY ACCIDENT, FIRE, LIGHTNING, OR OTHER HAZARD.

LIMITATION OF LIABILITY: TO THE FULL EXTENT ALLOWED BY LAW TRENDWARE ALSO EXCLUDES FOR ITSELF AND ITS SUPPLIERS ANY LIABILITY, WHETHER BASED IN CONTRACT OR TORT (INCLUDING NEGLIGENCE), FOR INCIDENTAL, CONSEQUENTIAL, INDIRECT, SPECIAL, OR PUNITIVE DAMAGES OF ANY KIND, OR FOR LOSS OF REVENUE OR PROFITS, LOSS OF BUSINESS, LOSS OF INFORMATION OR DATA, OR OTHER FINANCIAL LOSS ARISING OUT OF OR IN CONNECTION WITH THE SALE, INSTALLATION, MAINTENANCE, USE, PERFORMANCE, FAILURE, OR INTERRUPTION OF THE POSSIBILITY OF SUCH DAMAGES, AND LIMITS ITS LIABILITY TO REPAIR, REPLACEMENT, OR REFUND OF THE PURCHASE PRICE PAID, AT TRENDWARE'S OPTION. THIS DISCLAIMER OF LIABILITY FOR DAMAGES WILL NOT BE AFFECTED IF ANY REMEDY PROVIDED HEREIN SHALL FAIL OF ITS ESSENTIAL PURPOSE.

Governing Law: This Limited Warranty shall be governed by the laws of the state of California.

Technical Support

You can find the most recent driver/firmware/software and user documentations on the **TRENDware website**. TRENDware provides **FREE technical support** for all customers for the duration of the warranty period on this product.

TRENDware Technical Support

Tel: +1-310-626-6252

Fax: +1-310-626-6267

E-mail: support@trendware.com

www.TRENDnet.com

Monday ~ Friday, 7:30AM ~ 6:00PM Pacific Standard Time
(Except holidays)



Product Warranty Registration

Please take a moment to register your product online.
Go to TRENDware's website at <http://www.TRENDNET.com>

TRENDware International, Inc.
3135 Kashiwa Street
Torrance, CA 90505

<http://www.TRENDNET.com>

Copyright ©2004. All Rights Reserved. TRENDware International, Inc.