


RT-N600 Quick Start Guide

Fast. Easy. Setup!


ASUS
 IN SEARCH OF INCREDIBLE

1 Prepare your Modem

Unplug your cable/DSL modem. If it has a battery backup, remove the battery. **1**

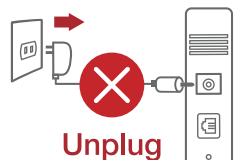


Connect your modem to the router with the network cable provided.

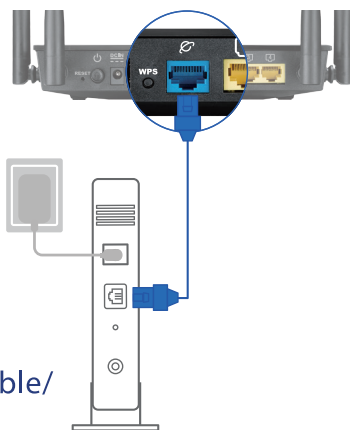

Power on your cable/DSL modem.


Check your cable/DSL modem LED lights to ensure the connection is active.

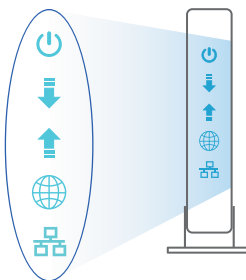


1 If you are using DSL for internet, you will need your username/password from your Internet service provider (ISP) to properly configure your router.

2 Power on your Router

Plug in the power adapter and press the power button at the back of your router.

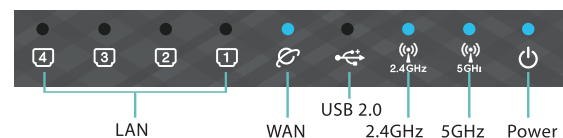

Check the WAN and 2.4G / 5G LED lights to ensure the hardware connection is ready (see the picture above).

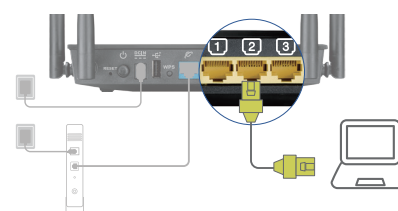


Connect your PC

to the router via Wi-Fi or using an additional network cable (not included). **Wi-Fi information sticker below.**

3 Login and Connect



Open a web browser. You will be redirected to the ASUS Setup Wizard. If not, navigate to <http://router.asus.com>

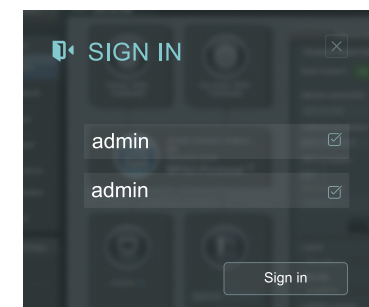

Login using 'admin' as both user name and password. Follow the wizard to complete setup. Then you're connected! (For more help please refer to the user manual).

Security

We recommend changing your password for increased security. Reboot the router after changing default settings.

Router	Login Name	
	Password	
2.4 GHz	Network Name(SSID)	
	Password	
5 GHz	Network Name(SSID)	
	Password	