

**D-Link®**

ADSL2/2+ MODEM ROUTER  
DSL-502T

**QUICK  
INSTALLATION  
GUIDE**

A large, light gray watermark of the D-Link logo is positioned diagonally across the page, behind the main text. The logo consists of a stylized 'D' with a white triangle inside it.

# CONTENTS OF PACKAGING

## CONTENTS



### INSTALLATION CD

INCLUDES SET-UP WIZARD & TECHNICAL MANUALS



### ADSL2/2+ MODEM ROUTER

DSL-502T



### 12V 1.25A POWER ADAPTER

ADAPTER



### ETHERNET CABLE (RJ-45 CABLE)

CONNECT THE ROUTER TO YOUR PC DURING SET-UP



### USB CABLE



If any of these items are missing from your packaging contact your reseller

# PRODUCT SET-UP

## CD SET-UP WIZARD



### SET-UP WIZARD CD

The CD contains all of the instructions required to set-up DSL-502T



### INSERT CD

Insert the CD into the CD drive of your computer. The set-up wizard should start automatically. Make sure that your internet connection is active. (Do not plug in DSL-502T yet)



### SET-UP WIZARD

Select your language from the list of options and follow the steps within the wizard to complete the set-up of DSL-502T

## ADVANCED SET-UP [ACCESS VIA IP ADDRESS]

To configure DSL-502T manually (without the set-up CD) connect your computer to the DSL-502T using the ethernet cable provided. Then connect the power cable on the DSL-502T. The power light will display as solid green.

Then simply open a browser window and enter the IP address in the browser address field:

IP ADDRESS: <http://10.1.1.1>

USERNAME: admin

PASSWORD: admin

# TROUBLESHOOTING

## SET-UP AND CONFIGURATION PROBLEMS

### 1. HOW DO I CONFIGURE MY DSL-502T ROUTER WITHOUT THE CD?

- Connect your PC to the router using an Ethernet cable.
- Open a web browser and enter the address <http://10.1.1.1>
- The default username is admin. The default password is admin.
- If you have changed the password and can not remember it, you will need to reset the router to set the password back to admin.

### 2. HOW DO I RESET MY DSL-502T ROUTER TO FACTORY DEFAULT SETTINGS?

- Ensure the router is powered on.
  - Press and hold the reset button on the rear of the device for 10 seconds.
- Note: Resetting the router to factory default will erase the current configuration settings. To re-configure your settings, log into the router as outlined in question 1, then run the Setup Wizard.

### 3. WHY CAN I NOT GET AN INTERNET CONNECTION?

For ADSL users please contact your ISP to make sure the service has been enabled/connected by your ISP and that your ISP username and password is correct.

## TECHNICAL SUPPORT

### **Australia:**

Tel: 1300-766-868  
24/7(24Hrs, 7days a week) technical support  
<http://www.dlink.com.au>  
e-mail: [support@dlink.com.au](mailto:support@dlink.com.au)

### **New Zealand:**

Tel: 0800-900-900  
24/7(24Hrs, 7days a week) technical support  
<http://www.dlink.co.nz>  
e-mail: [support@dlink.co.nz](mailto:support@dlink.co.nz)

## NOTES

## NOTES

## NOTES

