



# User Manual

**Wireless AC1900 Dual-Band Gigabit ADSL2+ Modem Router**

DSL-3590L

---

# Preface

D-Link reserves the right to revise this publication and to make changes in the content hereof without obligation to notify any person or organization of such revisions or changes.

## Manual Revisions

Revision	Date	Description
1.00	November 17, 2014	• Initial release for hardware revision B1

## Trademarks

D-Link and the D-Link logo are trademarks or registered trademarks of D-Link Corporation or its subsidiaries in the United States or other countries. All other company or product names mentioned herein are trademarks or registered trademarks of their respective companies.

Copyright © 2014 by D-Link Corporation.

All rights reserved. This publication may not be reproduced, in whole or in part, without prior expressed written permission from D-Link Corporation.

## Power Usage

This device is an Energy Related Product (ErP) with High Network Availability (HiNA), and automatically switches to a power-saving Network Standby mode within 1 minute of no packets being transmitted. It can also be turned off through a power switch to save energy when it is not needed.

**Network Standby:** 11.57 watts

**Switched Off:** 0.207 watts

# Table of Contents

<b>Product Overview .....</b>	<b>1</b>	Main Menu .....	41
Package Contents.....	1	Documents.....	42
System Requirements .....	2	Pictures.....	44
Introduction .....	3	Videos .....	46
Features.....	4	Music.....	48
Hardware Overview.....	5	Folders .....	51
LEDs .....	5	Favorites.....	55
Back View.....	6	Using SharePort Web Access .....	56
<b>Installation .....</b>	<b>7</b>	Music.....	58
Before you Begin.....	7	Pictures.....	59
Wireless Installation Considerations.....	8	Videos .....	60
Manual Setup.....	9	Documents.....	61
<b>Getting Started .....</b>	<b>11</b>	<b>Configuration.....</b>	<b>62</b>
Setup Wizard .....	12	Home .....	63
mydlink™ SharePort.....	17	Internet.....	63
Using the mydlink™ SharePort app for iPad®,		DSL-3590L.....	64
iPhone®, and iPod touch® .....	17	Connected Clients .....	65
Main Menu .....	22	USB Device .....	66
Documents.....	23	Settings .....	67
Pictures.....	25	Wizard .....	67
Videos .....	27	Internet.....	67
Music .....	29	IPv6 .....	74
Folders .....	32	ATM.....	88
Favorites.....	35	DSL .....	89
Using the mydlink™ SharePort app for Android™ ...	36	Wireless .....	90
		Guest Zone .....	92

Network.....	93	WPA/WPA2 .....	118
SharePort .....	95	Windows® 7.....	120
Create User .....	96	WPA/WPA2 .....	120
mydlink.....	97	WPS.....	123
Features.....	98	Windows Vista® .....	127
QoS Engine.....	98	WPA/WPA2 .....	128
Firewall Settings.....	99	Windows® XP.....	130
IPv4/IPv6 Rules .....	101	WPA/WPA2 .....	131
Port Forwarding .....	102	<b>Troubleshooting .....</b>	<b>133</b>
Virtual Server .....	103	<b>Wireless Basics .....</b>	<b>137</b>
Website Filter.....	104	What is Wireless?.....	138
Static Routes.....	105	Tips.....	140
IPv6 .....	106	Wireless Modes.....	141
Dynamic DNS .....	107	<b>Networking Basics .....</b>	<b>142</b>
IPv6 Host .....	108	Check your IP address.....	142
Management.....	109	Statically Assign an IP address .....	143
Time & Schedule .....	109	Wireless Security .....	144
Time .....	109	What is WPA? .....	144
Schedule .....	110	<b>Technical Specifications .....</b>	<b>145</b>
System Log.....	111		
Admin .....	112		
System .....	114		
Upgrade .....	115		
Statistics .....	116		
<b>Connect a Wireless Client to your Router .....</b>	<b>117</b>		
WPS Button.....	117		
Windows® 8.....	118		




# Package Contents



DSL-3590L  
Wireless AC1900 Dual-Band Gigabit  
ADSL2+ Modem Router



DSL Phone Cable

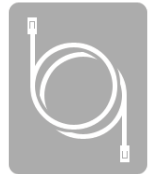

Ethernet Cable



Power Adapter



CD-ROM



Wi-Fi Configuration Card

If any of the above items are missing, please contact your reseller.

**Note:** Using a power supply with a different voltage rating than the one included with the DSL-3590L will cause damage and void the warranty for this product.

# System Requirements

<p><b>Network Requirements</b></p>	<ul style="list-style-type: none"> <li>• A DSL Internet connection</li> <li>• 802.11ac, n, g, b, or a wireless or Ethernet port</li> </ul>
<p><b>Web-based Configuration Utility Requirements</b></p>	<p><b>Computer with the following:</b></p> <ul style="list-style-type: none"> <li>• Windows®, Macintosh, or Linux-based operating system</li> <li>• An installed Ethernet adapter</li> </ul> <p><b>Browser Requirements:</b></p> <ul style="list-style-type: none"> <li>• Internet Explorer 8 or higher</li> <li>• Firefox 12 or higher</li> <li>• Safari 4 or higher</li> <li>• Chrome 20 or higher</li> </ul> <p><b>Windows® Users:</b> Make sure you have the latest version of Java installed. Visit <a href="http://www.java.com">www.java.com</a> to download the latest version.</p>
<p><b>mydlink Requirements</b></p>	<ul style="list-style-type: none"> <li>• iPhone/iPad/iPod touch (iOS 6.0 or higher)</li> <li>• Android device (2.3.3 or higher)</li> <li>• Computer with the following browser requirements:             <ul style="list-style-type: none"> <li>• Internet Explorer 8 or higher</li> <li>• Firefox 12 or higher</li> <li>• Safari 4 or higher</li> <li>• Chrome 20 or higher</li> </ul> </li> </ul> <p><small>iPhone, iPad, and iPod touch are registered trademarks of Apple Inc. Android is a trademark of Google, Inc.</small></p>

# Introduction

The D-Link DSL-3590L Wireless AC1900 Dual-Band Gigabit ADSL2+ Modem Router shares your DSL Internet connection over a blazing-fast Wireless AC connection. It also comes equipped with four Gigabit ports to provide speeds up to 10x faster than standard 10/100 ports. With the addition of Quality of Service (QoS), you can organize and prioritize separate data streams for your network traffic so your video streaming, gaming, and VoIP calls run smoother over both your wired and wireless network.

The Wireless AC1900 Dual-Band Gigabit ADSL2+ Modem Router is also mydlink-enabled, which gives you access to your home network no matter where you go. Now you can monitor and manage your home network right from your laptop, iPhone®, iPad®, or Android™ device. mydlink-enabled routers can be configured to send an email to keep you informed anywhere, anytime when new devices are connecting to your network or unwanted access is detected. Monitor in real-time websites that are being visited with recent browser history displayed on the mydlink™ Lite app – which is great for parents.

SharePort technology lets you take advantage of the USB port found on the back of your DSL-3590L. Plug in a USB storage drive and you can use the mydlink™ SharePort app for iPad®, iPhone®, iPod touch®, and Android™ device to access files, stream videos, view photos, or listen to music on your laptop or mobile devices.

The DSL-3590L Wireless AC1900 Dual-Band Gigabit ADSL2+ Modem Router provides incredible wireless speeds, fast Gigabit Ethernet ports, cloud features, and terrific security features. Its compact design stays out of your way, and installation is easy and fast.


# Features

- **Faster Wireless Networking** - The DSL-3590L Wireless AC technology provides a wireless connection with speeds of up to 1900 Mbps\* with concurrent 801.11ac and 802.11n wireless clients . It also operates on both the 2.4 GHz and 5 GHz bands to allow separation of traffic so users can participate in high-bandwidth activities, such as video streaming, online gaming, and real-time audio, without affecting low-priority traffic like email and web surfing.
- **mydlink™ SharePort** - The mydlink™ SharePort app can be used to share files, stream videos, view photos, and play music with all your devices.
- **Compatible with 802.11n/g/b/a Devices** - The DSL-3590L is still fully compatible with IEEE 802.11n, 802.11g and 802.11a standards, so it can connect with existing 802.11n, 802.11g, 802.11b, and 802.11a wireless devices.
- **Advanced Firewall Features** - The web-based user interface displays a number of advanced network management features including:
  - **Content Filtering** - Easily applied content filtering based on MAC address, URL, and/or domain name.
  - **Filter Scheduling** - These filters can be scheduled to be active on certain days, or for a duration of hours or minutes.
  - **Secure Multiple/Concurrent Sessions** - The DSL-3590L can pass through VPN sessions. It supports multiple and concurrent IPsec and PPTP sessions, so users behind the DSL-3590L can securely access corporate networks.
- **User-friendly Setup Wizard** - Through its easy-to-use web-based user interface, the DSL-3590L lets you control what information is accessible to those on the wireless network, whether from the Internet, or from your company's server. Configure your router to your specific settings within minutes.

\* Maximum wireless signal rate derived from IEEE Standard 802.11a, 802.11b, 802.11g, 802.11n, and 802.11ac specifications. Actual data throughput will vary. Network conditions and environmental factors, including volume of network traffic, building materials and construction, and network overhead, lower actual data throughput rate. Environmental conditions will adversely affect wireless signal range.


# Hardware Overview

## LEDs

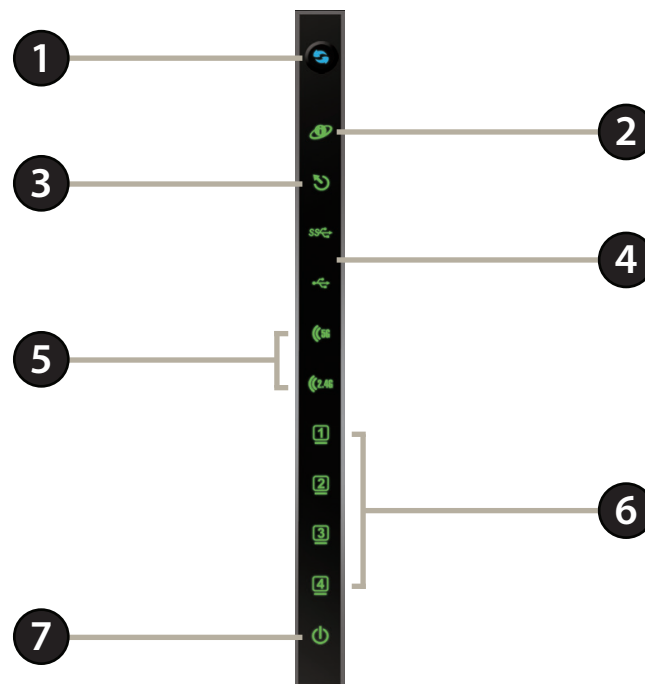

1	<b>WPS Button &amp; LED</b>	The light will blink during the WPS process.
2	<b>Internet LED</b>	A solid green light indicates a proper connection to your broadband service.
3	<b>ADSL LED</b>	A solid green light indicates a proper connection to the ADSL enabled telephone line.
4	<b>USB 3.0 &amp; 2.0 LEDs</b>	A solid green light indicates a connection to a USB device.
5	<b>Wireless LEDs (2.4 GHz &amp; 5 GHz)</b>	A solid green light indicates that the wireless segment is ready. The light will blink during data transmission.
6	<b>LAN (1-4) LEDs</b>	A solid green light indicates a connection to a Gigabit Ethernet device while an amber light indicates a connection to a 10/100 device. The LED will blink during data transmission.
7	<b>Power LED</b>	A solid green light indicates a proper connection to the power supply.

## Back View

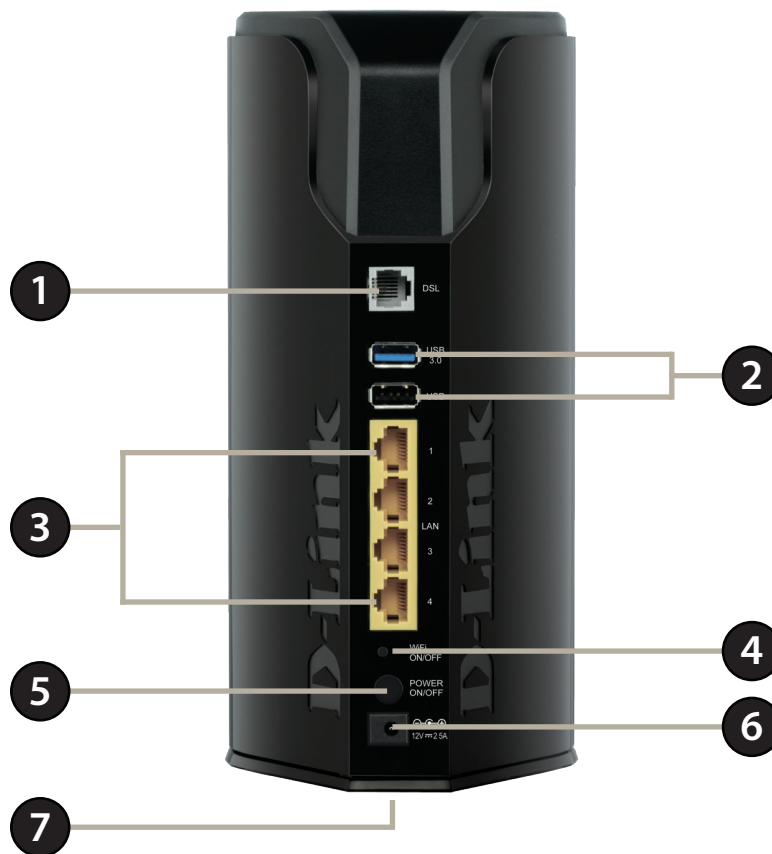

<b>1</b>	<b>ADSL Port</b>	Connect to an ADSL enabled telephone line.
<b>2</b>	<b>USB 3.0 &amp; 2.0 Ports</b>	Connect USB devices such as printers, scanners or storage.
<b>3</b>	<b>LAN (1-4) Ports</b>	Connect Ethernet devices such as computers, switches, and game consoles.
<b>4</b>	<b>Wi-Fi Button</b>	Press for three seconds to enable/disable wireless networks.
<b>5</b>	<b>Power Button</b>	Press to power the device on and off.
<b>6</b>	<b>Power Input</b>	Connect the supplied power adapter.
<b>7</b>	<b>Reset Button</b>	Insert a paperclip in the hole and wait ten seconds to reset the router to default settings.

# Installation

This section will walk you through the installation process. Placement of the router is very important. Do not place the router in an enclosed area such as a closet, cabinet, or in the attic or garage.

## Before you Begin

- Please configure the router with the computer that was last connected directly to your modem.
- You can only use the Ethernet port on your modem. If you were using the USB connection before using the router, then you must turn off your modem, disconnect the USB cable and connect an Ethernet cable to the Internet port on the router, and then turn the modem back on. In some cases, you may need to call your ISP to change connection types (USB to Ethernet).
- If you have DSL and are connecting via PPPoE, make sure you disable or uninstall any PPPoE software such as WinPoET, BroadJump, or EnterNet 300 from your computer or you will not be able to connect to the Internet.

# Wireless Installation Considerations


The D-Link wireless router lets you access your network using a wireless connection from virtually anywhere within the operating range of your wireless network. Keep in mind that the number, thickness and location of walls, ceilings, or other objects that the wireless signals must pass through may limit the range. Typical ranges vary depending on the types of materials and background RF (radio frequency) noise in your home or business. The key to maximizing wireless range is to follow these basic guidelines:

1. Keep the number of walls and ceilings between the D-Link router and other network devices to a minimum - each wall or ceiling can reduce your adapter's range from 3-90 feet (1-30 meters.) Position your devices so that the number of walls or ceilings is minimized.
2. Be aware of the direct line between network devices. A wall that is 1.5 feet thick (0.5 meters), at a 45-degree angle appears to be almost 3 feet (1 meter) thick. At a 2-degree angle it looks over 42 feet (14 meters) thick! Position devices so that the signal will travel straight through a wall or ceiling (instead of at an angle) for better reception.
3. Building materials make a difference. A solid metal door or aluminum studs may have a negative effect on range. Try to position access points, wireless routers, and computers so that the signal passes through drywall or open doorways. Materials and objects such as glass, steel, metal, walls with insulation, water (fish tanks), mirrors, file cabinets, brick, and concrete will degrade your wireless signal.
4. Keep your product away (at least 3-6 feet or 1-2 meters) from electrical devices or appliances that generate RF noise.
5. If you are using 2.4 GHz cordless phones or X-10 (wireless products such as ceiling fans, lights, and home security systems), your wireless connection may degrade dramatically or drop completely. Make sure your 2.4 GHz phone base is as far away from your wireless devices as possible. The base transmits a signal even if the phone is not in use.




# Manual Setup


1. Position your router close to your DSL wall jack and a computer. Place the router in an open area of your intended work area for better wireless coverage.
2. Plug one end of the supplied Ethernet cable into the LAN port on your computer, and one end into the LAN port labeled **1** on the back of your router. The router is now connected to your computer.

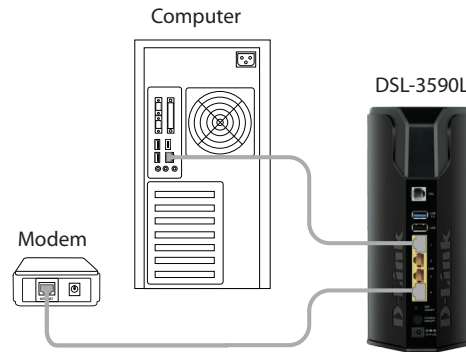

3. Plug one end of the supplied DSL cable that came with your router into the port labeled **DSL** on the back of the router. Plug the other end of this cable into the DSL phone jack in the wall.

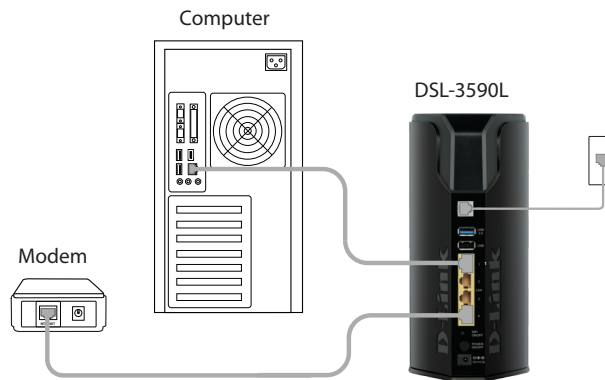

4. Connect the supplied power adapter into the power receptor on the back of the router and then plug it into a power outlet or surge protector. Press the power button and verify that the power LED is lit. Allow 1 minute for the router to boot up.

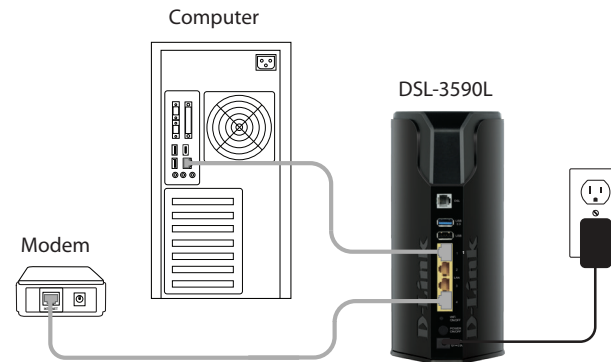

5. If you are connecting to a broadband service, you may be online already and further configuration will be optional.


# Getting Started

There are two different ways you can configure your router to connect to the Internet and connect to your clients:

- **D-Link Setup Wizard** - This wizard will launch when you log into the router for the first time. Refer to **Setup Wizard** on page 12.
- **Manual Setup** - Log into the router and manually configure your router. Refer to **Configuration** on page 62


# Setup Wizard

If this is your first time installing the router, open your web browser and enter **http://dlinkrouter.local/** in the address bar. Alternatively, enter the IP address of the router (default: **http://192.168.1.1**). Please refer to **Configuration** on page 62.




The wizard is designed to guide you through a step-by-step process to configure your new D-Link router and connect to the Internet.

Click **Next** to continue.

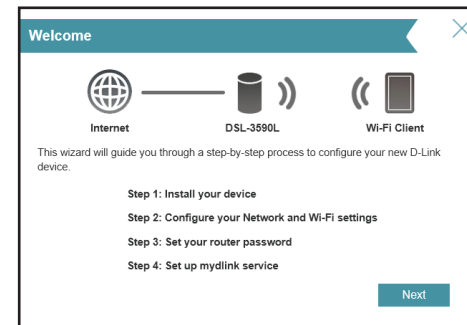


Ensure that your DSL phone cable is connected to both the router and the wall jack.

Click **Next** to continue.

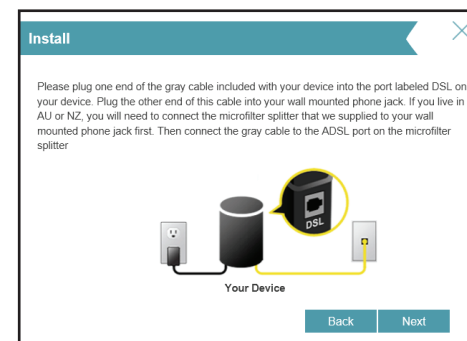


If the router does not detect a valid Internet connection, a list of connection types to choose from will be displayed.

Select your Internet connection type (this information can be obtained from your Internet service provider) and click **Next** to continue.

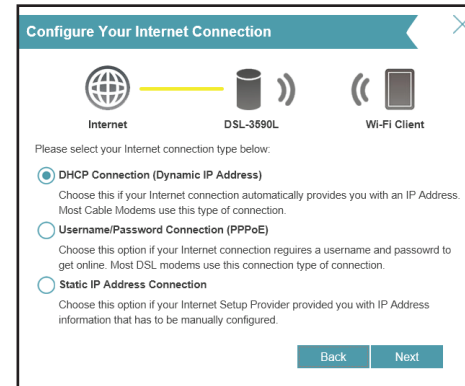


If the router detected or you selected **PPPoE**, enter your PPPoE username and password and click **Next** to continue.

**Note:** Make sure to remove your PPPoE software from your computer. The software is no longer needed and will not work through a router.

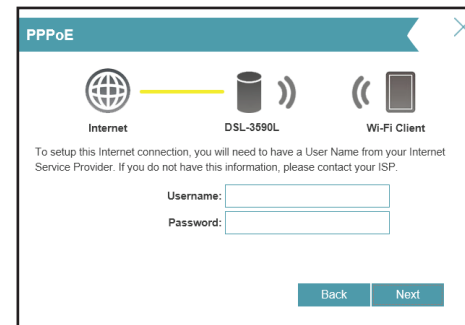

If the router detected or you selected **Static**, enter the IP and DNS settings supplied by your ISP. Click **Next** to continue.

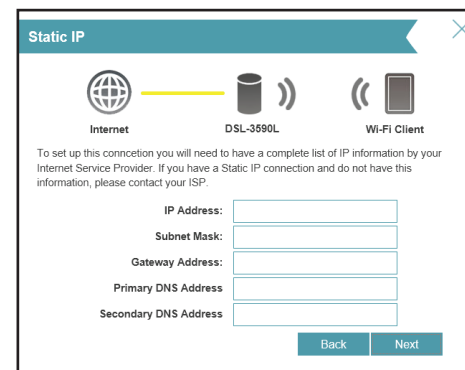




For both the 2.4 GHz and 5 GHz segments, create a Wi-Fi network name (SSID) using up to 32 characters.

Create a Wi-Fi password (between 8-63 characters). Your wireless clients will need to have this passphrase or key entered to be able to connect to your wireless network.

Click **Next** to continue.

In order to secure the router, please enter a new password. You will be prompted for this password every time you want to use the router's web configuration utility. Click **Next** to continue.

The Summary window will display your settings. Click **Next** if you are satisfied, or click **Back** to make changes to them.

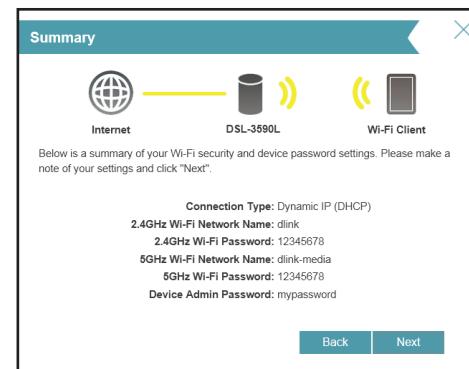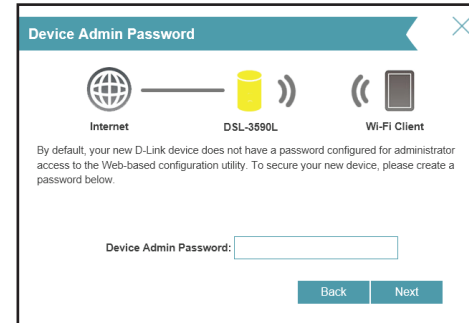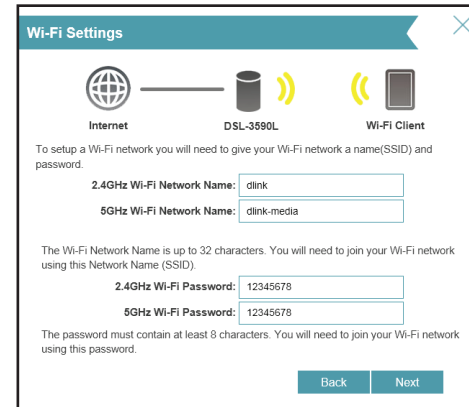


To use the mydlink service (**www.mydlink.com** or the mydlink Lite app), you must have an account. Select **Yes** if you have a mydlink account already, or **No** if you want to create one. Click **Next** to continue.

If you do not want to register at this time, click **Skip**.


If you clicked **Yes**, enter your mydlink account name (email address) and password. Click **Next** to register your mydlink account with the router.

If you clicked **No**, fill out the requested information and click **Next** to create your mydlink account.

At the end of the wizard, you will be presented with a final summary of your settings. Click **Finish** to close the wizard.

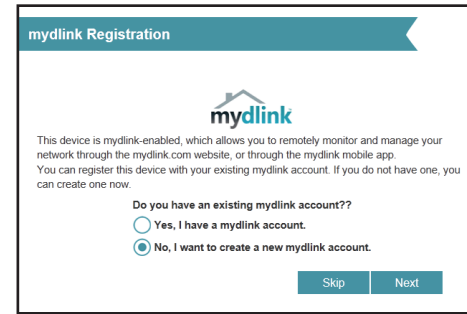

mydlink Registration




This device is mydlink-enabled, which allows you to remotely monitor and manage your network through the mydlink.com website, or through the mydlink mobile app. You can register this device with your existing mydlink account. If you do not have one, you can create one now.

Do you have an existing mydlink account??


Yes, I have a mydlink account.

No, I want to create a new mydlink account.

Skip Next

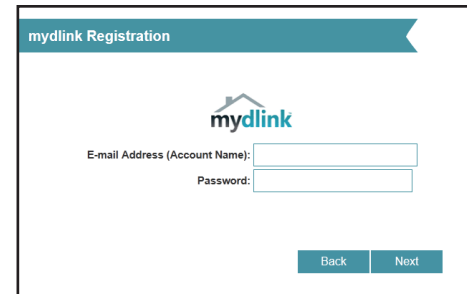


mydlink Registration




E-mail Address (Account Name):

Password:

Back Next

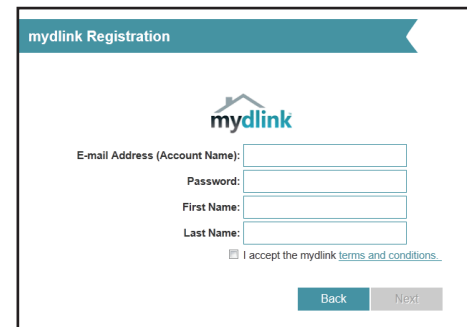

mydlink Registration



E-mail Address (Account Name):


Password:

First Name:

Last Name:



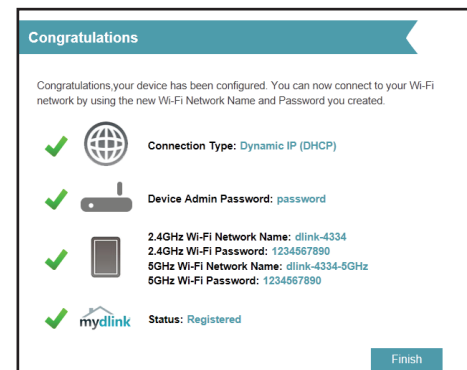

I accept the mydlink [terms and conditions](#).

Back Next



Congratulations


Congratulations, your device has been configured. You can now connect to your Wi-Fi network by using the new Wi-Fi Network Name and Password you created.

-  **Connection Type:** Dynamic IP (DHCP)
-  **Device Admin Password:** password
-  **2.4GHz Wi-Fi Network Name:** dlink-4334  
**2.4GHz Wi-Fi Password:** 1234567890  
**5GHz Wi-Fi Network Name:** dlink-4334-5GHz  
**5GHz Wi-Fi Password:** 1234567890
-  **Status:** Registered

Finish

The mydlink Lite app will allow you to receive notices, browse network users, and configure your router from an iPhone/iPad/iPod touch (iOS 3.0 or higher), or Android device (1.6 or higher).

To download the "mydlink Lite" app, visit the App Store, Google Play or <http://www.mydlink.com/apps>.

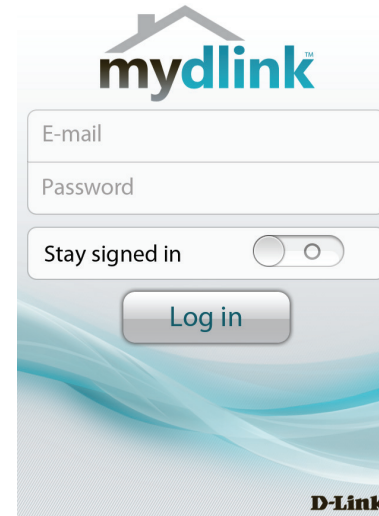

PC and Mac users can use the mydlink portal at <http://mydlink.com>.





# mydlink™ SharePort

## Using the mydlink™ SharePort app for iPad®, iPhone®, and iPod touch®

The mydlink SharePort app is a streamlined mobile application that allows you to conveniently stream media and share files stored on a removable storage connected to your router. Once the router is set up, you can start the app and easily connect from a local network or through the Internet to access your photos, videos, music, and documents. It allows you to create your own personal cloud storage; you can upload files and photos from your mobile device to the removable storage via the app from anywhere in the world!


**Note:** In order to ensure smooth streaming performance, you will need a minimum of 2 Mbit/s upload bandwidth for your router's Internet connection. Streaming performance will vary depending on the quality of your Internet connection.

### Using mydlink SharePort remotely from the Internet:

1. Make sure the device is powered on. Then plug your USB drive into the USB port of the device.

**Note:** If you connect a removable storage with many files or a large capacity, it may take a while for the router to scan and catalog your files.

2. If you are connecting remotely through the mydlink SharePort app from the Internet, you will need a **mydlink** account. Please refer to **mydlink** on page 97 for more details.

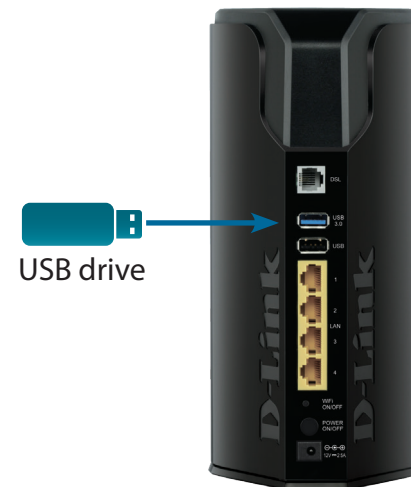

3. Use your iPhone, iPad or iPod touch to search for and download the free **mydlink SharePort** app from the App Store.



If you have a QR code reader, you can scan the code for **mydlink SharePort** to the right.



4. Tap the **mydlink SharePort** icon, and the app will load.



5. Tap **Set up** to go to Settings and enter the Admin password and your mydlink Account Login information when the pop-up displays. Tap **Done** when your information is entered. (The Admin password is only for local access, if you can connect through the Internet, then you can leave the Admin password blank)

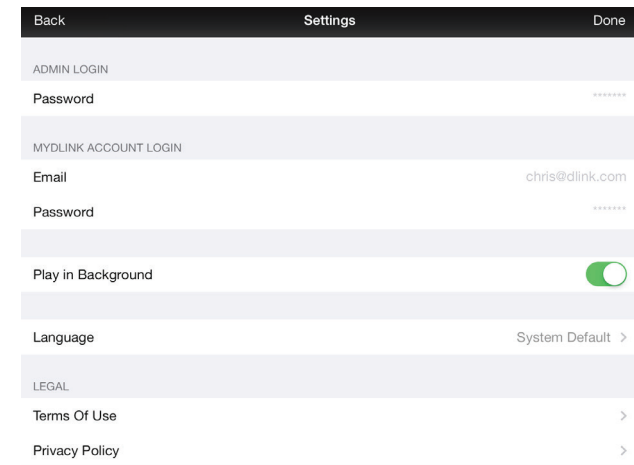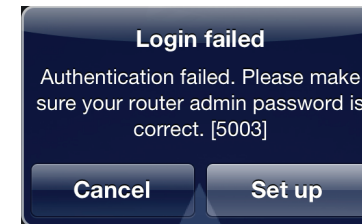

6. You can now use the mydlink SharePort app interface to stream media and access files stored on your removable drive. The wireless icon at the bottom will be lit green to indicate you are connected to the router through Remote Access. If you need to change your settings, tap the gear icon at the top right corner to enter the settings page.

7. If you have more than one device registered to your mydlink account, you can tap **Device List** (in the top-left corner) and you will be prompted to select the device you wish to use.



**Note:** If you see a red wireless icon, your router's network environment may not be suitable for a direct network connection and you may experience slow network speeds.

### Using mydlink SharePort in a local network:

1. Make sure the device is powered on. Then plug your USB drive into the USB port of the device.

**Note:** If you connect a removable storage with many files or a large capacity, it may take a while for the router to scan and catalog your files.

2. Use your iPhone, iPad or iPod touch to search for and download the free **mydlink SharePort** app from the App Store.


If you have a QR code reader, you can scan the code for **mydlink SharePort** to the right.

3. On your mobile device, go to your Wi-Fi settings and connect to your router's wireless network using the default Wi-Fi settings. Locate the Wi-Fi name (SSID) and password for your device as printed on the included Wi-Fi Configuration Card.


4. Tap the **mydlink SharePort** icon, and the app will load.



5. Tap **Set up** to enter the Admin password for your router when the pop-up displays.

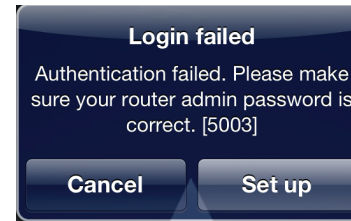

6. Enter your Admin Login in the Password field and tap **Done**.

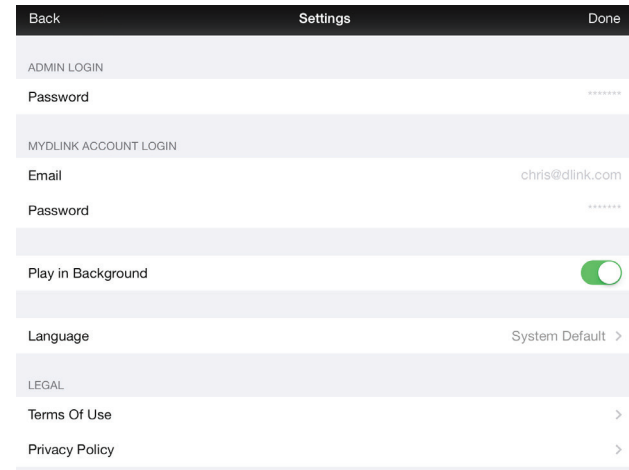

7. You can now use the mydlink SharePort app interface to stream media and access files stored on your removable drive. The wireless icon at the bottom will be lit blue to indicate a Local Access connection. If you need to change your settings, tap the gear icon at the top right corner to enter the settings page.



**Note:** If you see a red wireless icon, your router's network environment may not be suitable for a direct network connection and you may experience slow network speeds.

## Main Menu

The mydlink SharePort main menu has different sections that let you see all the documents, photos, movies, or music stored on your removable storage. Tap < or >, or swipe left or right to move between the different sections. The Wi-Fi icon at the bottom indicates an active local network connection (blue) or remote connection (green/red). Tap the gear icon if it is not lit.




Tap on the document icon to view documents.



Tap the camera icon to view photos.




Tap on the movie icon to play videos.

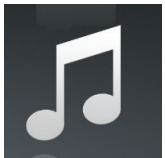

Tap on the music icon to play audio files.



Tap on the folder icon to browse all files in a folder view.

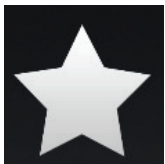


Tap on the star icon to access your favorite files.





# Documents

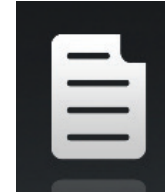
The Documents section allows you to share, print, and view documents streamed from your DSL-3590L to your mobile device. Tap the document icon on the main menu to browse the documents on your mobile device.



**Search Bar:** Enter a filename here to search your storage.


 Tap to mark files for deletion.


 Tap the star icon next to each file to download it to your device and add it into your Favorites section.


 Tapping this icon gives you additional options:


- **Open In....:** Tap to use a third-party app to open the file.

The bottom menu bar includes these options:

 Tap to go back to the main menu.


 Tap to update the list of files.

 Tap to reorder the files alphabetically.

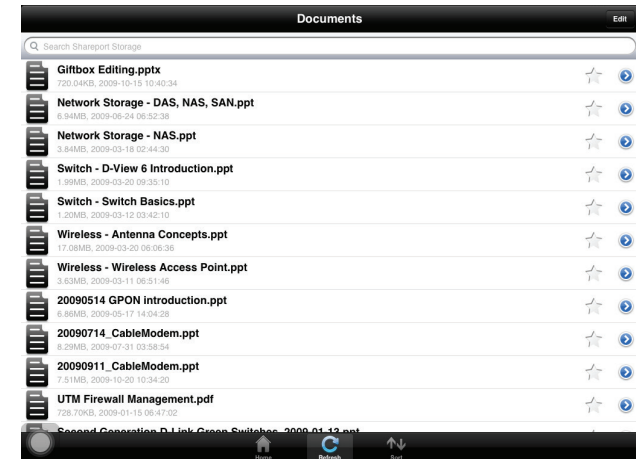


Tap on a file to start the document viewer. In the viewer:

 Tap to add/remove the file from your Favorites.

 Tap to bring up the same options as >.


**Note:** Some files may require a third-party app to view them.

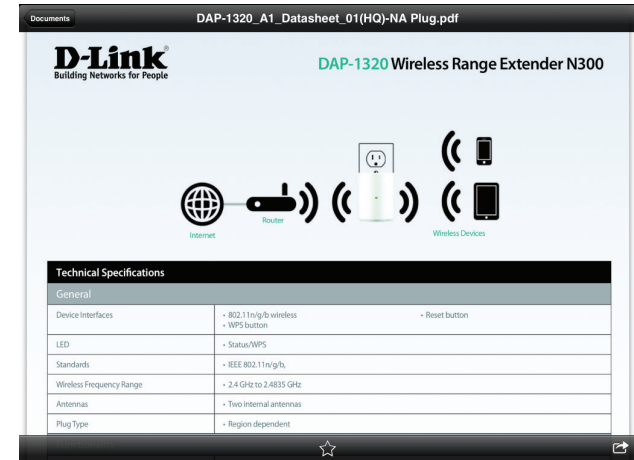





# Pictures

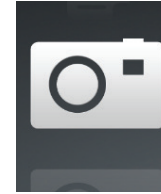
The Pictures section allows you to stream images from your DSL-3590L to your mobile device. Tap the camera icon on the main menu to browse your photo collection on your removable storage.



**Search Bar:** Enter a filename here to search your storage.

 Tap to mark files for deletion.


 Tap the star icon next to each file to download it to your device and add it into your Favorites section.

 Tapping this icon gives you additional options:


- **Open In...:** Tap to use a third-party app to open the file.


The bottom menu bar includes these options:

 Tap to go back to the main menu.




 Tap to start a slideshow of your photos. Tap the screen again to bring up the menu.


 Tap to update the list of files.

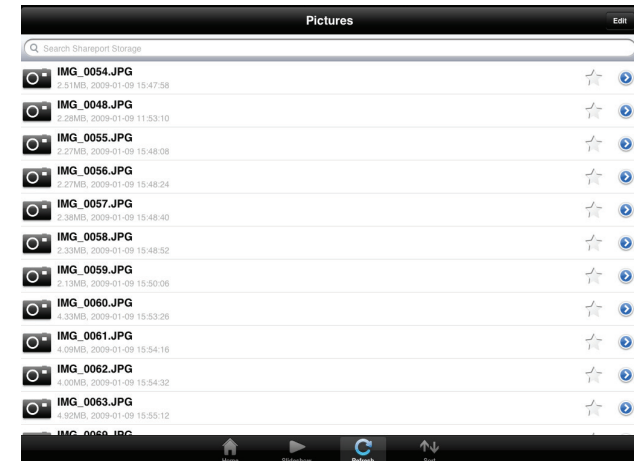 Tap to reorder the files alphabetically.



Tap on a file to start the photo viewer. In the viewer:

-  Tap to add/remove the current image from your Favorites.
-  Tap to start the slideshow.
-  Tap to bring up the same options as >.

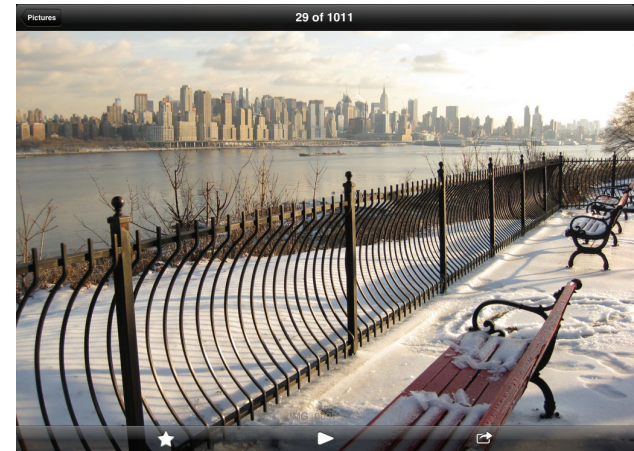




# Videos




The Videos section allows you to stream video clips and movies from your DSL-3590L to your mobile device. Tap the movie icon on the main menu to browse your videos on your removable storage.




**Search Bar:** Enter a filename here to search for a specific file.


-  Tap to mark files for deletion.
-  Tap the star icon next to a file to download it to your device and add it into your Favorites section.
-  Tapping this icon gives you additional options:
  - **Open In...:** Lets you use a third-party app to open the file.


The bottom menu bar includes these options:

-  Tap to go back to the main menu.
-  Tap to update the list of files.
-  Tap to reorder the files alphabetically.

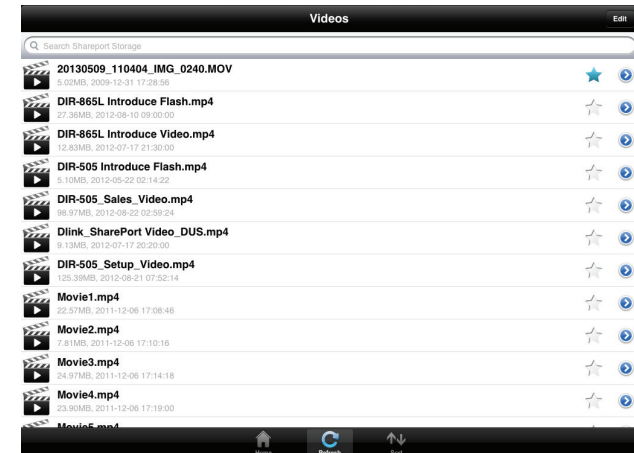


Tap on a file to start playing it. In the player:

 Tap to play/pause the video. You can scroll to any time on the time line by holding and sliding your finger.

 Tap to enter/exit fullscreen mode.


 Tap to add/remove the file from your Favorites.

 Tapping this icon gives you additional options:  
• **Open In...**: Lets you use a third-party app to open the file.




# Music


The Music section allows you to stream songs from your DSL-3590L to your mobile device. Tap the music icon on the main menu to browse your music collection on your removable storage.

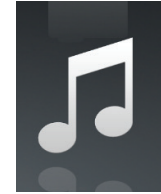


**Search Bar:** Enter a filename here to search your storage.

 Tap to create a playlist and mark files for deletion.

 Tap the star icon next to each file to download it to your device and add it into your Favorites section.


 Tapping this icon gives you additional options:


- **Open In...:** Lets you use a third-party app to open the file.

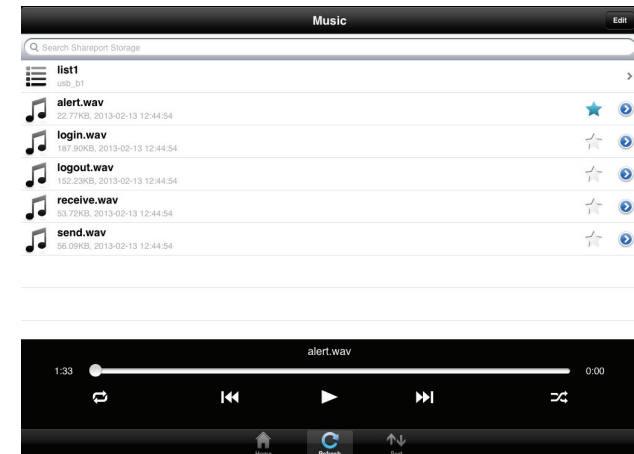



The bottom menu bar includes these options:



 Tap to go back to the main menu.

 Tap to update the list of files.


 Tap to reorder the files alphabetically.

Tap on a file to start playing it. In the player:

  Tap to repeat all. Tap again to repeat a single song.

  Tap to skip to the previous/next song.



 Tap to enable/disable shuffle mode.

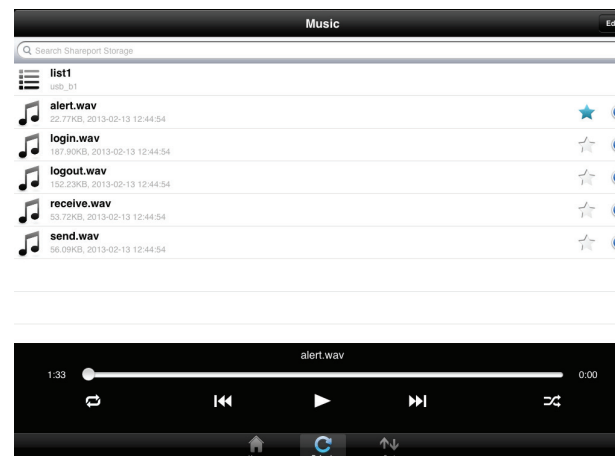

To create a playlist:

- Tap **Edit** > **Add Playlist**.
- Enter a name for the playlist, then tap **Save**.
- The name of the playlist will appear in the browser next

to the  icon.

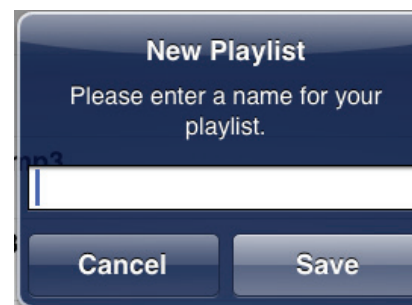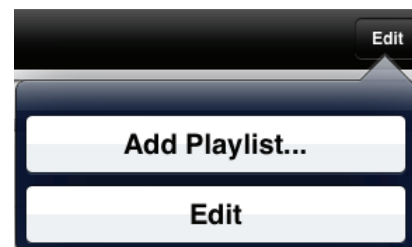


To add songs to a playlist:

- Tap the playlist in the browser.
- Tap **Add Music...** to add songs to the current playlist.
- Tick the songs you wish to add and tap **Done**.


To delete songs from the playlist:

- Tap **Edit** in the playlist browser and mark the files to be deleted.
- Tap **Delete**.

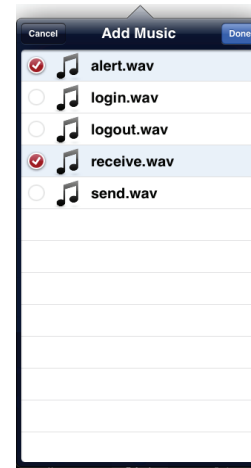




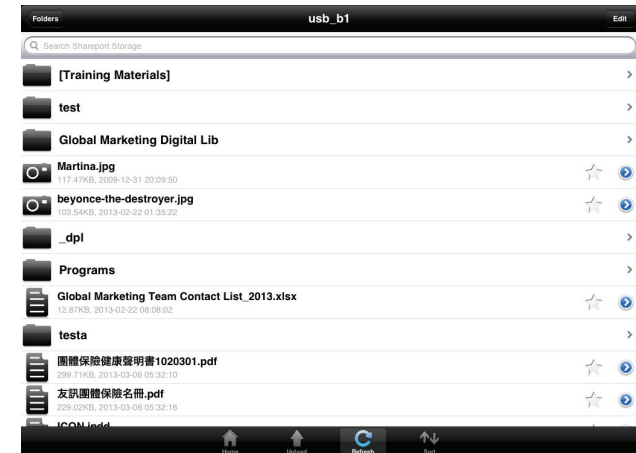
# Folders

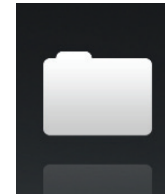You can browse your removable storage in a folder view in the folders section. Tapping the filename will open the viewer/player for that file type as described in the previous pages. You can also upload files from your mobile device to the removable storage attached to your router.







**Search Bar:** Enter a filename here to search your storage.

-  Tap to take you to the editing screen where you can add a folder and mark files for deletion or copying.
-  Tap the star icon next to each file to download it to your device and add it into your Favorites section.
-  Tapping the > icon gives you additional options depending on the file type.




The bottom menu bar includes these options:

-  Tap to go back to the main menu.
-  Tap to upload files from your device to your removable storage.
-  Tap to update the list of files.
-  Tap to reorder the files alphabetically.




To delete files:

- Tap **Edit** at the top right.
- Tick the circle next to a file to mark it for deletion.
- Tap on **Delete** at the bottom to delete the file.

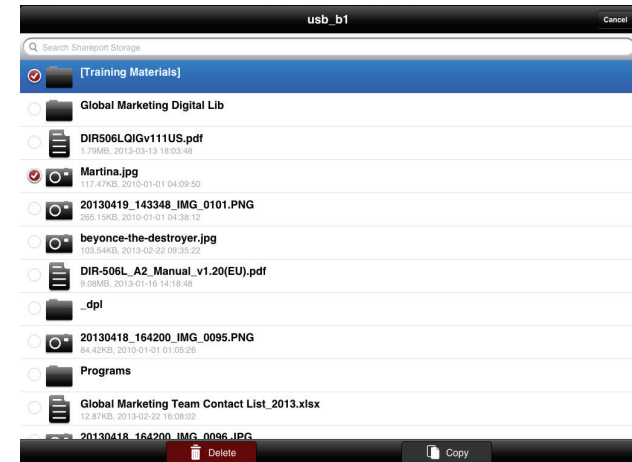


To copy files:

- Tap on **Copy** to bring up a window where you can select the folder to copy to.
- Browse to the directory you want to copy the marked files to and tap **Paste**.
- You can also tap **Add Folder** to create a new folder.

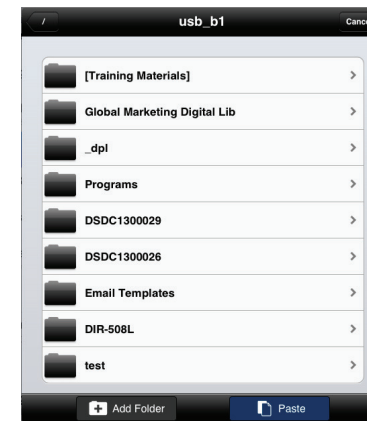

To create a new folder:

- Browse to the directory you wish to create a new folder in.
- Tap **Edit** at the top right.
- Tap **Add Folder** to add a new folder.
- Enter the name of the new folder, then tap **Save**.
- Tap **OK** to confirm folder creation.

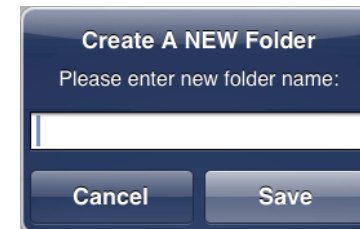


To upload images and videos from your mobile device:

- Browse to the folder you wish to upload to.
- Tap **Upload** at the bottom.
- Select the photos/videos you wish to upload.
- Tap **Done**.



During the upload process, the size of the file and the upload progress will be displayed.


To upload more files, tap the + icon at the top right and repeat the steps listed above.

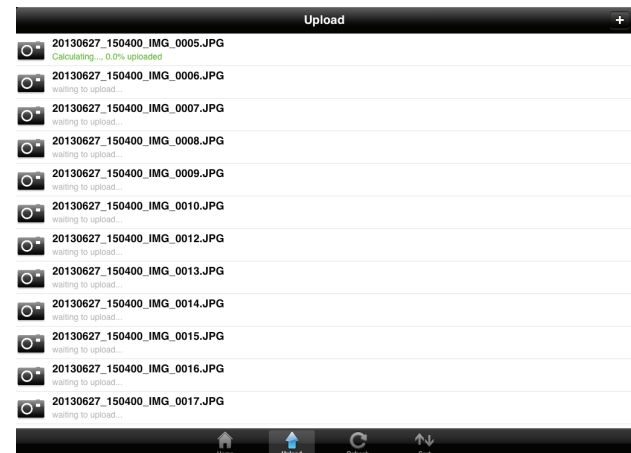


## Favorites


The Favorites section allows you to quickly access your most often used files, no matter what file type, in a special section. Files added to the Favorites section will be copied here for playback in a centralized location.





 Tap to mark files for deletion from the local storage in Favorites. The file will still be accessible in other mydlink SharePort sections.

 Tapping this icon gives you additional options depending on the file type.

The bottom menu bar includes these options:

 Tap to go back to the main menu.


 Tap to update the list of files.

 Tap to reorder the files alphabetically.

Tap on a file to start the file viewer. In the viewer:

 Tap to add/remove the file from your Favorites.

 Tap to bring up additional options.

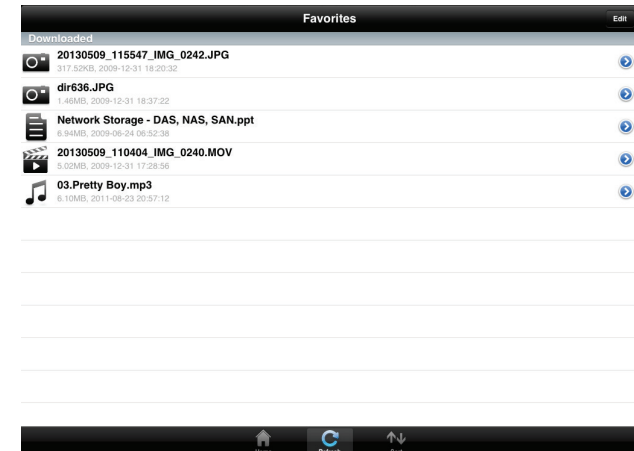

**Note:** The file options available will vary depending on the file type.

## Using the mydlink™ SharePort app for Android™

The mydlink SharePort app is a streamlined mobile application that allows you to conveniently stream media and share files stored on a removable storage connected to your router. Once the router is set up, you can start the app and easily connect from a local network or through the Internet to access your photos, videos, music, and documents. It allows you to create your own personal cloud storage; you can upload files and photos from your mobile device to the removable storage via the app from anywhere in the world!

**Note:** In order to ensure smooth streaming performance, you will need a minimum of 2 Mbit/s upload bandwidth for your router's Internet connection. Streaming performance will vary depending on the quality of your Internet connection.

### Using mydlink SharePort remotely from the Internet:

1. Make sure the device is powered on. Then plug your USB drive into the USB port of the device.

**Note:** If you connect a removable storage with many files or a large capacity, it may take a while for the router to scan and catalog your files.

2. If you are connecting remotely through the mydlink SharePort app from the Internet, you will need a **mydlink** account. Please refer to **mydlink** on page 97 for more details.



3. Use your Android mobile device to search for and download the free **mydlink SharePort** app from Google Play™.



If you have a QR code reader, you can scan the code for **mydlink SharePort** to the right.




4. Tap the **mydlink SharePort** icon, and the app will load.




5. Tap **Set up** to go to Settings and enter the Admin password and your mydlink Account Login information when the pop-up displays. Tap **Apply** when your information is entered. (The Admin password is only for local access, if you can connect through the Internet, then you can leave the Admin password blank)

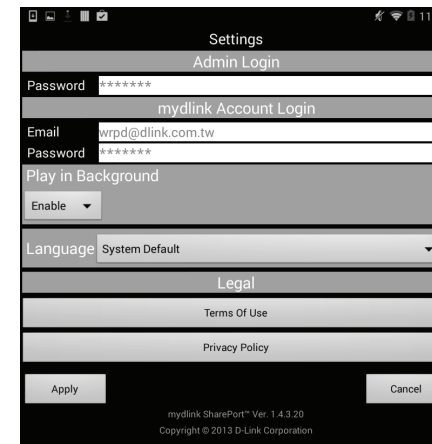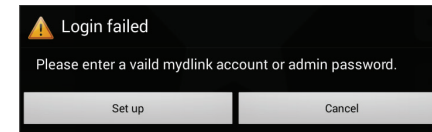

6. You can now use the mydlink SharePort app interface to stream media and access files stored on your removable drive. The wireless icon at the bottom will be lit green to indicate you are connected to the router through Remote Access.

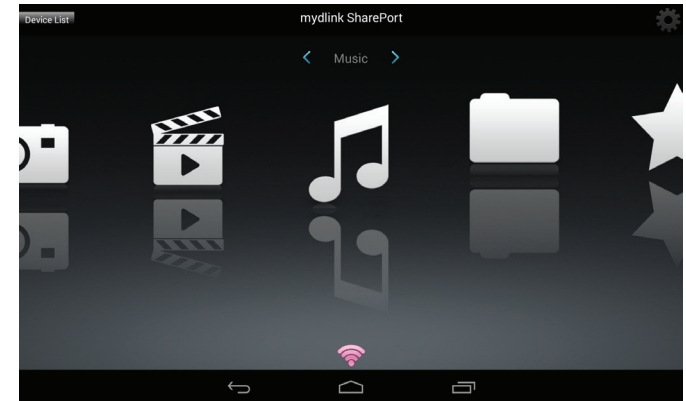

7. If you have more than one device registered to your mydlink account, you can tap **Device List** (in the top-left corner) and you will be prompted to select the device you wish to use.

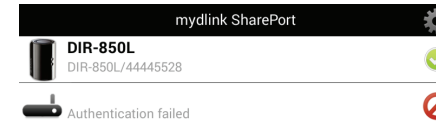

**Note:** If you see a red wireless icon, your router's network environment may not be suitable for a direct network connection and you may experience slow network speeds.

## Using mydlink SharePort in a local network:


1. Make sure the device is powered on. Then plug your USB drive into the USB port of the device.

**Note:** If you connect a removable storage with many files or a large capacity, it may take a while for the router to scan and catalog your files.

2. Use your Android mobile device to search for and download the free **mydlink SharePort** app from Google Play™.

If you have a QR code reader, you can scan the code for **mydlink SharePort** to the right.


3. On your mobile device, go to your Wi-Fi settings and connect to your router's wireless network using the default Wi-Fi settings. Locate the Wi-Fi name (SSID) and password for your device as printed on the included Wi-Fi Configuration Card.

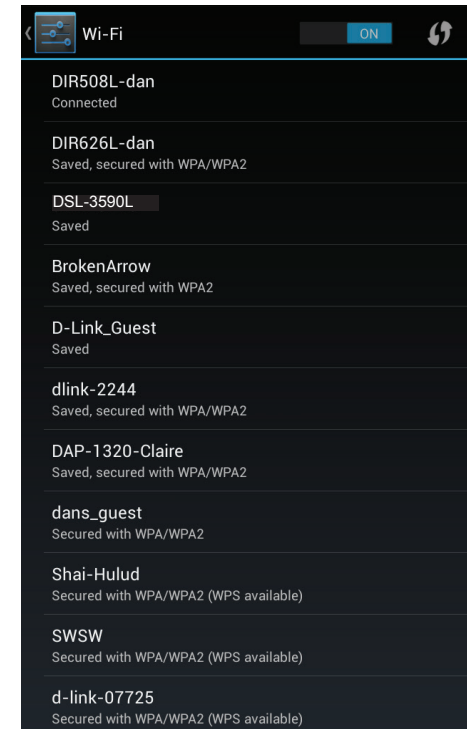


4. Tap the **mydlink SharePort** icon, and the app will load.




5. Tap **Set up** to enter the Admin password for your router when the pop-up displays.

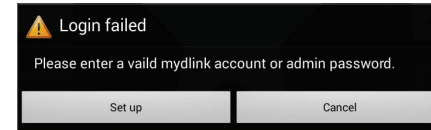

6. Enter your Admin Login in the Password field and tap **Apply**. You will be taken back to the device list where you can select the device for use with mydlink SharePort.

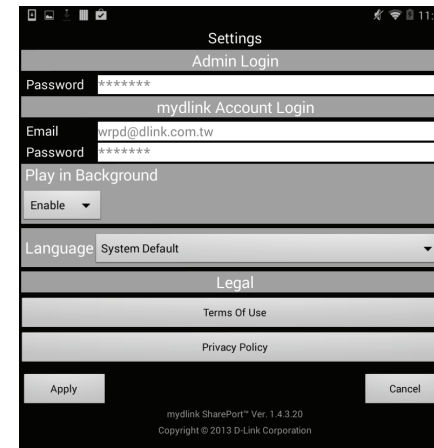

7. You can now use the mydlink SharePort app interface to stream media and access files stored on your removable drive. The wireless icon at the bottom will be lit blue to indicate a Local Access connection.

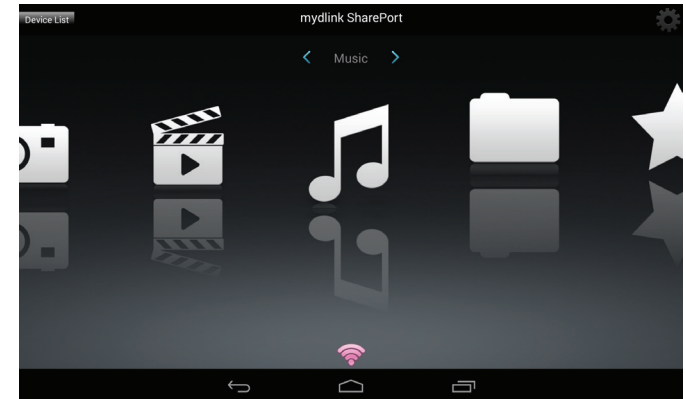

**Note:** If you see a red wireless icon, your router's network environment may not be suitable for a direct network connection and you may experience slow network speeds.



## Main Menu

The mydlink SharePort main menu has different sections that let you see all the documents, photos, movies, or music stored on your removable storage. Tap < or >, or swipe left or right to move between the different sections. The Wi-Fi icon at the bottom indicates an active local network connection (blue) or remote connection (green/red). Tap the gear icon if it is not lit.




Tap on the document icon to view documents.



Tap the camera icon to view pictures.



Tap on the movie icon to play videos.

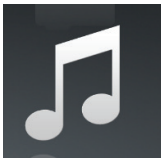

Tap on the music icon to play audio files.



Tap on the folder icon to browse all files in a folder view.




Tap on the star icon to access your favorite files.



**Note:** Available features may differ depending on the Android OS version of your device.

# Documents

The Documents section allows you to share, print, and view documents streamed from your DSL-3590L to your mobile device. Tap the document icon on the main menu to browse the files on your mobile device.

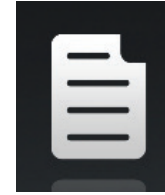

**Search Bar:** Type in the name of a file to search for it.




Tap to return to the main menu.



Tap to refresh, sort, or mark files for deletion.



Tap the star icon next to each file to download it to your device and add it into your Favorites section.

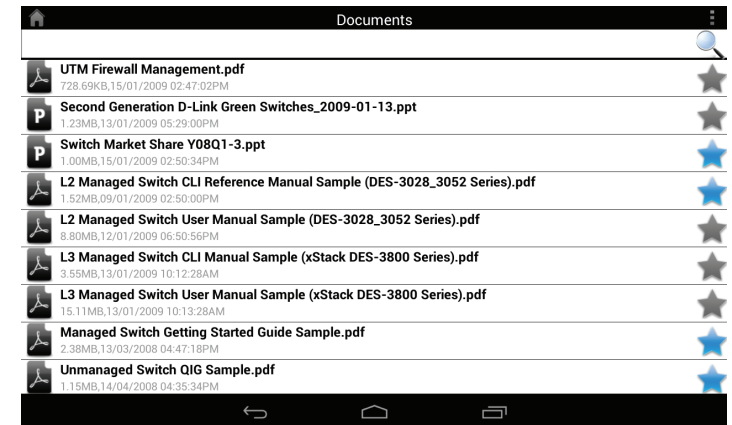

Tap for additional options:



Tap to return to the main menu.




Tap to update the list of files.




Tap to sort the files by name, size, type, or date.



Check a file then tap to delete it.

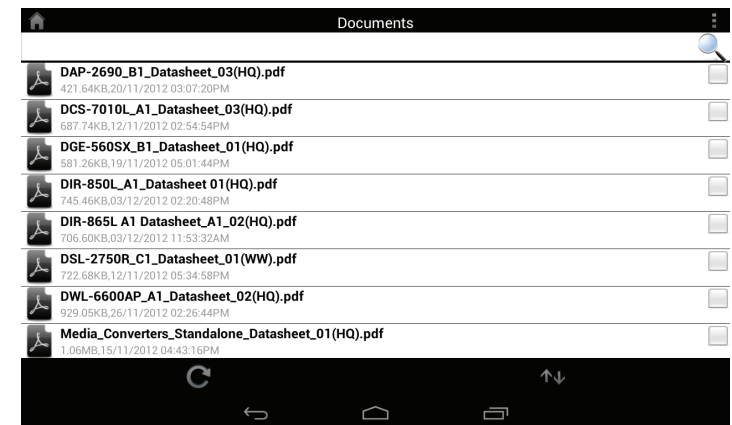

Tap on a file to start the document viewer. In the viewer:

- Tap the screen to bring up zoom in/out buttons.
- Drag the screen up or down to scroll between pages.
- Tap  to perform File, Find, Zoom, Reading View, Go To Page, and Bookmarks actions.

**Note:** Available actions may differ depending on your Android OS.



# Pictures

The Pictures section allows you to view images streamed from your DSL-3590L to your mobile device. Tap the camera icon on the main menu to browse your photo collection on your removable storage.



**Search Bar:** Type in the name of a file to search for it.



Tap to return to the main menu.



Tap to start a slideshow.



Tap to refresh, sort, or mark files for deletion.



Tap the star icon next to each file to download it to your device and add it into your Favorites section.

Tap for additional options:



Tap to return to the main menu.





Tap to update the list of files.








Tap to sort the files by name, size, type, or date.

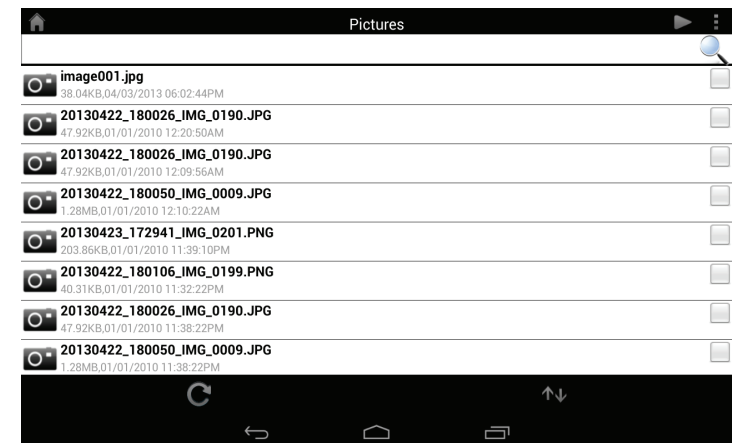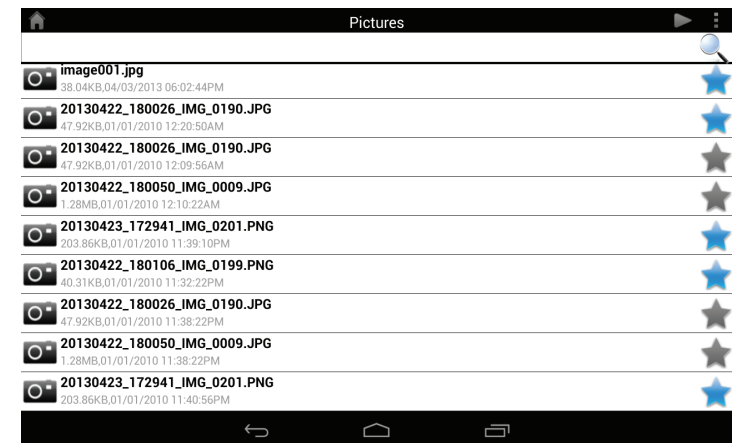

Check a file then tap to delete it.



Tap on an image file to start the image viewer. In the viewer:

-  Tap the star icon to download it to your device and add it into your Favorites section.
-  Tap to start a slideshow. Tap the image to stop the slideshow.
-  Tap to delete the current image. Tap **OK** to confirm.
-  Tap to bring up additional options using other applications.
-  Tap to access the image editor.

**Note:** This function may vary depending on the version of your Android OS.



# Videos

The Videos section allows you to stream video clips and movies from your DSL-3590L to your mobile device. Tap the movie icon on the main menu to browse your videos on your removable storage.



**Search Bar:** Type in the name of a file to search for it.




Tap to return to the main menu.



Tap to refresh, sort, or mark files for deletion.



Tap the star icon next to a file to download it to your device and add it into your Favorites section.

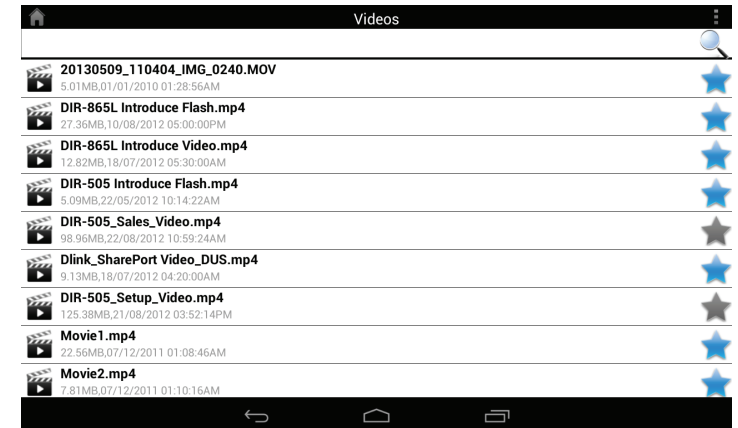

Tap  for additional options:



Tap to return to the main menu.



Tap to update the list of files.




Tap to sort the files by name, size, type, or date.




Check a file then tap this icon to delete it.




Tap on a file to start playing it. Tap on the screen to bring up the scroll bar, pause button, and play button.

 Tap to resume playback.


 Tap to pause the video.

**Note:** Available features may vary depending on the Android OS version installed on your device.

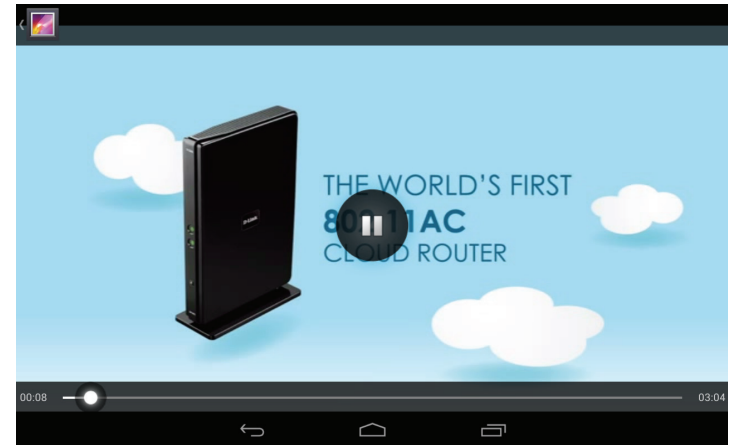

# Music

The Music section allows you to stream songs from your DSL-3590L to your mobile device. Tap the music icon on the main menu to browse your music collection on your removable storage.

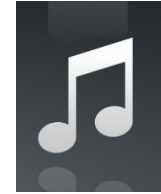

**Search Bar:** Type in the name of a file to search for it.



Tap to return to the main menu.



Tap to refresh, sort, or mark files for deletion.



Tap to browse your playlists.



Tap the star icon next to a file to download it to your device and add it into your Favorites section.

Tap  for additional options:



Tap to return to the main menu.





Tap to update the list of files.



Tap to sort the files by name, size, type, or date.




Check a file then tap this icon to delete it.

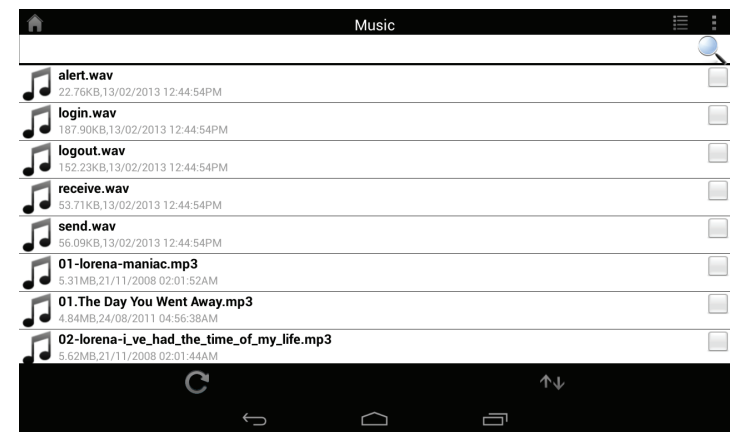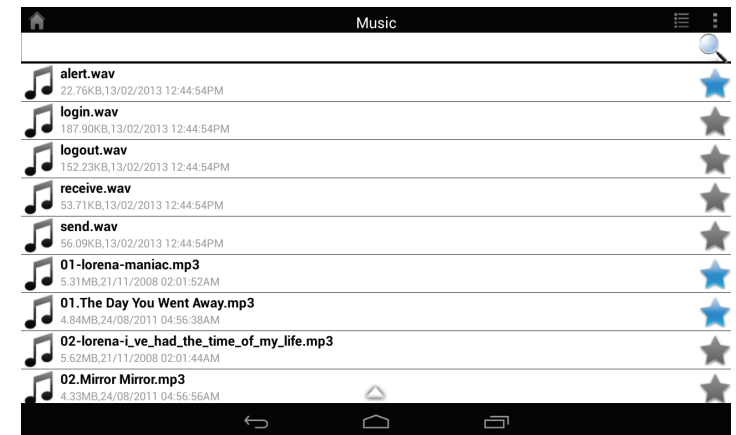





Tap on a file to start playing it. In the player:


 Tap on the up/down arrow to show/hide the player controls.

 Tap to repeat all. Tap again to repeat a single song.





 Tap to skip to the previous/next song.

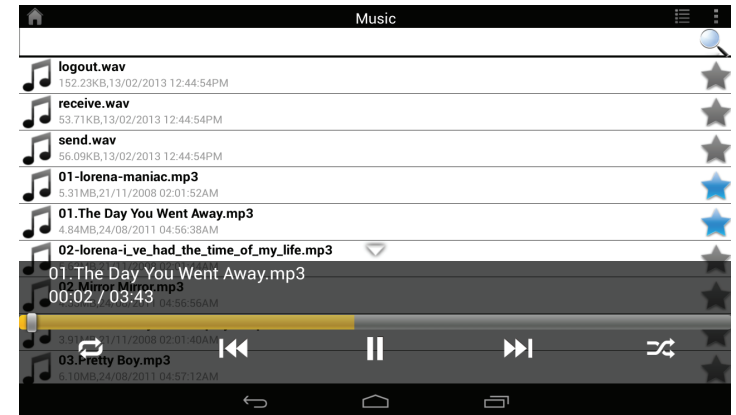
 Tap to play or pause the song.

 Tap to enable/disable shuffle mode.




To create a playlist:


- Tap 
- Tap **Add new playlist...**
- Enter a name for the playlist, then tap **OK**. The name of the
- playlist will appear in the browser next to the  icon.
- You can tap  then  to refresh the playlist page.


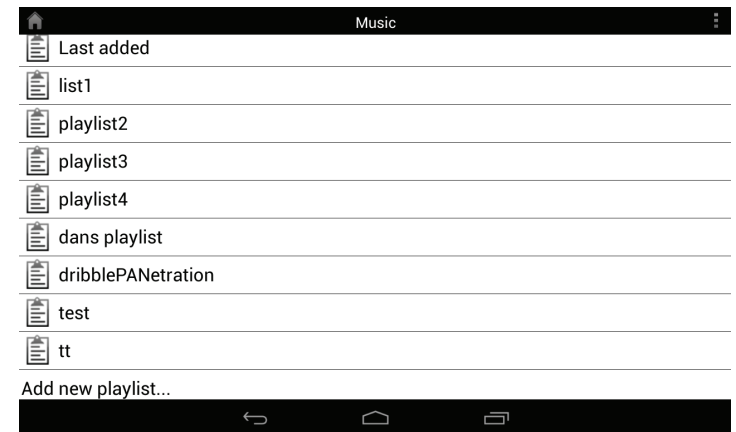


To add songs to a playlist:

- Tap a playlist to see its contents.
- Tap **Add Music...** to add songs to the current playlist.
- Tick the songs you wish to add and tap  to save.

To delete songs from the playlist:

- Tap **Edit** in the playlist browser and mark the files to be deleted.
- Tap  then tap **OK** to confirm.

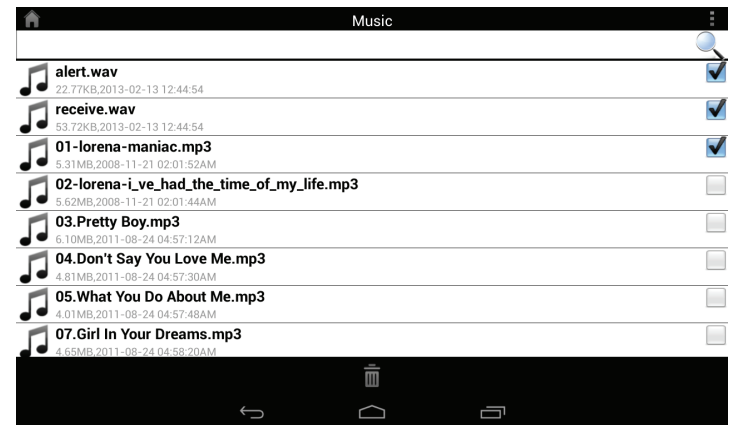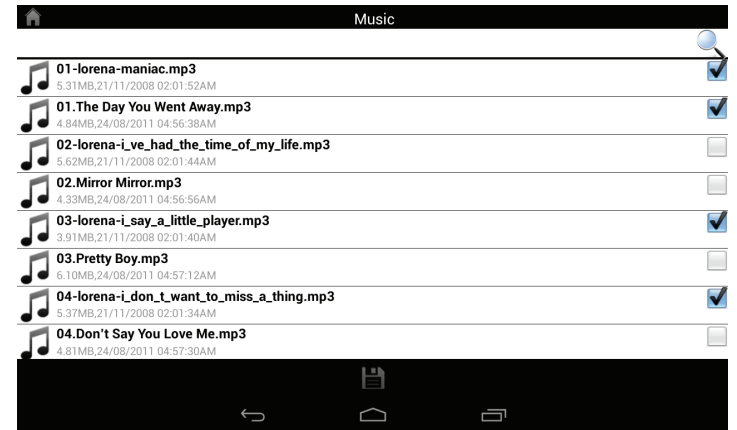

# Folders

You can browse your removable storage in a folder view in the folders section. Tapping the filename will open the viewer/player for that file type as described in the previous pages. You can also upload files from your mobile device to the removable storage attached to your router.

**Search Bar:** Type in the name of a file to search for it.



Tap to return to the main menu.



Tap to access file options.

In the file browser:





Tap to return to the main menu.








Tap to upload files.

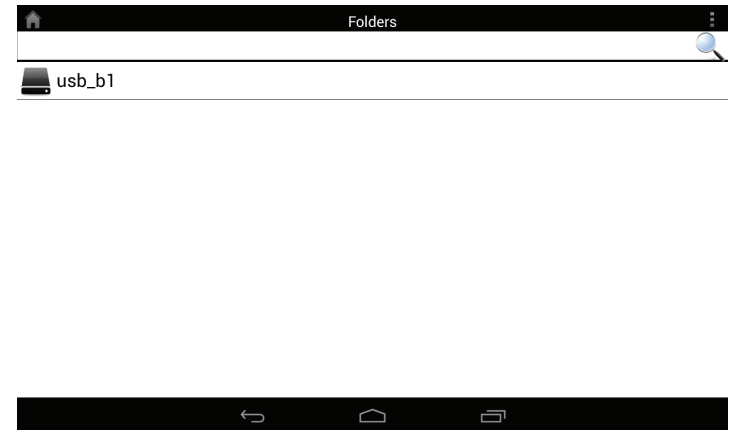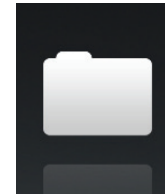



Tap to refresh, sort, create a new folder, or mark files for deletion and copying.





Tap  to select files and perform the following actions:


-  Tap to update the list of files.
-  Tap to sort the files by name, size, type, or date.
-  Tap to create a new folder.
-  Mark a file then tap this icon to delete it.
-  Mark a file then tap this icon to copy it.

To delete files:


- Tap on  and tick the box next to a file for deletion.
- Tap on  to delete your selected files. Tap **OK** to confirm.

To copy files:

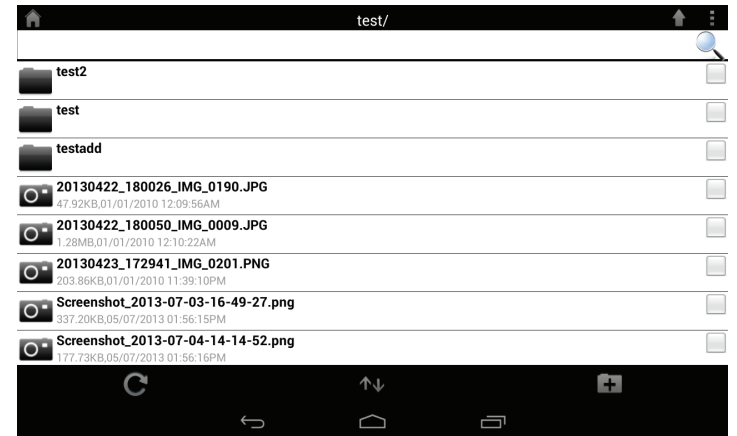

- Tap on  to select files for copying. Tick the box next to each file for copying.
- Tap on  to browse to the destination.

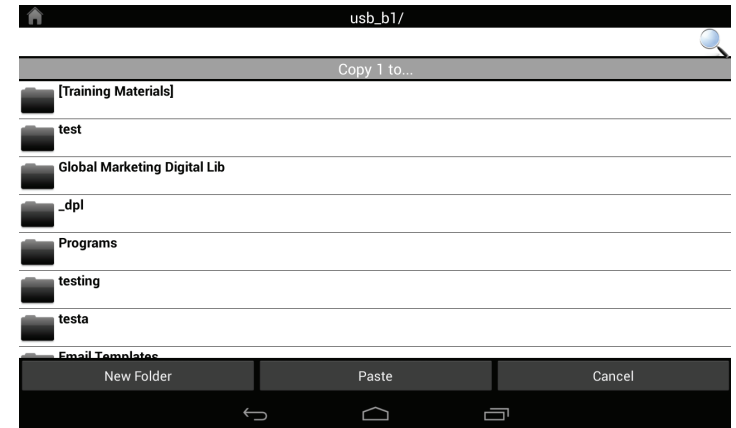


- Tap **Paste** or **Cancel**.
- You can also tap **New Folder** if you wish to create a folder in the current directory.




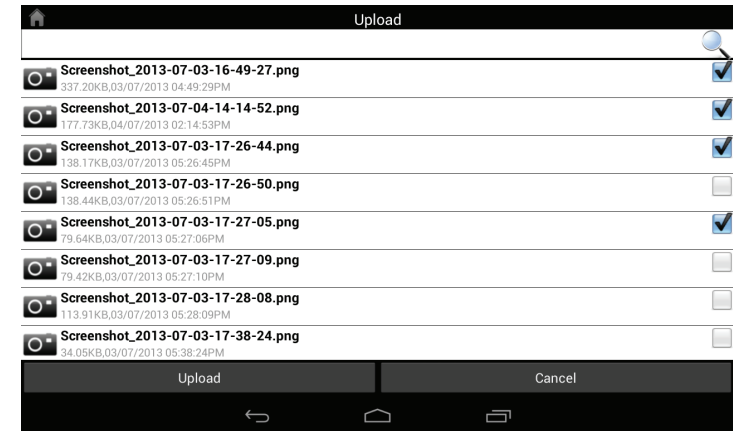
To create a new folder:

- Browse to the directory you wish to create a new folder in.
- Tap  then .
- Enter the name of the folder in the box, then tap **OK**.

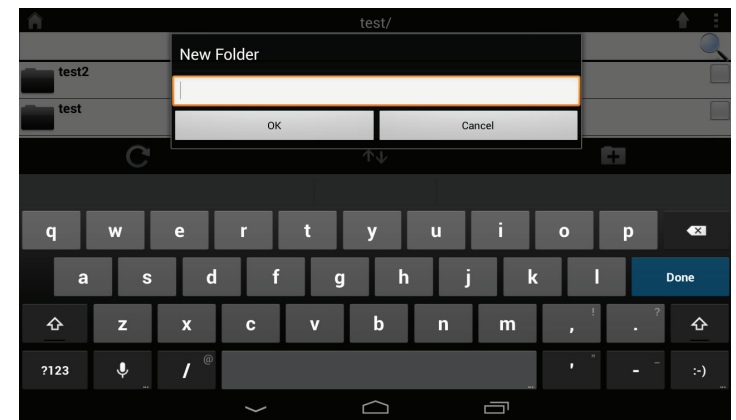


To upload images and videos from your mobile device:

- Browse to the folder you wish to upload to.
- Tap  and browse to the file or files you wish to upload from the local device.
- Tick the box next to each of the files you wish to upload.
- Tap **Upload**.



During the upload process, the size of the file and the upload progress will be displayed under the file name.

- To remove a file from the upload queue, tap the X next to it.

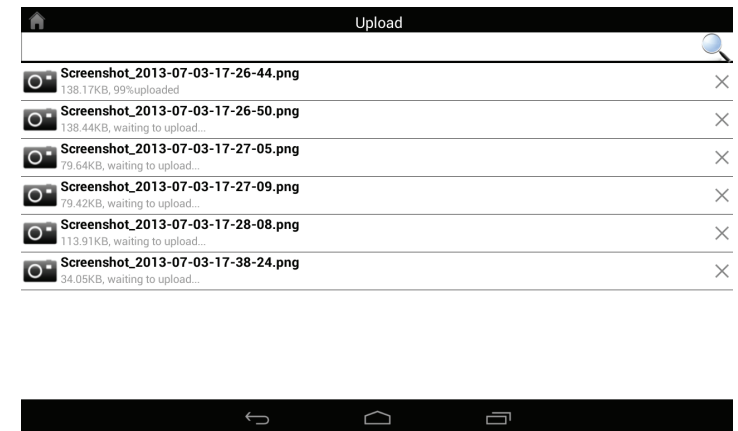

# Favorites

The Favorites section allows you to quickly access your most often used files, no matter what file type, in a special section. Files added to the Favorites section will be copied here for playback in a centralized location.

**Search Bar:** Type in the name of a file to search for it.



Tap to return to the main menu.



Tap to refresh, sort, or mark files for deletion.

Tap  for additional options:



Tap to return to the main menu.




Tap to update the list of files.



Tap to sort the files by name, size, type, or date.




Check a file then tap to delete it.

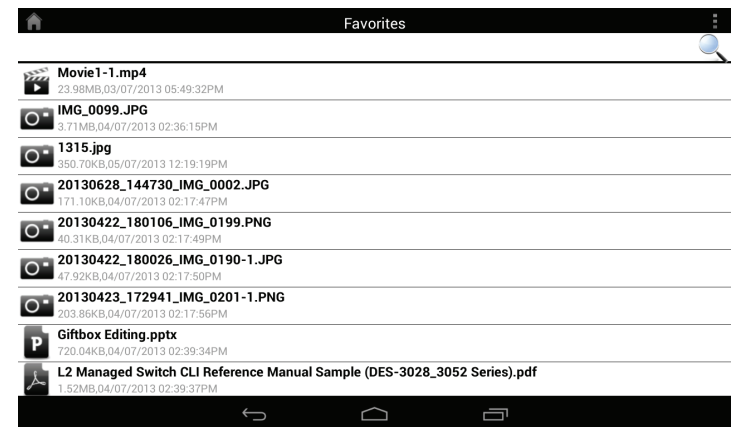


# Using SharePort Web Access

SharePort Web Access lets you stream music, photos, and movies from a USB drive attached to your DSL-3590L through a Web browser. You can also download and upload files to and from a computer through the Web browser interface.

- Type **http://shareport.local.** in your browser's URL to take you to the SharePort Web Access log in page.
- Log in with your admin password or a SharePort Username and Password.

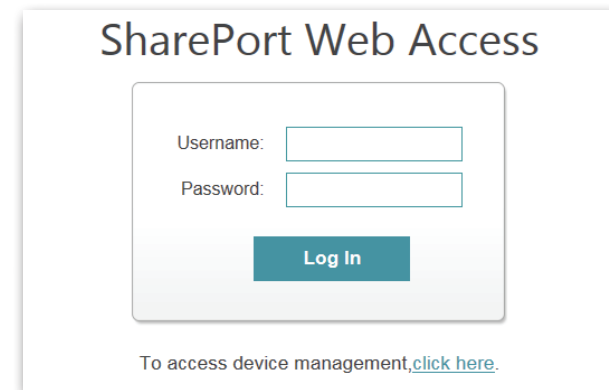

At the main menu, you can browse the files stored on your USB drive by file type.

- Click  to browse by folders.





The folder browser section will show folder hierarchy at the left and files at the right. You can quickly browse directories and perform operations by using the buttons in the folder browser view.

- Click  to return to the main menu.

To create a new folder:





- Click **New Folder** in the current directory.
- Enter a folder name in the Create Folder pop-up.
- Click **OK**. The new folder will appear in the left column.

To upload a file:

- Click **Upload** to upload a file to the current folder.
- In the pop-up browse to the file you wish to upload.
- Click **OK**. The file will appear after the browser refreshes.

To delete a file:


- Tick the checkbox next to the files you wish to delete.
- Click **Delete** and a dialog box will appear.
- Click **OK** to confirm.

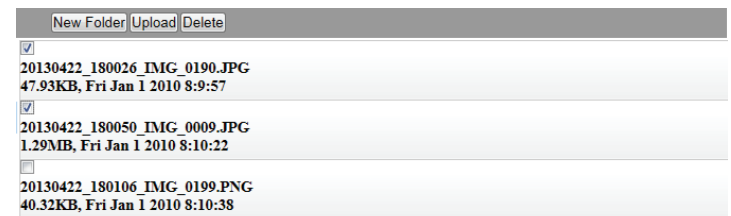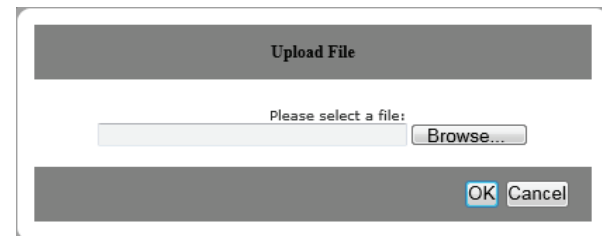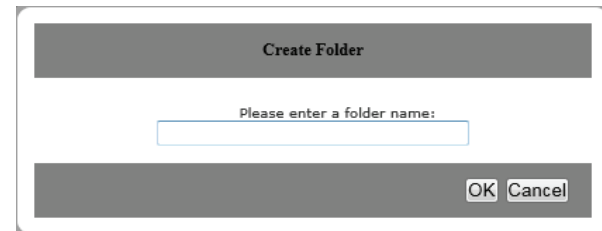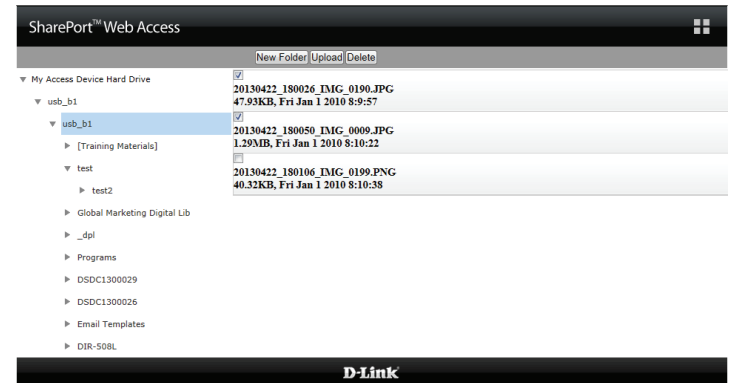

# Music


You can go to the Music section to browse and play the music files on your storage. Click **Back** to return to the main menu.

- Click on the audio filename to play it in the browser.

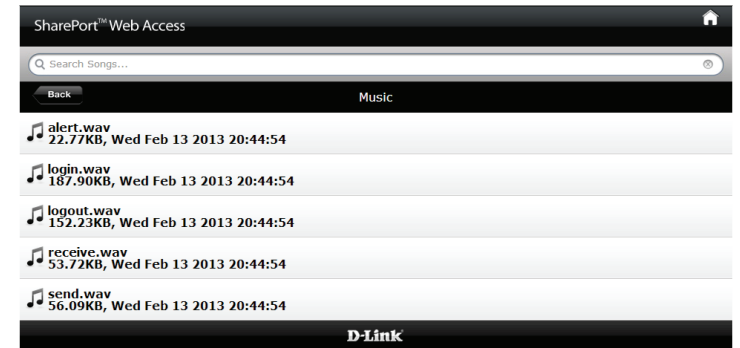

You can pause, seek, mute and adjust the volume in the window.


- Close the window to end playback.

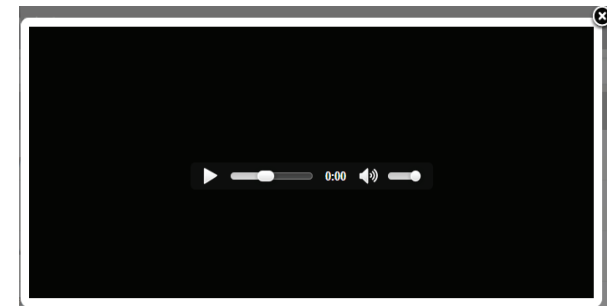

# Pictures

You can go to the Pictures section to browse and view the image files on your storage. Click **Back** to return to the main menu.

- Click on the image name to view it in the browser.

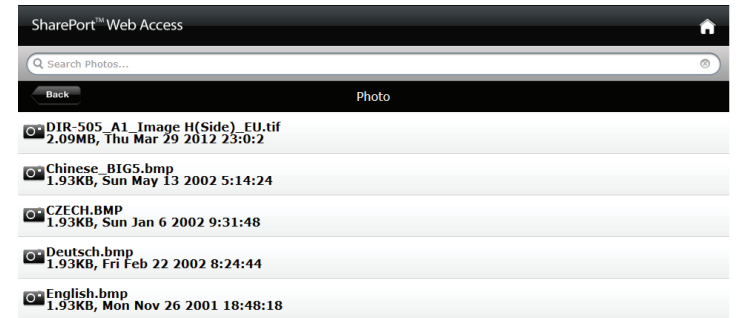


- Hover your mouse over the left or right side of the image and click < or > to view the previous or next image.



## Videos

You can go to the Videos section to browse and play the video files on your storage. Click **Back** to return to the main menu.

- Click on the video file to open the file in a window for streaming.

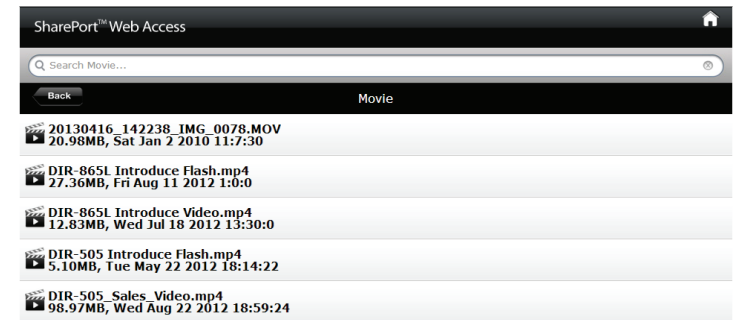

You can pause, seek, mute, adjust the volume, and activate full screen mode in the window controls.

- Close the window to end playback.


**Note:** Depending on your browser, the video file may be played back using the default player associated with that file format.




# Documents

You can go to the Documents section to open and save files from your storage to your computer. Click **Back** to return to the main menu.

- Click on the filename to open the file.

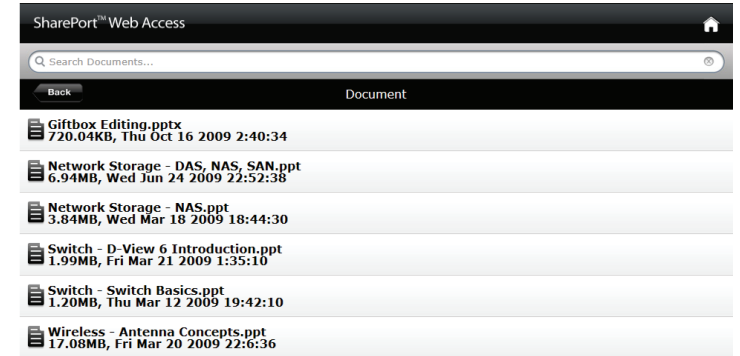


- Depending on the file type, the default program will be started or a pop-up may ask you to open or save the file.

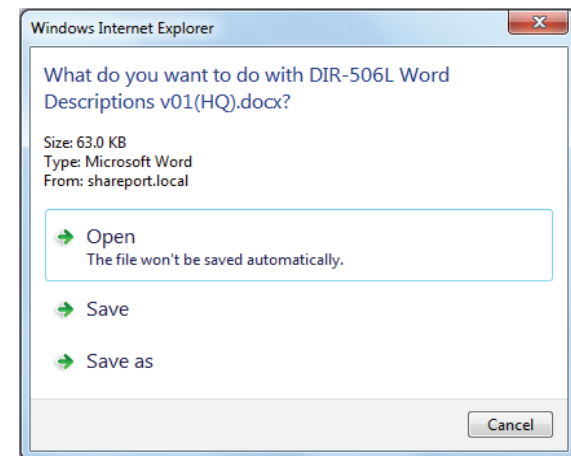

# Configuration


To access the configuration utility, open a web-browser such as Internet Explorer and enter **http://dlinkrouter.local/**



Windows and Mac users may also connect by typing the IP address of the router (by default this is **http://192.168.1.1**) in the address bar.

Enter your password. If you previously followed the setup wizard (see **Setup Wizard** on page 12), please use the admin password you entered during the wizard. Otherwise, leave the password blank. Click **Log In** to proceed.


**Note:** If you cannot remember your password and cannot log in, press the reset button (see **Back View** on page 6) to restore the router to its default settings.

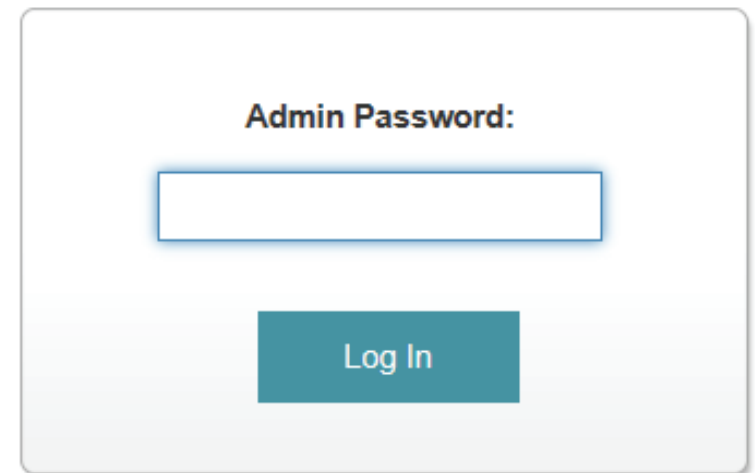

The router's home page will open displaying its current connection status.

The bar at the top of the page has quick access to Settings and Management functions. You may quickly jump back Home at any time.

**Note:** The system will automatically log out after a period of inactivity.

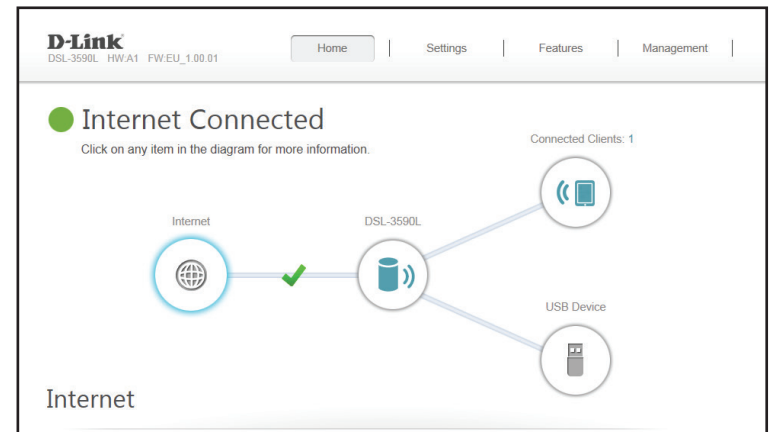

# Home

The Home page displays the current status of the router in the form of an interactive diagram. You can click each icon to display information about each part of the network at the bottom of the screen. The menu bar at the top of the page will allow you to quickly navigate to other pages.


## Internet

The Home page displays whether or not the router is currently connected to the Internet. If it is disconnected, click **Click to repair** to bring up the setup wizard (see **Setup Wizard** on page 12).

To bring up more details about your Internet connection, click on the **Internet** icon. Click **DSL**, **IPv4**, or **IPv6** to see details of the DSL connection, IPv4 connection, and IPv6 connection respectively.

Click **Release** to disconnect from the Internet. If you do this and wish to reconnect, click **Renew**.

To reconfigure the Internet settings, refer to **Internet** on page 67.

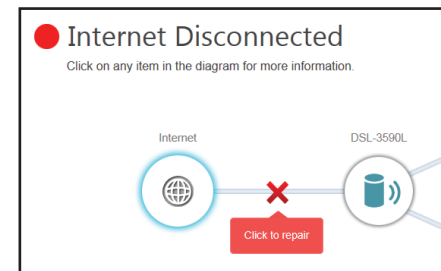

Internet		<a href="#">DSL / IPv4 / IPv6</a>	
DSL Status:	Disconnected	MAC Address:	B0:C5:54:D5:18:8F
Link Rate:	Not Available	IP Address:	Not Available
Connection Type:	Dynamic IP (PPPoE)	Subnet Mask:	Not Available
Network Status:	Disconnected	Default Gateway:	Not Available
Connection Uptime:	0 Day 0 Hour 0 Min 0 Sec	Primary DNS Server:	Not Available
		Secondary DNS Server:	Not Available

[Go to settings](#) ↻

COPYRIGHT © 2014 D-Link [Get Help](#)

# DSL-3590L

Click on the **DSL-3590L** icon to view details about the router and its wireless settings.

Here you can see the router's current wireless settings, as well as its MAC address and IPv4/IPv6 addresses.

To reconfigure the network settings, either click **Go to settings** on the lower left, or click **Settings** (at the top of the page) and then **Network** on the menu that appears. Refer to **Network** on page 93.

To reconfigure the wireless settings, either click **Go to settings**, on the lower right, or click **Settings** (at the top of the page) and then **Wireless** on the menu that appears. Refer to **Wireless** on page 90.

The screenshot displays the D-Link DSL-3590L web interface. At the top, there is a navigation bar with 'Home', 'Settings', 'Features', and 'Management' tabs. Below the navigation bar, a green circle indicates 'Internet Connected'. A diagram shows the router connected to the Internet, with a green checkmark indicating a successful connection. The router is also connected to 'Connected Clients: 1' and a 'USB Device'. Below the diagram, the router's name 'DSL-3590L' is displayed. The interface is divided into two columns of settings:

IPv4 Network	Wi-Fi 2.4GHz
MAC Address: B0 C5 54 D5 18 8D	Status: Enabled
Router IP Address: 192.168.1.1	Wi-Fi Name (SSID): D-Link DSL-3590L
Subnet Mask: 255.255.255.0	Password: "Unsecured" (Warning icon)
IPv6 Network	Wi-Fi 5GHz
Link-Local Address: Not Available	Status: Enabled
Router IPv6 Address: Not Available	Wi-Fi Name (SSID): D-Link DSL-3590L_5GHz
DHCP-PD: Disabled	Password: "Unsecured" (Warning icon)

At the bottom of the settings section, there are two 'Go to settings' buttons with arrows. The footer contains 'COPYRIGHT © 2014 D-Link' and a 'Get Help' link.




# Connected Clients

Click on the **Connected Clients** icon to view details about the router and its wireless settings.

On this page you can see all the clients currently connected to the router, and their IP addresses.

To edit each client's settings, click the pencil icon on the client you want to edit.

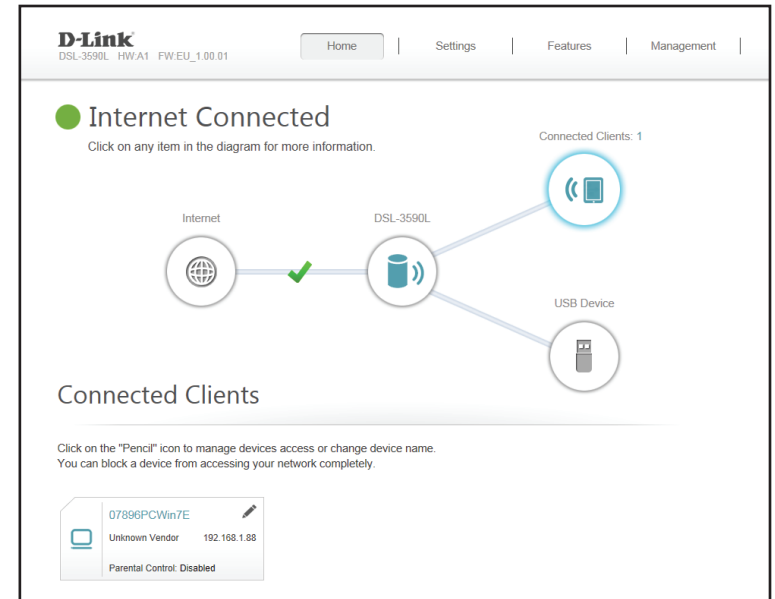

**Name:** Enter a custom name for this client.

**Vendor:** Displays the vendor of the device.

**MAC Address:** Displays the MAC address of the device.

**IP Address:** Enter a specific IP address for this client.

**Reserve IP:** Enable to reserve this IP address for this client.

**Parental Control:** If enabled, parental control will completely disable all network activity on the client according to a custom schedule. A drop-down menu will appear; select the time schedule during which parental control will take effect. The schedule may be set to **Always OFF** to indefinitely deny network access to the client, or you can create your own schedules in the **Schedules** section (refer to **Schedule** on page 110).

Click **Save** when you are done.

# USB Device

Click on the **USB Device** icon to view details about the currently connected USB device, the UPnP media server, SharePort, and Windows File Sharing.

If you have a USB device connected, you can see its name and how much free space it has.

To configure your SharePort settings, click **Go to settings** and refer to **SharePort** on page 95.



# Settings Wizard

In the Settings menu on the bar on the top of the page, click **Wizard** to open the setup wizard. This is the same wizard that appears when you start the router for the first time. Refer to **Setup Wizard** on page 12 for details.

## Internet

In the Settings menu on the bar on the top of the page, click **Internet** to see the Internet configuration options. Click **Advanced Settings...** to expand the list and see all of the options.


You will see the settings for your **IPv4** connection.

To configure an IPv6 connection, click the **IPv6** link. Refer to **IPv6** on page 74.

To configure the ATM settings, click the **ATM** link. Refer to **ATM** on page 88.

To configure the advanced DSL settings, click the **DSL** link. Refer to **DSL** on page 89.

To return to the IPv4 settings, click the **IPv4** link.

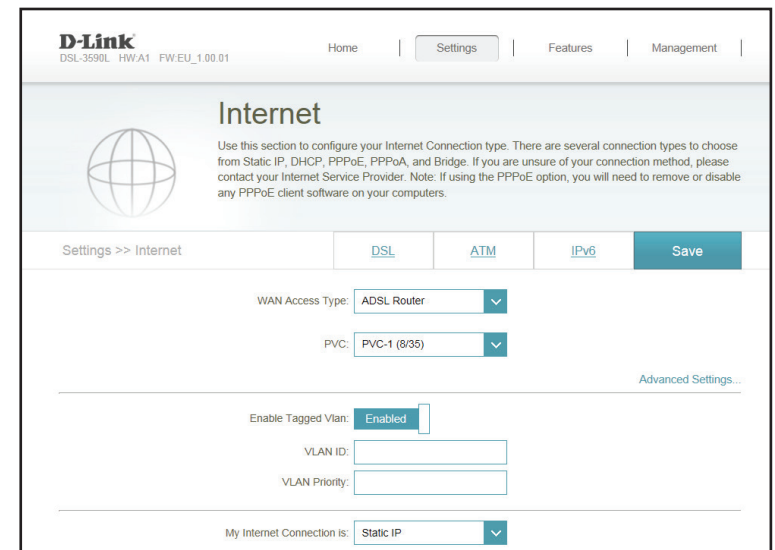

The screenshot shows the D-Link web interface for configuring the Internet connection. The page title is "Internet" and it includes a navigation bar with "Home", "Settings", "Features", and "Management". The main content area is titled "Internet" and contains a globe icon and a paragraph of instructions: "Use this section to configure your Internet Connection type. There are several connection types to choose from Static IP, DHCP, PPPoE, PPPoA, and Bridge. If you are unsure of your connection method, please contact your Internet Service Provider. Note: If using the PPPoE option, you will need to remove or disable any PPPoE client software on your computers." Below this, there are tabs for "DSL", "ATM", "IPv6", and "Save". The "DSL" tab is selected. The configuration options include: "WAN Access Type" set to "ADSL Router", "PVC" set to "PVC-1 (8/35)", "Enable Tagged Vlan" set to "Enabled", "VLAN ID" and "VLAN Priority" input fields, and "My Internet Connection is" set to "Static IP". There is also an "Advanced Settings..." link.

In the Settings menu on the bar on the top of the page, click **Internet** to see the Internet configuration options. Click **Advanced Settings...** to expand the list and see all of the options.

**WAN Access** Select whether the device should act as an **ADSL Router** or a **Type: Residential Gateway**.

**PVC:** Use the default setting unless otherwise instructed by your ISP.

**Ether WAN Port:** If you selected **Residential Gateway**, select the Ethernet port that will connect to the WAN.

**Enable Tagged Vlan:** Enable or disable tagged VLAN.

**VLAN ID:** Enter the VLAN ID.

**VLAN Priority:** Enter the VLAN Priority from the default 0 (lowest) to 7 (highest).

**My Internet Connection Is:** Choose your Internet connection type from the drop-down menu. You will be presented with the appropriate options for your connection type.

For **Dynamic IP (DHCP)** refer to **Dynamic IP (DCHP)** on page 69.

For **Static IP** refer to **Static IP** on page 70.

For **PPPoE** refer to **PPPoE** on page 71.

For **PPPoA** refer to **PPPoA** on page 72.

For **Bridge** refer to **Bridge** on page 73.

The screenshot shows the D-Link web interface for configuring the Internet connection. The page title is "Internet" and it includes a navigation bar with "Home", "Settings", "Features", and "Management". The main content area is titled "Internet" and contains a globe icon and a note: "Use this section to configure your Internet Connection type. There are several connection types to choose from Static IP, DHCP, PPPoE, PPPoA, and Bridge. If you are unsure of your connection method, please contact your Internet Service Provider. Note: If using the PPPoE option, you will need to remove or disable any PPPoE client software on your computers." Below this, there are tabs for "DSL", "ATM", "IPv6", and "Save". The "DSL" tab is selected. The configuration options include: "WAN Access Type" set to "ADSL Router", "PVC" set to "PVC-1 (8/35)", "Enable Tagged Vlan" set to "Enabled", "VLAN ID" and "VLAN Priority" input fields, and "My Internet Connection Is" set to "Static IP". There is an "Advanced Settings..." link on the right side of the form.

## Dynamic IP (DCHP)

Select **Dynamic IP (DHCP)** to obtain IP address information automatically from your Internet Service Provider (ISP). Select this option if your ISP does not give you an IP address to use.

**Host Name:** The host name is optional but may be required by some ISPs. Leave it blank if you are not sure.

**Primary DNS Server:** Enter the primary DNS server IP address assigned by your ISP. This address is usually obtained automatically from your ISP.

**Secondary DNS Server:** Enter the secondary DNS server IP address assigned by your ISP. This address is usually obtained automatically from your ISP.

**MTU:** Maximum Transmission Unit - you may need to change the MTU for optimal performance with your ISP.

**MAC Address Clone:** The default MAC address is set to the Internet port's physical interface MAC address on the router. You can use the drop-down menu to replace the Internet port's MAC address with the MAC address of a connected client.

Click **Save** when you are done.

The screenshot displays the 'Internet' configuration page on a D-Link router. At the top, there are navigation links for 'Home', 'Settings', 'Features', and 'Management'. The page title is 'Internet' with a globe icon. Below the title, there is a brief instruction: 'Use this section to configure your Internet Connection type. There are several connection types to choose from Static IP, DHCP, PPPoE, PPPoA, and Bridge. If you are unsure of your connection method, please contact your Internet Service Provider. Note: If using the PPPoE option, you will need to remove or disable any PPPoE client software on your computers.'

The configuration options are as follows:

- Settings >> Internet: DSL, ATM, IPv6, **Save**
- WAN Access Type: ADSL Router (dropdown)
- PVC: PVC-1 (8/35) (dropdown)
- Advanced Settings... (link)
- Enable Tagged Vlan:  Enabled
- VLAN ID: (text input)
- VLAN Priority: (text input)
- Advanced Settings... (link)
- My Internet Connection Is: Dynamic IP (DHCP) (dropdown)
- Advanced Settings... (link)
- Host Name: (text input)
- Primary DNS Server: (text input)
- Secondary DNS Server: (text input)
- MTU: Auto (dropdown)
- Mac Address Clone: (text input) << MAC Address (dropdown)

COPYRIGHT © 2014 D-Link

## Static IP

Select **Static IP** if your IP information is provided by your Internet service provider (ISP).

**IP Address:** Enter the IP address provided by your ISP.

**Subnet Mask:** Enter the subnet mask provided by your ISP.

**Default Gateway:** Enter the default gateway address provided by your ISP.

**Primary DNS Server:** Enter the primary DNS server IP address assigned by your ISP.

**Secondary DNS Server:** Enter the secondary DNS server IP address assigned by your ISP.

**MTU:** Maximum Transmission Unit - you may need to change the MTU for optimal performance with your ISP.

**MAC Address Clone:** The default MAC address is set to the Internet port's physical interface MAC address on the router. You can use drop-down menu to replace the Internet port's MAC address with the MAC address of a connected client.

Click **Save** when you are done.

The screenshot shows the D-Link DSL-3590L web interface. The top navigation bar includes 'Home', 'Settings', 'Features', and 'Management'. The main heading is 'Internet'. Below the heading is a globe icon and a note: 'Use this section to configure your Internet Connection type. There are several connection types to choose from Static IP, DHCP, PPPoE, PPPoA, and Bridge. If you are unsure of your connection method, please contact your Internet Service Provider. Note: If using the PPPoE option, you will need to remove or disable any PPPoE client software on your computers.'

The configuration page is titled 'Settings >> Internet' and has tabs for 'DSL', 'ATM', 'IPv6', and 'Save'. The 'Save' tab is active. The configuration options are as follows:

- WAN Access Type: ADSL Router (dropdown)
- PVC: PVC-1 (8/35) (dropdown)
- Advanced Settings... (link)
- Enable Tagged Vlan: Enabled (checkbox)
- VLAN ID: (text input)
- VLAN Priority: (text input)
- My Internet Connection is: Static IP (dropdown)
- IP Address: (text input)
- Subnet Mask: (text input)
- Default Gateway: (text input)
- Primary DNS Server: (text input)
- Advanced Settings... (link)
- Secondary DNS Server: (text input)
- MTU: Auto (dropdown)
- Mac Address Clone: (text input) with a dropdown menu set to '<< MAC Address'

At the bottom, there is a copyright notice: 'COPYRIGHT © 2014 D-Link'.

## PPPoE

Select **PPPoE** if your Internet connection requires you to enter a PPPoE username and password. This information is provided by your Internet Service Provider (ISP).

**Username:** Enter the username provided by your ISP.

**Password:** Enter the password provided by your ISP.

**Reconnect Mode:** Select either **Always-on**, **On-Demand**, or **Manual**.

**Address Mode:** Select **Static IP** if your ISP assigned you the IP address, subnet mask, gateway, and DNS server addresses. In most cases, select **Dynamic IP**.

**IP Address:** Enter the IP address provided by your ISP (Static IP only).

**Service Name:** Enter the ISP service name (optional).

**Primary DNS Server:** Enter the primary DNS server IP address assigned by your ISP.

**Secondary DNS Server:** Enter the secondary DNS server IP address assigned by your ISP.

**MTU:** Maximum Transmission Unit - you may need to change the MTU for optimal performance with your ISP.

Click **Save** when you are done.

The screenshot shows the D-Link DSL-3590L web interface. The top navigation bar includes 'Home', 'Settings', 'Features', and 'Management'. The main heading is 'Internet'. Below the heading is a globe icon and a note: 'Use this section to configure your Internet Connection type. There are several connection types to choose from Static IP, DHCP, PPPoE, PPPoA, and Bridge. If you are unsure of your connection method, please contact your Internet Service Provider. Note: If using the PPPoE option, you will need to remove or disable any PPPoE client software on your computers.'

The configuration page is titled 'Settings >> Internet' and has tabs for 'DSL', 'ATM', 'IPv6', and 'Save'. The 'Save' tab is active. The configuration options are as follows:

- WAN Access Type: ADSL Router (dropdown)
- PVC: PVC-1 (8/35) (dropdown)
- Advanced Settings... (link)
- Enable Tagged Vlan: Enabled (checkbox)
- VLAN ID: (text input)
- VLAN Priority: (text input)
- My Internet Connection Is: PPPoE (dropdown)
- Username: (text input)
- Password: (text input)
- Reconnect Mode: Always on (dropdown)
- Advanced Settings... (link)
- Address Mode: Dynamic IP (dropdown)
- Service Name: (text input)
- Primary DNS Server: (text input)
- Secondary DNS Server: (text input)
- MTU: Auto (dropdown)

COPYRIGHT © 2014 D-Link

## PPPoA

Choose **PPPoA** if your Internet connection requires you to enter a PPPoA username and password. This information is provided by your Internet Service Provider (ISP).

**Username:** Enter the username provided by your ISP.

**Password:** Enter the password provided by your ISP.

**Reconnect Mode:** Select either **Always-on**, **On-Demand**, or **Manual**.

**Address Mode:** Select **Static IP** if your ISP assigned you the IP address, subnet mask, gateway, and DNS server addresses. In most cases, select **Dynamic IP**.

**IP Address:** Enter the IP address provided by your ISP (Static IP only).

**Primary DNS Server:** Enter the primary DNS server IP address assigned by your ISP.

**Secondary DNS Server:** Enter the secondary DNS server IP address assigned by your ISP.

Click **Save** when you are done.

The screenshot shows the D-Link DSL-3590L web interface. The top navigation bar includes 'Home', 'Settings', 'Features', and 'Management'. The main heading is 'Internet'. Below the heading is a globe icon and a note: 'Use this section to configure your Internet Connection type. There are several connection types to choose from Static IP, DHCP, PPPoE, PPPoA, and Bridge. If you are unsure of your connection method, please contact your Internet Service Provider. Note: If using the PPPoE option, you will need to remove or disable any PPPoE client software on your computers.'

The configuration form is divided into sections:

- Settings >> Internet**: Includes tabs for 'DSL', 'ATM', 'IPv6', and a 'Save' button.
- WAN Access Type:** Set to 'ADSL Router'.
- PVC:** Set to 'PVC-1 (8/35)'.
- Advanced Settings...:**
  - Enable Tagged Vlan:** Set to 'Enabled'.
  - VLAN ID:** (Empty text box)
  - VLAN Priority:** (Empty text box)
- My Internet Connection is:** Set to 'PPPoA'.
- Username:** (Empty text box)
- Password:** (Empty text box)
- Reconnect Mode:** Set to 'Always on'.
- Advanced Settings...:**
  - Address Mode:** Set to 'Dynamic IP'.
  - Primary DNS Server:** (Empty text box)
  - Secondary DNS Server:** (Empty text box)

At the bottom, it says 'COPYRIGHT © 2014 D-Link'.



## Bridge

Choose **Bridge** to configure the device as a network bridge.

**MTU:** Maximum Transmission Unit - you may need to change the MTU for optimal performance with your ISP.

The screenshot displays the D-Link DSL-3590L web interface for configuring the Internet connection. The page title is "Internet". Below the title, there is a brief instruction: "Use this section to configure your Internet Connection type. There are several connection types to choose from Static IP, DHCP, PPPoE, PPPoA, and Bridge. If you are unsure of your connection method, please contact your Internet Service Provider. Note: If using the PPPoE option, you will need to remove or disable any PPPoE client software on your computers." The interface includes a breadcrumb trail "Settings >> Internet" and a "Save" button. The configuration options are as follows:

- WAN Access Type: ADSL Router
- PVC: PVC-1 (8/35)
- Advanced Settings... (link)
- Enable Tagged Vlan: Enabled
- VLAN ID: [text input]
- VLAN Priority: [text input]
- My Internet Connection Is: Bridge
- Advanced Settings... (link)
- MTU: Auto

COPYRIGHT © 2014 D-Link

## IPv6

To configure an IPv6 connection, click the **IPv6** link. To return to the IPv4 settings, click **IPv4**.

**My Internet Connection Is:** Choose your IPv6 connection type from the drop-down menu. You will be presented with the appropriate options for your connection type. Click **Advanced Settings...** to expand the list and see all of the options.

For **Auto Detection** refer to **Auto Detection** on page 75.

For **Static IPv6** refer to **Static IPv6** on page 76.

For **Auto Configuration (SLAAC/DHCPv6)** refer to **Auto Configuration (SLAAC/DHCPv6)** on page 78.


For **PPPoE** refer to **PPPoE** on page 80.

For **IPv6 in IPv4 Tunnel** refer to **IPv6 in IPv4 Tunnel** on page 82.

For **6 to 4** refer to **6 to 4** on page 84.

For **6rd** refer to **6rd** on page 85.

For **Local Connectivity Only** refer to **Local Connectivity Only** on page 87.

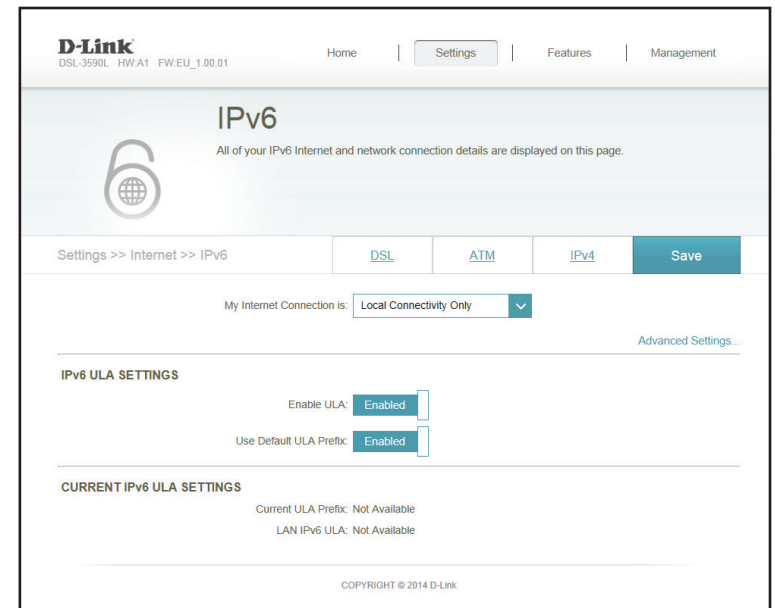

## Auto Detection

**Auto Detection** mode (not Auto-Configuration mode) automatically detects IPv6 the connection method used by your Internet Service Provider (ISP). If your ISP provides an IPv6 service and Auto Detection failed to detect it, the user must manually select another IPv6 connection type (such as PPPoE, Auto Configuration, 6rd, DS-Lite etc.)

**Enable Automatic IPv6 Address Assignment:** Enable or disable the Automatic IPv6 Address Assignment feature.

**Enable Automatic DHCP-PD in LAN:** Enable or disable automatic DHCP-PD services.

**Autoconfiguration Type:** Select **Stateful (DHCPv6)**, **SLAAC + RDNSS** or **SLAAC + Stateless DHCPv6**.

**Router Advertisement Lifetime:** Enter the IPv6 address lifetime (in minutes).

Click **Save** when you are done.

The screenshot shows the D-Link web interface for IPv6 settings. The page title is "IPv6" and it includes a breadcrumb trail: "Settings >> Internet >> IPv6". There are tabs for "DSL", "ATM", "IPv4", and "Save". The "My Internet Connection is:" dropdown is set to "Auto Detection". Under "ADDRESS AUTOCONFIGURATION SETTINGS", "Enable Automatic IPv6 Address Assignment" and "Enable Automatic DHCP-PD in LAN" are both set to "Enabled". "Autoconfiguration Type" is set to "SLAAC+Stateless DHCP". "Router Advertisement Lifetime" is set to an empty field followed by "minutes". A "Save" button is visible at the top right.

## Static IPv6

Select **Static IP** if your IPv6 information is provided by your Internet service provider (ISP).

**Use Link-Local Address:** Enable or disable a link-local address.

**IPv6 Address:** If you disabled **Use Link-Local Address**, enter the address supplied by your ISP.

**Subnet Prefix Length:** If you disabled **Use Link-Local Address**, enter the subnet prefix length supplied by your ISP.

**Default Gateway:** Enter the default gateway for your IPv6 connection.

**Primary DNS Server:** Enter the primary DNS server address.

**Secondary DNS Server:** Enter the secondary DNS server address.

**LAN IPv6 Address:** Enter the LAN (local) IPv6 address for the router.

**LAN IPv6 Link-Local Address:** Displays the router's LAN link-local address.

**Enable Automatic IPv6 Address Assignment:** Check to enable the Automatic IPv6 Address Assignment feature.

The screenshot shows the D-Link IPv6 configuration interface. At the top, there's a navigation bar with 'Home', 'Settings', 'Features', and 'Management'. The main heading is 'IPv6' with a sub-note: 'All of your IPv6 Internet and network connection details are displayed on this page.' Below this is a breadcrumb trail: 'Settings >> Internet >> IPv6'. There are tabs for 'DSL', 'ATM', 'IPv4', and a 'Save' button. The configuration is for 'Static IPv6'. A dropdown menu shows 'Static IPv6'. The 'Use Link-Local Address' checkbox is checked. There are input fields for 'Default Gateway', 'Primary DNS Server', and 'Secondary DNS Server'. Under 'LAN IPv6 ADDRESS SETTINGS', there is an input field for 'LAN IPv6 Address' followed by '/64' and 'LAN IPv6 Link-Local Address: Not Available'. Under 'ADDRESS AUTOCONFIGURATION SETTINGS', the 'Enable Automatic IPv6 Address Assignment' checkbox is checked, 'Autoconfiguration Type' is set to 'SLAAC+Stateless DHCP', and 'Router Advertisement Lifetime' is set to '60 minutes'. The footer says 'COPYRIGHT © 2014 D-Link'.

**Autoconfiguration** Select **Stateful (DHCPv6)**, **SLAAC + RDNSS** or **SLAAC + Stateless**  
**Type: DHCPv6.**

**Router Advertisement Lifetime:** Enter the IPv6 address lifetime (in minutes).

Click **Save** when you are done.

The screenshot shows the D-Link IPv6 configuration interface. At the top, there is a navigation bar with 'D-Link' logo, model information 'DSL-3590L HW:A1 FW:EU\_1.00.01', and links for 'Home', 'Settings', 'Features', and 'Management'. The main heading is 'IPv6' with a subtext: 'All of your IPv6 Internet and network connection details are displayed on this page.' Below this is a breadcrumb trail: 'Settings >> Internet >> IPv6'. There are tabs for 'DSL', 'ATM', 'IPv4', and 'Save'. The 'Save' tab is active. The configuration is divided into several sections: 1. 'My Internet Connection Is:' with a dropdown menu set to 'Static IPv6'. 2. 'Use Link-Local Address:' with a toggle switch set to 'Enabled'. 3. 'Default Gateway:', 'Primary DNS Server:', and 'Secondary DNS Server:' each with an empty text input field. 4. 'LAN IPv6 ADDRESS SETTINGS' section containing: 'LAN IPv6 Address:' with an empty text input field followed by '/64', and 'LAN IPv6 Link-Local Address: Not Available'. 5. 'ADDRESS AUTOCONFIGURATION SETTINGS' section containing: 'Enable Automatic IPv6 Address Assignment:' with a toggle switch set to 'Enabled', 'Autoconfiguration Type:' with a dropdown menu set to 'SLAAC+Stateless DHCP', and 'Router Advertisement Lifetime:' with a text input field set to '60' followed by 'minutes'. At the bottom right, there is a link for 'Advanced Settings...'. The footer contains the text 'COPYRIGHT © 2014 D-Link'.

## Auto Configuration (SLAAC/DHCPv6)

This is a connection method where the ISP assigns your IPv6 address when your router requests one from the ISP's server. Some ISPs require you to make some settings on your side before your router can connect to the IPv6 Internet.

**DNS Type:** Select either **Obtain DNS server address automatically** or **Use the following DNS address**.

**Primary DNS Server:** If you selected **Use the following DNS address** above, enter the primary DNS server address.

**Secondary DNS Server:** If you selected **Use the following DNS address** above, enter the secondary DNS server address.

**Enable DHCP-PD:** Enable or disable prefix delegation services.

**LAN IPv6 Address:** If you disabled DHCP-PD, enter the LAN (local) IPv6 address for the router.

**LAN IPv6 Link-Local Address:** Displays the router's LAN link-local address.

**Enable Automatic IPv6 Address Assignment:** Enable or disable the Automatic IPv6 Address Assignment feature.

**Enable Automatic DHCP-PD in LAN:** Enable or disable automatic DHCP-PD services.

The screenshot shows the D-Link IPv6 configuration interface. At the top, there are navigation links for Home, Settings, Features, and Management. The main heading is "IPv6" with a sub-note: "All of your IPv6 Internet and network connection details are displayed on this page." Below this, there is a breadcrumb trail: "Settings >> Internet >> IPv6". A "Save" button is visible in the top right corner of the settings area. The "My Internet Connection is:" dropdown is set to "Auto Configuration". Under "IPv6 DNS SETTINGS", the "DNS Type:" dropdown is set to "Obtain a DNS server address". Under "LAN IPv6 ADDRESS SETTINGS", the "Enable DHCP-PD:" toggle is set to "Enabled", and the "LAN IPv6 Link-Local Address:" is "Not Available". Under "ADDRESS AUTOCONFIGURATION SETTINGS", the "Enable Automatic IPv6 Address Assignment:" toggle is set to "Enabled", the "Enable Automatic DHCP-PD in LAN:" toggle is set to "Enabled", the "Autoconfiguration Type:" dropdown is set to "SLAAC+Stateless DHCP", and the "Router Advertisement Lifetime:" is set to "minutes". A "COPYRIGHT © 2014 D-Link" notice is at the bottom.

**Autoconfiguration** Select **Stateful (DHCPv6)**, **SLAAC + RDNSS** or **SLAAC + Stateless**  
**Type: DHCPv6.**

**Router Advertisement Lifetime:** Enter the IPv6 address lifetime (in minutes).

Click **Save** when you are done.

The screenshot shows the IPv6 configuration interface for a D-Link DSL-3590L router. The page title is "IPv6" and it includes a navigation menu with "Home", "Settings", "Features", and "Management". The breadcrumb trail is "Settings >> Internet >> IPv6".

Key configuration elements visible:

- My Internet Connection Is:** Auto Configuration (dropdown menu)
- IPv6 DNS SETTINGS:** DNS Type: Obtain a DNS server address (dropdown menu)
- LAN IPv6 ADDRESS SETTINGS:** Enable DHCP-PD: Enabled (checkbox), LAN IPv6 Link-Local Address: Not Available
- ADDRESS AUTOCONFIGURATION SETTINGS:** Enable Automatic IPv6 Address Assignment: Enabled (checkbox), Enable Automatic DHCP-PD in LAN: Enabled (checkbox), Autoconfiguration Type: SLAAC+Stateless DHCP (dropdown menu), Router Advertisement Lifetime: [ ] minutes

A "Save" button is located in the top right corner of the configuration area. The footer of the page reads "COPYRIGHT © 2014 D-Link".

## PPPoE

Select **PPPoE** if your Internet connection requires you to enter a username and password. This information is provided by your Internet service provider (ISP).

**PPPoE Session:** Choose **Share with IPv4** to re-use your IPv4 PPPoE username and password, or **Create a new session**.

**Username:** If you selected **Create a new session** above, enter the PPPoE username provided by your ISP here.

**Password:** If you selected **Create a new session** above, enter the PPPoE password provided by your ISP here.

**Address Mode:** Select **Static IP** if your ISP assigned you the IP address, subnet mask, gateway, and DNS server addresses. In most cases, select **Dynamic IP**.

**IP Address:** Enter the IP address provided by your ISP (Static IP only).

**MTU:** Maximum Transmission Unit - you may need to change the MTU for optimal performance with your ISP.

**DNS Type:** Select either **Obtain DNS server address automatically** or **Use the following DNS address**.

**Primary DNS Server:** If you selected **Use the following DNS address** above, enter the primary DNS server address.

**Secondary DNS Server:** If you selected **Use the following DNS address** above, enter the secondary DNS server address.

**Enable DHCP-PD:** Enable or disable prefix delegation services.

The screenshot shows the D-Link IPv6 configuration interface. At the top, there is a navigation bar with 'D-Link' logo, model numbers (DSL-3590L, HW:A1, FW:EU\_1.00.01), and menu items: Home, Settings, Features, and Management. The main heading is 'IPv6' with a sub-note: 'All of your IPv6 Internet and network connection details are displayed on this page.' Below this is a breadcrumb trail: 'Settings >> Internet >> IPv6'. There are tabs for 'DSL', 'ATM', 'IPv4', and a 'Save' button. The configuration fields are as follows:

- My Internet Connection is:** PPPoE (dropdown)
- PPPoE Session:** Share with IPv4 (dropdown)
- Address Mode:** Dynamic IP (dropdown)
- MTU:** 1492 bytes
- IPv6 DNS SETTINGS:** DNS Type: Obtain a DNS server address (dropdown)
- LAN IPv6 ADDRESS SETTINGS:**
  - Enable DHCP-PD: Enabled (checkbox)
  - LAN IPv6 Link-Local Address: Not Available
- ADDRESS AUTOCONFIGURATION SETTINGS:**
  - Enable Automatic IPv6 Address Assignment: Enabled (checkbox)
  - Enable Automatic DHCP-PD in LAN: Enabled (checkbox)
  - Autoconfiguration Type: SLAAC+Stateless DHCP (dropdown)
  - Router Advertisement Lifetime: [ ] minutes

At the bottom right, there is a link for 'Advanced Settings...' and a copyright notice: 'COPYRIGHT © 2014 D-Link'.



**LAN IPv6 Address:** Enter the LAN (local) IPv6 address for the router.

**LAN IPv6 Link-Local Address:** Displays the router's LAN link-local address.

**Enable Automatic IPv6 Address Assignment:** Enable or disable the Automatic IPv6 Address Assignment feature.

**Enable Automatic DHCP-PD in LAN:** Enable or disable DHCP-PD for other IPv6 routers connected to the LAN interface.

**Note:** This feature requires a smaller subnet prefix than /64 (i.e. allowing for a larger address allocation), such as /63. Contact your ISP for more information.

**Autoconfiguration Type:** Select **Stateful (DHCPv6)**, **SLAAC + RDNSS** or **SLAAC + Stateless DHCPv6**.

**Router Advertisement Lifetime:** Enter the IPv6 address lifetime (in minutes).

Click **Save** when you are done.

The screenshot displays the IPv6 configuration interface on a D-Link router. At the top, there are navigation links for Home, Settings, Features, and Management. The main heading is 'IPv6' with a sub-note: 'All of your IPv6 Internet and network connection details are displayed on this page.' Below this, there are tabs for DSL, ATM, IPv4, and a prominent Save button. The configuration is organized into several sections: 'My Internet Connection' is set to PPPoE; 'PPPoE Session' is set to Share with IPv4; 'Address Mode' is set to Dynamic IP with an MTU of 1492 bytes; 'IPv6 DNS SETTINGS' shows 'Obtain a DNS server address'; 'LAN IPv6 ADDRESS SETTINGS' has 'Enable DHCP-PD' set to Enabled and 'LAN IPv6 Link-Local Address' as Not Available; 'ADDRESS AUTOCONFIGURATION SETTINGS' has 'Enable Automatic IPv6 Address Assignment' and 'Enable Automatic DHCP-PD in LAN' both set to Enabled, 'Autoconfiguration Type' set to SLAAC+Stateless DHCP, and 'Router Advertisement Lifetime' set to 0 minutes. A copyright notice for 2014 D-Link is at the bottom.

## IPv6 in IPv4 Tunnel

The user can configure the IPv6 connection to run in IPv4 Tunnel mode. IPv6 over IPv4 tunneling encapsulates IPv6 packets in IPv4 packets so that IPv6 packets can be sent over an IPv4 infrastructure.

**Remote IPv4 Address:** Enter the IPv4 remote address you will use.

**Remote IPv6 Address:** Enter the IPv6 remote address you will use.

**Local IPv4 Address:** Enter the IPv4 local address you will use.

**Local IPv6 Address:** Enter the IPv6 local address you will use.

**Subnet Prefix Length:** Enter the subnet prefix length supplied by your ISP.

**DNS Type:** Select either **Obtain DNS server address automatically** or **Use the following DNS address**.

**Primary DNS Server:** If you selected **Use the following DNS address** above, enter the primary DNS server address.

**Secondary DNS Server:** If you selected **Use the following DNS address** above, enter the secondary DNS server address.

**Enable DHCP-PD:** Enable or disable prefix delegation services.

**LAN IPv6 Address:** If you disabled DHCP-PD, enter the LAN (local) IPv6 address for the router.

The screenshot shows the D-Link IPv6 configuration interface. At the top, there is a navigation bar with 'Home', 'Settings', 'Features', and 'Management'. Below this, the page title is 'IPv6' with a subtitle: 'All of your IPv6 Internet and network connection details are displayed on this page.' The main content area is divided into sections: 'Settings >> Internet >> IPv6' with tabs for 'DSL', 'ATM', 'IPv4', and 'Save'. The 'My Internet Connection is:' dropdown is set to 'IPv6 in IPv4 tunnel'. Below this are input fields for 'Remote IPv4 Address', 'Remote IPv6 Address', 'Local IPv4 Address' (set to 'Not Available'), 'Local IPv6 Address', and 'Subnet Prefix Length'. The 'IPv6 DNS SETTINGS' section has a 'DNS Type:' dropdown set to 'Obtain a DNS server address'. The 'LAN IPv6 ADDRESS SETTINGS' section has 'Enable DHCP-PD:' set to 'Enabled' and 'LAN IPv6 Link-Local Address:' set to 'Not Available'. The 'ADDRESS AUTOCONFIGURATION SETTINGS' section has 'Enable Automatic IPv6 Address Assignment:' set to 'Enabled', 'Enable Automatic DHCP-PD in LAN:' set to 'Enabled', 'Autoconfiguration Type:' set to 'SLAAC+ Stateless DHCP', and 'Router Advertisement Lifetime:' set to '60 minutes'. At the bottom, there is a copyright notice: 'COPYRIGHT © 2014 D-Link'.

**LAN IPv6 Link-Local Address:** Displays the router's LAN link-local address.

**Enable Automatic IPv6 Address Assignment:** Enable or disable the Automatic IPv6 Address Assignment feature.

**Enable Automatic DHCP-PD in LAN:** Enable or disable automatic DHCP-PD services.

**Auto Configuration Type:** Select **Stateful (DHCPv6)**, **SLAAC + RDNSS** or **SLAAC + Stateless DHCPv6**.

**Router Advertisement Lifetime:** Enter the IPv6 address lifetime (in minutes).

Click **Save** when you are done.

The screenshot shows the D-Link router's IPv6 configuration interface. At the top, there's a navigation bar with 'Home', 'Settings', 'Features', and 'Management'. The main heading is 'IPv6' with a sub-note: 'All of your IPv6 Internet and network connection details are displayed on this page.' Below this is a breadcrumb trail: 'Settings >> Internet >> IPv6'. There are tabs for 'DSL', 'ATM', 'IPv4', and a 'Save' button. The configuration is divided into several sections:

- My Internet Connection is:** A dropdown menu set to 'IPv6 in IPv4 tunnel'.
- Remote IPv4 Address:** An empty text input field.
- Remote IPv6 Address:** An empty text input field.
- Local IPv4 Address:** 'Not Available'.
- Local IPv6 Address:** An empty text input field.
- Subnet Prefix Length:** An empty text input field.

Below these are three main sections:

- IPv6 DNS SETTINGS:** 'DNS Type:' dropdown set to 'Obtain a DNS server address'.
- LAN IPv6 ADDRESS SETTINGS:** 'Enable DHCP-PD:' toggle set to 'Enabled'. 'LAN IPv6 Link-Local Address:' is 'Not Available'. A link for 'Advanced Settings...' is visible.
- ADDRESS AUTOCONFIGURATION SETTINGS:** 'Enable Automatic IPv6 Address Assignment:' toggle set to 'Enabled'. 'Enable Automatic DHCP-PD in LAN:' toggle set to 'Enabled'. 'Autoconfiguration Type:' dropdown set to 'SLAAC+Stateless DHCP'. 'Router Advertisement Lifetime:' is set to '60' minutes.

At the bottom, there is a copyright notice: 'COPYRIGHT © 2014 D-Link'.

## 6 to 4

In this section the user can configure the IPv6 6 to 4 connection settings. 6to4 is an IPv6 address assignment and automatic tunneling technology that is used to provide unicast IPv6 connectivity between IPv6 sites and hosts across the IPv4 Internet.

**6 to 4 Address:** Displays the 6 to 4 address.

**6 to 4 Relay:** Enter the 6 to 4 relay supplied by your ISP.

**Primary DNS Server:** Enter the primary DNS server address.

**Secondary DNS Server:** Enter the secondary DNS server address.

**LAN IPv6 Address:** Enter the LAN (local) IPv6 address for the router.

**LAN IPv6 Link-Local Address:** Displays the router's LAN link-local address.

**Enable Automatic IPv6 Address Assignment:** Check to enable the Automatic IPv6 Address Assignment feature.

**Autoconfiguration Type:** Select **Stateful (DHCPv6)**, **SLAAC + RDNSS** or **SLAAC + Stateless DHCPv6**.

**Router Advertisement Lifetime:** Enter the IPv6 address lifetime (in minutes).

Click **Save** when you are done.

The screenshot shows the D-Link IPv6 configuration interface. At the top, there is a navigation bar with 'D-Link' logo, model information (DSL-3590L HW:A1 FW:EU\_1.00.01), and menu items: Home, Settings, Features, and Management. The main heading is 'IPv6' with a sub-note: 'All of your IPv6 Internet and network connection details are displayed on this page.' Below this is a breadcrumb trail: 'Settings >> Internet >> IPv6' and a 'Save' button. The configuration area includes:
 

- 'My Internet Connection is:' dropdown menu set to '6to4'.
- '6to4 Address:' field with value 'Not Available'.
- '6to4 Relay:' text input field with value '192.88.99.1'.
- 'Primary DNS Server:' empty text input field.
- 'Secondary DNS Server:' empty text input field.

 A section titled 'LAN IPv6 ADDRESS SETTINGS' contains:
 

- 'LAN IPv6 Address:' field with value 'FFFF:FFFF:FFFF: :1/64'.
- 'LAN IPv6 Link-Local Address:' field with value 'Not Available'.
- 'Advanced Settings...' link.

 A section titled 'ADDRESS AUTOCONFIGURATION SETTINGS' contains:
 

- 'Enable Automatic IPv6 Address Assignment:' checkbox checked and labeled 'Enabled'.
- 'Autoconfiguration Type:' dropdown menu set to 'SLAAC+Stateless DHCP'.
- 'Router Advertisement Lifetime:' text input field with value 'minutes'.

 At the bottom, there is a copyright notice: 'COPYRIGHT © 2014 D-Link'.

## 6rd

In this section the user can configure the IPv6 6rd connection settings.

**Assign IPv6 Prefix:** Enter the IPv6 prefix.

**Primary DNS Server:** Enter the primary DNS server address.

**Secondary DNS Server:** Enter the secondary DNS server address.

**Enable Hub and Spoke Mode:** Enable if you want to minimize the number of routes to the destination by using a hub and spoke method of networking.

**6rd Configuration:** Choose the **6rd DHCPv4 Option** to automatically discover and populate the data values, or **Manual Configuration** to enter the settings yourself.

**6rd IPv6 Prefix:** Enter the 6rd IPv6 prefix and mask length supplied by your ISP (manual configuration only).

**6rd Border Relay IPv4 Address:** Enter the 6rd border relay IPv4 address settings supplied by your ISP (manual configuration only).

**LAN IPv6 Address:** Enter the LAN (local) IPv6 address for the router.

**LAN IPv6 Link-Local Address:** Displays the router's LAN link-local address.

The screenshot shows the D-Link IPv6 configuration interface. At the top, there is a navigation bar with 'D-Link' logo, model information (DSL-3590L HW:A1 FW:EU\_1.00.01), and menu items for Home, Settings, Features, and Management. The main heading is 'IPv6' with a sub-message: 'All of your IPv6 Internet and network connection details are displayed on this page.' Below this is a breadcrumb trail: 'Settings >> Internet >> IPv6'. There are tabs for 'DSL', 'ATM', 'IPv4', and a 'Save' button. The configuration area includes:
 

- 'My Internet Connection Is:' dropdown menu set to '6rd'.
- 'Assign IPv6 Prefix:' text input field.
- 'Primary DNS Server:' text input field.
- 'Secondary DNS Server:' text input field.
- '6RD MANUAL CONFIGURATION' section:
  - 'Enable Hub and Spoke Mode:' toggle switch set to 'Enabled'.
  - '6rd Configuration:' dropdown menu set to '6rd DHCPv4 Option'.
- 'LAN IPv6 ADDRESS SETTINGS' section:
  - 'LAN IPv6 Address:' status 'Not Available'.
  - 'LAN IPv6 Link-Local Address:' status 'Not Available'.
  - 'Advanced Settings...' link.
- 'ADDRESS AUTOCONFIGURATION SETTINGS' section:
  - 'Enable Automatic IPv6 Address Assignment:' toggle switch set to 'Enabled'.
  - 'Autoconfiguration Type:' dropdown menu set to 'SLAAC+Stateless DHCP'.
  - 'Router Advertisement Lifetime:' text input field with 'minutes' label.

 At the bottom, there is a copyright notice: 'COPYRIGHT © 2014 D-Link'.

**Enable Automatic IPv6 Address Assignment:** Check to enable the Automatic IPv6 Address Assignment feature.

**Autoconfiguration Type: DHCPv6.** Select **Stateful (DHCPv6)**, **SLAAC + RDNSS** or **SLAAC + Stateless**

**Router Advertisement Lifetime:** Enter the IPv6 address lifetime (in minutes).

Click **Save** when you are done.

The screenshot displays the D-Link IPv6 configuration interface. At the top, the D-Link logo and model information (DSL-3590L HW:A1 FW:EU\_1.00.01) are visible, along with navigation links for Home, Settings, Features, and Management. The main heading is 'IPv6', with a sub-note: 'All of your IPv6 Internet and network connection details are displayed on this page.' Below this, there are tabs for 'DSL', 'ATM', 'IPv4', and a prominent 'Save' button. The 'DSL' tab is active, showing 'My Internet Connection Is:' set to '6rd'. Below this are input fields for 'Assign IPv6 Prefix:', 'Primary DNS Server:', and 'Secondary DNS Server:'. A section titled '6RD MANUAL CONFIGURATION' includes 'Enable Hub and Spoke Mode:' (set to 'Enabled') and '6rd Configuration:' (set to '6rd DHCPv4 Option'). The 'LAN IPv6 ADDRESS SETTINGS' section shows 'LAN IPv6 Address: Not Available' and 'LAN IPv6 Link-Local Address: Not Available', with a link to 'Advanced Settings...'. The 'ADDRESS AUTOCONFIGURATION SETTINGS' section includes 'Enable Automatic IPv6 Address Assignment:' (set to 'Enabled'), 'Autoconfiguration Type:' (set to 'SLAAC+Stateless DHCP'), and 'Router Advertisement Lifetime:' (set to an empty field followed by 'minutes'). The footer contains the copyright notice 'COPYRIGHT © 2014 D-Link'.

## Local Connectivity Only

**Local Connectivity Only** allows you to set up an IPv6 connection that will not connect to the Internet.


**Enable ULA:** Click here to enable Unique Local IPv6 Unicast Addresses settings.

**Use Default ULA Prefix:** Checking this box will automatically configure the ULA prefix for the default setting.

**ULA Prefix:** If you wish to choose your own ULA prefix, enter it here.

**Current IPv6 ULA Settings:** This section will display the current settings for your IPv6 ULA.

Click **Save** when you are done.

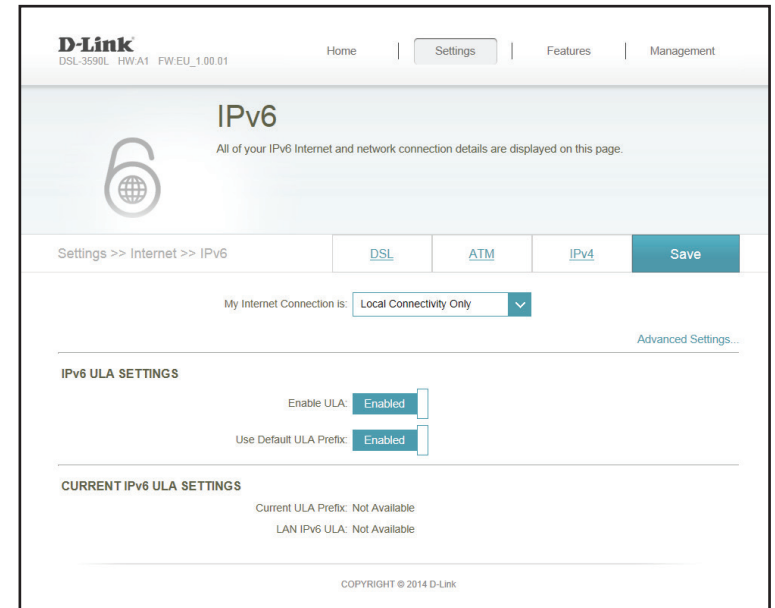

The screenshot shows the D-Link IPv6 configuration page. At the top, the D-Link logo and model information (DSL-3590L HW:A1 FW:EU\_1.00.01) are visible. The page title is 'IPv6' with a subtitle: 'All of your IPv6 Internet and network connection details are displayed on this page.' Below the title is a breadcrumb trail: 'Settings >> Internet >> IPv6'. There are tabs for 'DSL', 'ATM', 'IPv4', and a 'Save' button. A dropdown menu for 'My Internet Connection is:' is set to 'Local Connectivity Only'. Below this, there are two sections: 'IPv6 ULA SETTINGS' and 'CURRENT IPv6 ULA SETTINGS'. In the 'IPv6 ULA SETTINGS' section, 'Enable ULA' and 'Use Default ULA Prefix' are both set to 'Enabled'. The 'CURRENT IPv6 ULA SETTINGS' section shows 'Current ULA Prefix: Not Available' and 'LAN IPv6 ULA: Not Available'. A copyright notice 'COPYRIGHT © 2014 D-Link' is at the bottom.

# ATM

On this page you can configure your Asynchronous Transfer Mode (ATM) settings. If you are unsure, you can obtain these settings from your ISP.

**Interface:** Select the ATM interface from the drop-down menu.

**VPI:** Enter the Virtual Path Indicator (0 - 255).

**VCI:** Enter the Virtual Channel Indicator (32 - 65535).

**Latency:** Select the latency from the drop-down menu.

**Encapsulation:** Select the method of encapsulation provided by your ISP. You can select **LLC** or **VCMUX**.

**ATM QoS:** Select the Quality of Service type from the drop-down menu.

Click **Save** when you are done.

The screenshot shows the D-Link ATM configuration page. The page header includes the D-Link logo and model information (DSL-3590L, HWA1, FW:EU\_1.00.01). The navigation menu has 'Home', 'Settings', 'Features', and 'Management'. The main heading is 'ATM' with a sub-heading 'Use this section to configure your ATM Setting.' Below this is a breadcrumb trail 'Settings >> Internet >> ATM' and a 'Save' button. The configuration form contains the following fields:

- Interface: PVC-1 (8/35) (dropdown menu)
- VPI: 8 (text input)
- VCI: 35 (text input)
- Latency: Path0 (dropdown menu)
- Encapsulation: LLC (dropdown menu)
- ATM QoS: UBR Without PCR (dropdown menu)

There is an 'Advanced Settings...' link at the bottom right of the form area. The footer of the page reads 'COPYRIGHT © 2014 D-Link'.




# DSL

On this page you can configure your DSL settings. If you are unsure, you can obtain these settings from your ISP.

**DSL** Select whether to enable or disable each DSL modulation option.

**Modulation:** Usually it is best to leave these at their defaults, unless otherwise instructed by your ISP.

Click **Save** when you are done.

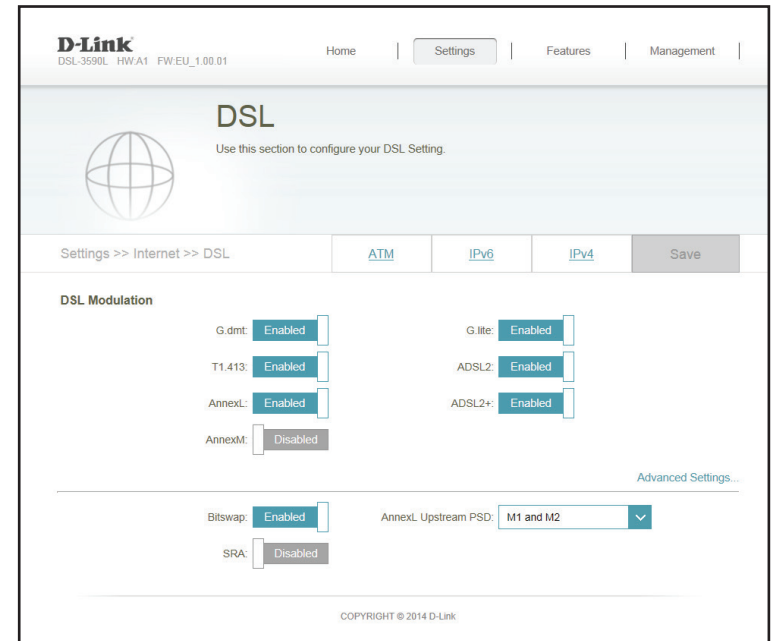

# Wireless

In the Settings menu on the bar on the top of the page, click **Wireless** to see the wireless configuration options. To configure the router's guest zone, click the **Guest Zone** link. Refer to **Guest Zone** on page 92 for details. Click **Advanced Settings...** to expand the list and see all of the options. The following options apply to both the 2.4 GHz and the 5 GHz wireless frequency bands:

**Status:** Enable or disable the wireless frequency band.

**Wi-Fi Name (SSID):** Create a name for your wireless network using up to 32 characters.

**Password:** Create a password to use for wireless security. Wireless clients will need to enter this password to successfully connect to the network.

**Security Mode:** Choose **None**, **WEP**, or **WPA/WPA2-(Personal)** (recommended).

**802.11 Mode:** Select the desired wireless networking standards to use. The available options will depend on the wireless frequency band, as well as the currently selected security mode.

**Wi-Fi Channel:** Select the desired channel. The default is **Auto** (recommended).

**Transmission Power:** Select the desired wireless transmission power.

**Channel Width:** A higher channel width allows for faster data transmission, at the possible expense of wireless coverage and compatibility with older wireless clients. Select the optimum channel width for your wireless network from the drop-down menu.

**Visibility Status:** The default setting is **Visible**. Select **Invisible** if you do not want to broadcast the SSID of your wireless network.

**D-Link**  
DSL-3590L HW:V1 FW:EU\_1.00.01

Home | Settings | Features | Management

## Wireless

Use this section to configure the wireless settings for your D-Link Router. Please make sure that any changes made in this section will need to be updated on your wireless device.

Settings >> Wireless [Guest Zone](#) [Save](#)

### 2.4GHz

Status:  Enabled

Wi-Fi Name (SSID):

Password:

[Advanced Settings...](#)

Security Mode:

802.11 Mode:

Wi-Fi Channel:

Transmission Power:

Channel Width:

coexistence:  Enabled

Visibility Status:

Schedule:

---

### 5GHz

Status:  Enabled

Wi-Fi Name (SSID):

Password:

[Advanced Settings...](#)

Security Mode:

802.11 Mode:

Wi-Fi Channel:

Transmission Power:

Channel Width:

Visibility Status:

Schedule:

COPYRIGHT © 2014 D-Link

**Schedule:** Use the drop-down menu to select the time schedule that the Wi-Fi network will be active during. The schedule may be set to **Always Enable**, or you can create your own schedules in the **Schedules** section (refer to **Schedule** on page 110).

Click **Save** when you are done.

The screenshot shows the D-Link DSL-3590L wireless settings interface. At the top, there is a navigation bar with 'Home', 'Settings', 'Features', and 'Management'. The main heading is 'Wireless', with a sub-heading 'Use this section to configure the wireless settings for your D-Link Router. Please make sure that any changes made in this section will need to be updated on your wireless device.' Below this, there are two sections for configuring wireless networks: 2.4GHz and 5GHz. Each section includes a 'Status' toggle (set to 'Enabled'), a 'Wi-Fi Name (SSID)' field, and a 'Password' field. The 2.4GHz section also includes a 'Security Mode' dropdown (set to 'None'), an '802.11 Mode' dropdown (set to 'Mixed 802.11b/g/n'), a 'Wi-Fi Channel' dropdown (set to 'Auto'), a 'Transmission Power' dropdown (set to 'High'), a 'Channel Width' dropdown (set to 'Auto 20/40 MHz'), a 'coexistence' toggle (set to 'Enabled'), a 'Visibility Status' dropdown (set to 'Visible'), and a 'Schedule' dropdown (set to 'Always Enable'). The 5GHz section includes similar settings, with the '802.11 Mode' set to 'Mixed 802.11a/n/ac' and the 'Channel Width' set to 'Auto 20/40/80 MHz'. At the bottom of the page, there is a copyright notice: 'COPYRIGHT © 2014 D-Link'.

## Guest Zone

The guest zone feature will allow you to create temporary zones that can be used by guests to access the Internet. These zones will be separate from your main wireless network. You may configure different zones for the 2.4 GHz and 5 GHz wireless bands.

In the Settings menu on the bar on the top of the page, click **Wireless**, then click the **Guest Zone** link. Click **Advanced Settings...** to expand the list and see all of the options. The following options apply to both the 2.4 GHz and the 5 GHz wireless frequency bands:

**Status:** Enable or disable the guest zone for each wireless frequency band.

**Wi-Fi Name (SSID):** Enter a wireless network name (SSID) that is different from your main wireless network.

**Password:** Create a password to use for wireless security. Wireless clients will need to enter this password to successfully connect to the guest zone.

**Internet Access Only:** Enabling this option will confine connectivity to the Internet, disallowing guests from accessing other local network devices and any other service provided by the router itself.

Click **Save** when you are done.

The screenshot displays the D-Link Guest Zone configuration interface. At the top, the D-Link logo and model information (DSL-3590L HW:V1 FW:EU\_1.00.01) are visible, along with navigation links for Home, Settings, Features, and Management. The main heading is "Guest Zone", accompanied by an icon of two people and a descriptive paragraph: "This page lets you enable and configure a Wi-Fi Guest Zone. Users connected to a Guest Zone cannot communicate or detect devices on your home network unless Internet Access Only is disabled under Home Network Access." Below this, a breadcrumb trail reads "Settings >> Wireless >> Guest Zone". A "Wi-Fi" tab and a "Save" button are present. The configuration is divided into three sections: 2.4GHz, 5GHz, and Home Network Access. In the 2.4GHz section, the Status is "Enabled", the Wi-Fi Name (SSID) is "D-Link DSL-3590L\_GUEST", and the Password field is empty. The 5GHz section shows the Status as "Enabled", the Wi-Fi Name (SSID) as "D-Link DSL-3590L\_5GHz\_GUEST", and an empty Password field. The Home Network Access section has the Internet Access Only option set to "Enabled". A copyright notice "COPYRIGHT © 2014 D-Link" is at the bottom.

# Network

This section will allow you to change the local network settings of the router and to configure the DHCP settings. In the Settings menu on the bar on the top of the page, click **Network**. Click **Advanced Settings...** to expand the list and see all of the options.

**LAN IP Address:** Enter the IP address of the router. The default IP address is **192.168.1.1**.

If you change the IP address, once you click **Save**, you will need to enter the new IP address in your browser to get back into the configuration utility.

**Subnet Mask:** Enter the subnet mask of the router. The default subnet mask is **255.255.255.0**.

**Management Link:** The default address to access the router's configuration is **http://dlinkrouter.local/**. Here, you can replace **dlinkrouter** with a name of your choice.

**Local Domain Name:** Enter the domain name (optional).

**Enable DNS Relay:** Disable to transfer the DNS server information from your ISP to your computers. If enabled, your computers will use the router for a DNS server.

**Status:** Enable or disable the DHCP server.

**DHCP IP Address Range:** Enter the starting and ending IP addresses for the DHCP server's IP assignment.

**Note:** If you statically (manually) assign IP addresses to your computers or devices, make sure the IP addresses are outside of this range or you may have an IP conflict.

The screenshot displays the D-Link Network configuration interface. At the top, the D-Link logo and model information (DSL-3590L HW:A1 FW:EU\_1.00.01) are shown, along with navigation links for Home, Settings, Features, and Management. The main heading is "Network", with a sub-heading "Settings >> Network" and a "Save" button. The "Network Settings" section includes input fields for LAN IP Address (192.168.1.1), Subnet Mask (255.255.255.0), Management Link (http://dlinkrouter.local/), and Local Domain Name. The "Enable DNS Relay" option is set to "Enabled". Below this is the "DHCP Server" section, where the "Status" is "Enabled", the "DHCP IP Address Range" is 192.168.1.2 to 192.168.1.254, the "DHCP Lease Time" is 1440 minutes, and "Always Broadcast" is "Enabled". The "Advanced Settings" section shows "UPnP" as "Enabled", "IPv4 Multicast Streams" as "Disabled", and "IPv6 Multicast Streams" as "Disabled". A "Save" button is located in the top right corner of the configuration area. A copyright notice "COPYRIGHT © 2014 D-Link" is visible at the bottom of the page.

**DHCP Lease Time:** Enter the length of time for the IP address lease in minutes.

**Always Broadcast:** Enable this feature to broadcast your networks DHCP server to LAN/WLAN clients.

**UPnP:** Enable or disable Universal Plug and Play (UPnP). UPnP provides compatibility with networking equipment, software and peripherals.

**IPv4 Multicast Stream:** Enable to allow IPv4 multicast traffic to pass through the router from the Internet.

**IPv6 Multicast Stream:** Enable to allow IPv6 multicast traffic to pass through the router from the Internet.

Click **Save** when you are done.

The screenshot shows the D-Link web interface for Network Settings. The page title is "Network" and it includes a "Save" button. The settings are organized into three sections: Network Settings, DHCP Server, and Advanced Settings.

**Network Settings:**

- LAN IP Address: 192.168.1.1
- Subnet Mask: 255.255.255.0
- Management Link: http://dlinkrouter.local/
- Local Domain Name: [empty]
- Enable DNS Relay:

**DHCP Server:**

- Status:
- DHCP IP Address Range: 192.168.1.2 to 192.168.1.254
- DHCP Lease Time: 1440 minutes
- Always Broadcast:  (compatibility for some DHCP Clients)

**Advanced Settings:**

- UPnP:
- IPv4 Multicast Streams:
- IPv6 Multicast Streams:

Copyright © 2014 D-Link

# SharePort

This page will allow you to set up access to files on an external USB device plugged into the router. You can do this through the local network or from the Internet using either a web browser or an app on your smartphone or tablet. In the Settings menu on the bar on the top of the page, click **SharePort**.

**Status:** Check to enable the media server functions, allowing connected clients access to media files over the network.

**UPnP Media Server:** Choose a name for your media server so that it can be found.

**Windows File Sharing (SAMBA):** Choose either **Allow all users to access (no password)** or **Require router's admin password** to specify whether the router's password will be required for access.

**Web File Access:** Enable remote access to files stored on a USB device plugged into the router through a web browser.

**Direct Links:** This area will display the HTTP and HTTPS links to connect to your SharePort drive through a web browser from a device on your network.

**FTP File Access:** To allow file access via FTP, ensure that the **Status** is **Enabled**. **Enable Remote FTP Access** allows users to access files from outside the network via FTP. If this is enabled, enter the **Remote FTP Port**, **Maximum Users**, **Login Timeout**, and the **Maximum Idle Time**.

Click **Save** when you are done.

To manage user accounts for SharePort access, click **Create User** and refer to the next page for details.

**D-Link**  
DSL-3590L HW:V1 FW:EU\_1.00.01

Home | Settings | Features | Management

## SharePort

The built-in UPnP media server streams music, videos, and photos stored on an attached USB drive to PCs, smartphones, tablets, smart TVs, or other media devices on your network. Web File Access allows you to access files on an attached USB drive through a web browser.

Settings >> SharePort Create User Save

**UPnP Media Server**

Status:  Enabled

UPnP Media Server:

---

**Windows File Sharing (SAMBA)**

Status:  Enabled

Windows File Sharing:  ▼

---

**Web File Access**

Status:  Enabled

Direct Links: <http://shareport.local/>  
<https://shareport.local/>

---

**FTP File Access**

Status:  Enabled

Enable Remote FTP Access:  Enabled

Remote FTP Port:

Maximum Users:

Login Timeout:  minutes

Maximum Idle Time:  minutes

FTP Direct Links: [Not Available](#)

COPYRIGHT © 2014 D-Link

## Create User

The Create User page allows you to manage your SharePort user accounts. The current list of user accounts will be displayed, along with their current permissions and access path. If they do not have an account set up, users will be restricted to guest access; only having access to the "Guest" folder on the media server. The router can store a maximum of ten accounts (including the "Admin" account).

If you wish to remove an account, click on its trash can icon in the Delete column. If you wish to edit an account, click on its pencil icon in the Edit column. If you wish to create a new account, click the **Create User** button. If you edit or create a user, the following options will appear:



**User Name:** Enter the desired user name for the new account.

**Password:** Enter the password which the user will need to enter when logging in.

**Permission:** Select either **Read Only** or **Read/Write** to control whether the user can edit, add, or delete files on the device.

**Folder:** Choose the parent folder that the user will be able to access. Files and folders on a higher level will be unavailable. "root" means that the user can access all files on the device. To change the selected folder, click **Browse** and browse to the desired folder.

Click **OK** when you are done. The new user should be added to the list of user accounts. To save the new list, click **Save**. To return to the SharePort page, click **SharePort**.

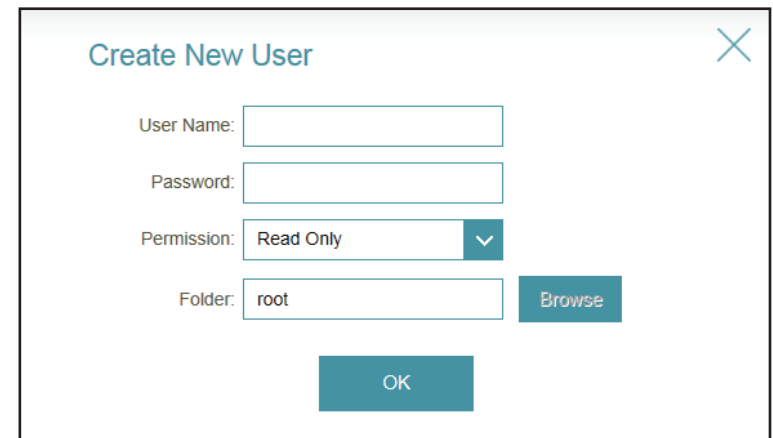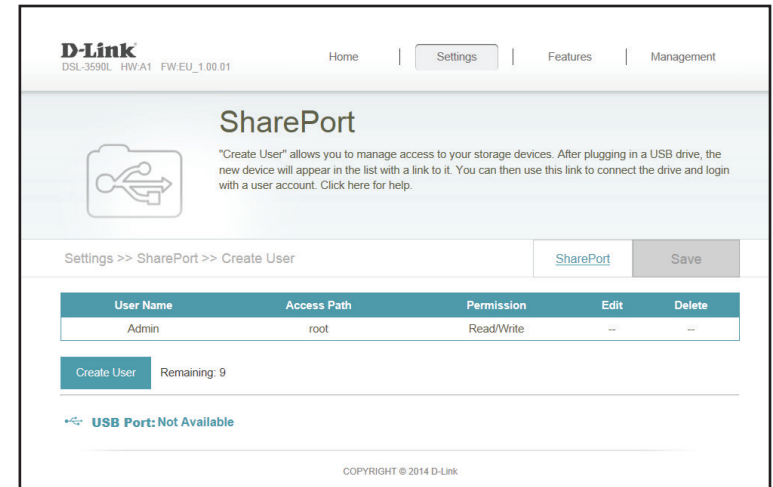



# mydlink

Enabling mydlink will allow you to access and manage the mydlink-compatible devices on your network. This can be done either through a web browser or via a smartphone app.

This page allows you to sign in to an existing mydlink account, or sign up for a new mydlink account. In the Settings menu on the bar on the top of the page, click **mydlink**.

If you do not already have a mydlink account, click **No, I want to create a new mydlink account**. Fill out your email address (which will also function as your username), choose a password, and enter your first and last name. Then, click **Sign Up** to create your new mydlink account.

If you already have a mydlink account, click **Yes, I have a mydlink account**. Enter your email address (which is also your username) and your password. Then, click **Sign In** to register your existing mydlink account with your router.

The screenshot shows the mydlink registration page. At the top, there is a navigation bar with 'D-Link DSL-3590L HW:A1 FW:EU\_1.00.01' on the left and 'Home', 'Settings', 'Features', and 'Management' on the right. Below the navigation bar is the mydlink logo and a brief description of the service. The main content area is titled 'mydlink Registration' and contains a form. The form has a question: 'Do you have an existing mydlink account?' with two radio button options: 'Yes, I have a mydlink account.' and 'No, I want to create a new mydlink account.' The second option is selected. Below this are four input fields: 'E-mail Address (Account Name):', 'Password:', 'First Name:', and 'Last Name:'. At the bottom of the form, there is a checkbox labeled 'I accept the mydlink terms and conditions.' and a 'Sign Up' button. The footer of the page reads 'COPYRIGHT © 2014 D-Link'.

The screenshot shows the mydlink registration page. At the top, there is a navigation bar with 'D-Link DSL-3590L HW:A1 FW:EU\_1.00.01' on the left and 'Home', 'Settings', 'Features', and 'Management' on the right. Below the navigation bar is the mydlink logo and a brief description of the service. The main content area is titled 'mydlink Registration' and contains a form. The form has a question: 'Do you have an existing mydlink account?' with two radio button options: 'Yes, I have a mydlink account.' and 'No, I want to create a new mydlink account.' The first option is selected. Below this are two input fields: 'E-mail Address (Account Name):' and 'Password:'. At the bottom of the form, there is a 'Sign In' button. The footer of the page reads 'COPYRIGHT © 2014 D-Link'.

# Features

## QoS Engine

This section will allow you to prioritize particular clients over others, so that those clients receive higher bandwidth. For example, if one client is streaming a movie and another is downloading a non-urgent file, you might wish to assign the former device a higher priority than the latter so that the movie streaming is not disrupted by the traffic of the other devices on the network.

In the **Features** menu on the bar on the top of the page, click **QoS Engine**.

Under All Devices, you will see device cards representing each connected client. If some are off-screen, you can use the < and > buttons to scroll through the cards.

A maximum of **one** device can be assigned **Highest** priority.



A maximum of **two** devices can be assigned **High** priority.

A maximum of **eight** devices can be assigned **Medium** priority.

If no devices are explicitly assigned a priority, they will all be treated with equal priority. If some devices are not assigned a priority and others are, the unassigned devices will be treated with the lowest priority.

To assign a priority level to a device, drag the device card from the All Devices list over an empty slot and release the mouse button. The card will remain in the slot. If you want to remove a priority assignment from a device and return it to the All Devices list, click the cross icon in the top right of the device card.

Click **Save** when you are done.

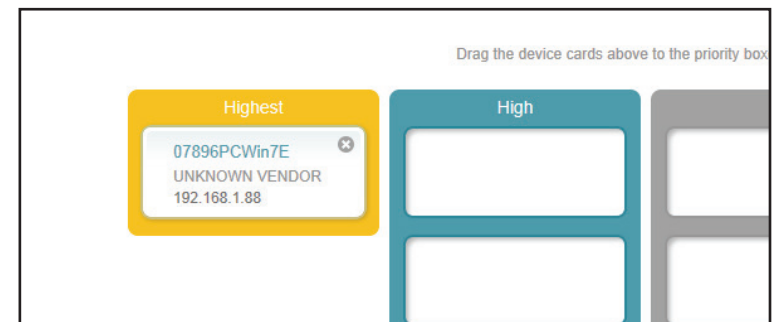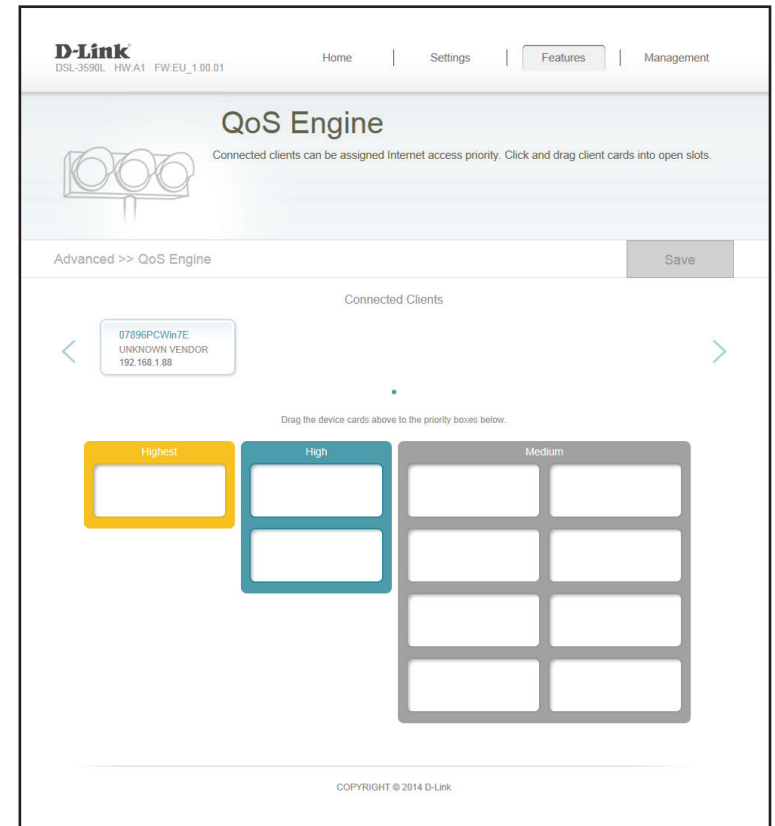

# Firewall Settings

The router's firewall protects your network from malicious attacks over the Internet. In the **Features** menu on the bar on the top of the page, click **Firewall Settings**. Click **Advanced Settings...** to expand the list and see all of the options.

**Enable DMZ:** Enable or disable Demilitarized Zone (DMZ). This completely exposes the client to threats over the Internet, and is not recommended in ordinary situations.

**DMZ IP Address:** If you enabled DMZ, enter the IP address of the client you wish to expose, or use the drop-down menu to quickly select it.

**Enable SPI IPv4:** Enabling Stateful Packet Inspection (SPI) helps to prevent cyber attacks by validating that the traffic passing through the session conforms to the protocol.

**Enable Anti-Spoof Checking:** Enable this feature to protect your network from certain kinds of "spoofing" attacks.

**IPv6 Simple Security:** Enable or disable IPv6 simple security.

**IPv6 Ingress Filtering:** Enable or disable IPv6 ingress filtering.

The screenshot displays the D-Link Firewall Settings page. At the top, the navigation bar includes 'Home', 'Settings', 'Features', and 'Management'. The main heading is 'Firewall Settings' with a sub-description: 'Your router's high-performance firewall feature continuously monitors Internet traffic, protecting your network and connected devices from malicious Internet attacks.' Below this, there is a breadcrumb trail 'Advanced >> Firewall Settings >> Advanced' and two tabs: 'IPv4 Rules' and 'IPv6 Rules'. A 'Save' button is located in the top right corner of the settings area.

The configuration options are as follows:

- Enable DMZ:  Enabled
- DMZ IP Address:  << Computer Name (dropdown)
- Enable SPI IPv4:  Enabled
- Enable Anti-spoof Checking:  Disabled
- IPv6 Simple Security:  Disabled
- IPv6 Ingress Filtering:  Disabled

Below these settings is a link for 'Advanced Settings...'. The 'Application Level Gateway (ALG) Configuration' section includes:

- PPTP:  Enabled
- IPSec (VPN):  Enabled
- RTSP:  Enabled
- SIP:  Enabled

The footer of the interface states 'COPYRIGHT © 2014 D-Link'.


**PPTP:** Allows multiple machines on the LAN to connect to their corporate network using the PPTP protocol.

**IPSec (VPN):** Allows multiple VPN clients to connect to their corporate network using IPSec. Some VPN clients support traversal of IPSec through NAT. This Application Level Gateway (ALG) may interfere with the operation of such VPN clients. If you are having trouble connecting with your corporate network, try turning this ALG off. Please check with the system administrator of your corporate network whether your VPN client supports NAT traversal.

**RTSP:** Allows applications that uses Real Time Streaming Protocol (RTSP) to receive streaming media from the Internet.

**SIP:** Allows devices and applications using VoIP (Voice over IP) to communicate across NAT. Some VoIP applications and devices have the ability to discover NAT devices and work around them. This ALG may interfere with the operation of such devices. If you are having trouble making VoIP calls, try turning this ALG off.

Click **Save** when you are done.

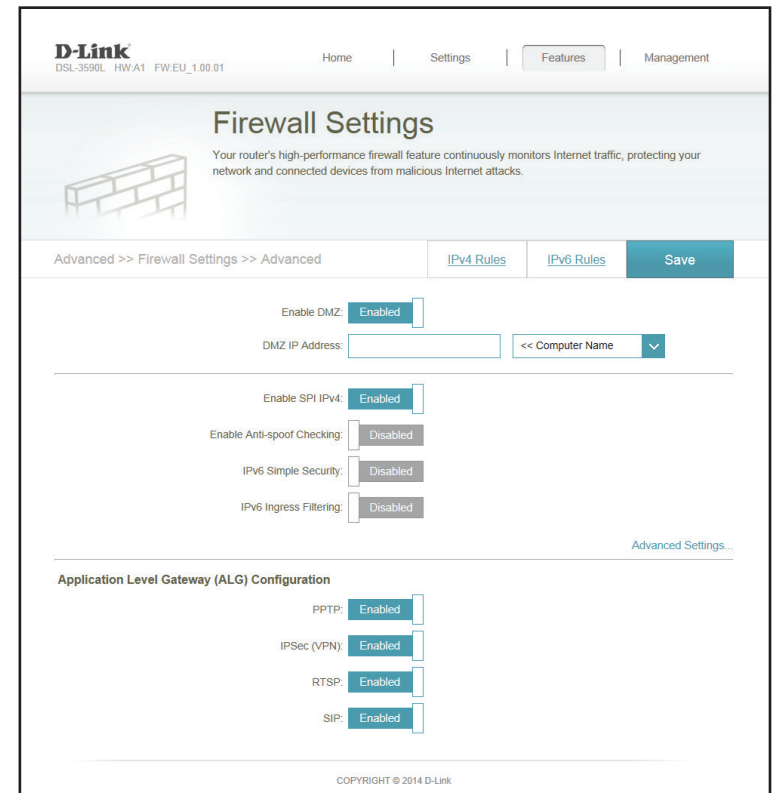

## IPv4/IPv6 Rules

The IPv4/IPv6 Rules section is an advanced option that lets you configure what kind of traffic is allowed to pass through the network. To configure the IPv4 rules, from the Firewall Settings page click **IPv4 Rules**. To configure IPv6 rules, from the Firewall Settings page click **IPv6 Rules**. To return to the main Firewall Settings page, click **Security Check**.

To begin, use the drop-down menu to select whether you want to **ALLOW** or **DENY** the rules you create. You can also choose to turn filtering **OFF**.

If you wish to remove a rule, click on its trash can icon in the Delete column. If you wish to edit a rule, click on its pencil icon in the Edit column. If you wish to create a new rule, click the **Add Rules** button. Click **Save** when you are done. If you edit or create a rule, the following options will appear:

**Name:** Enter a name for the rule.


**Source IP Address Range:** Enter the source IP address range that the rule will apply to, and using the drop-down menu, specify whether it is a **WAN** or **LAN** IP address.

**Destination IP Address Range:** Enter the destination IP address range that the rule will apply to, and using the drop-down menu, specify whether it is a **WAN** or **LAN** IP address.

**Port Range:** Select the protocol of the traffic to allow or deny (**Any**, **TCP**, or **UDP**) and then enter the range of ports that the rule will apply to.

**Schedule:** Use the drop-down menu to select the time schedule that the rule will be enabled on. The schedule may be set to **Always Enable**, or you can create your own schedules in the **Schedules** section (refer to **Schedule** on page 110).

Click **Apply** when you are done.

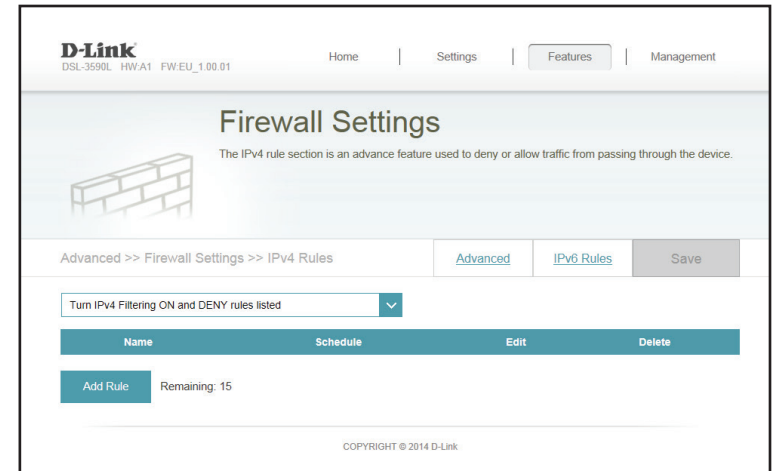

# Port Forwarding

Port forwarding allows you to specify a port or range of ports to open for specific devices on the network. This might be necessary for certain applications to connect through the router. In the **Features** menu on the bar on the top of the page, click **Port Forwarding**.

If you wish to remove a rule, click on its trash can icon in the Delete column. If you wish to edit a rule, click on its pencil icon in the Edit column. If you wish to create a new rule, click the **Add Rules** button. Click **Save** when you are done. If you edit or create a rule, the following options will appear:

**Name:** Enter a name for the rule.



**Local IP:** Enter the IP address of the computer on your local network that you want to allow the incoming service to. Alternatively, select the device from the drop-down menu.

**TCP Port:** Enter the TCP ports that you want to open. You can enter a single port or a range of ports. Separate ports with a comma (for example: 24, 1009, 3000-4000).

**UDP Port:** Enter the UDP ports that you want to open. You can enter a single port or a range of ports. Separate ports with a comma (for example: 24, 1009, 3000-4000).

**Schedule:** Use the drop-down menu to select the time schedule that the rule will be enabled on. The schedule may be set to **Always Enable**, or you can create your own schedules in the **Schedules** section (refer to **Schedule** on page 110).

Click **Apply** when you are done.

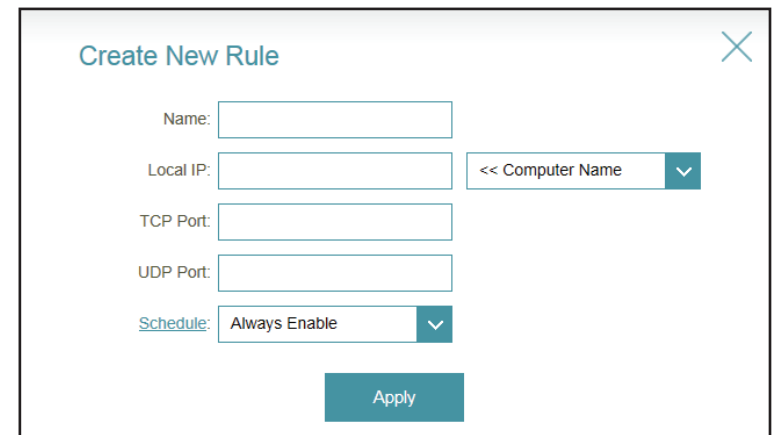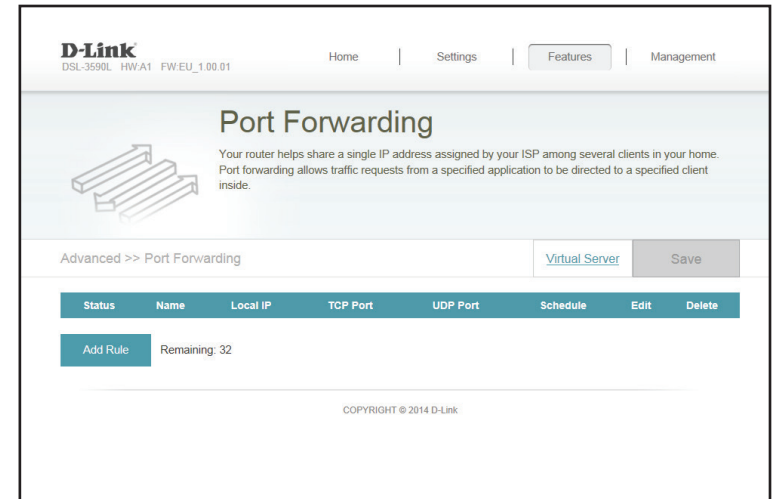

## Virtual Server

The virtual server allows you to specify a single public port on your router for redirection to an internal LAN IP Address and Private LAN port. To configure the virtual server, from the Port Forwarding page click **Virtual Server**. To return to the main Port Forwarding page, click **Port Forwarding**.

If you wish to remove a rule, click on its trash can icon in the Delete column. If you wish to edit a rule, click on its pencil icon in the Edit column. If you wish to create a new rule, click the **Add Rules** button. Click **Save** when you are done. If you edit or create a rule, the following options will appear:

**Name:** Enter a name for the rule.

**Local IP:** Enter the IP address of the computer on your local network that you want to allow the incoming service to. Alternatively, select the device from the drop-down menu.

**Protocol:** Select the protocol of the traffic to allow or deny (**TCP**, **UDP**, **Both**, or **Other**).


**Protocol Number:** If you entered **Other** above, enter the protocol number.

**External Port:** Enter the public port you want to open.

**Internal Port:** Enter the private port you want to open.

**Schedule:** Use the drop-down menu to select the time schedule that the rule will be enabled on. The schedule may be set to **Always Enable**, or you can create your own schedules in the **Schedules** section (refer to **Schedule** on page 110).

Click **Apply** when you are done.

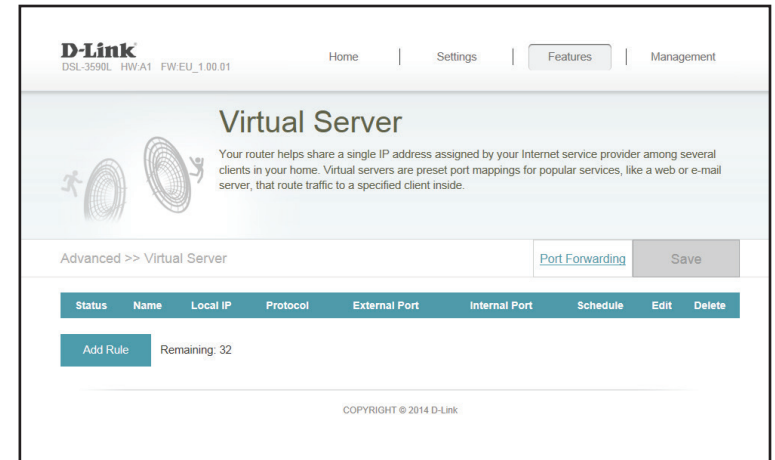

# Website Filter


The website filter settings allow you to block access to certain web sites. You can either create a list of sites to block, or create a list of sites to allow (with all other sites being blocked).

In the **Features** menu on the bar on the top of the page, click **Website Filter**.

If you want to create a list of sites to block, select **DENY computers access to ONLY these sites** from the drop-down menu. All other sites will be accessible. If you want to specify a list of sites to allow, select **ALLOW computers access to ONLY these sites** from the drop-down menu. All other sites will be blocked.

You may specify a maximum of fifteen web sites. To add a new site to the list, click **Create New Rule**. Next, under Website URL/Domain enter the URL or domain. If you wish to remove a rule, click on its trash can icon in the Delete column. If you wish to edit a rule, simply replace the URL or domain.

Click **Save** when you are done.

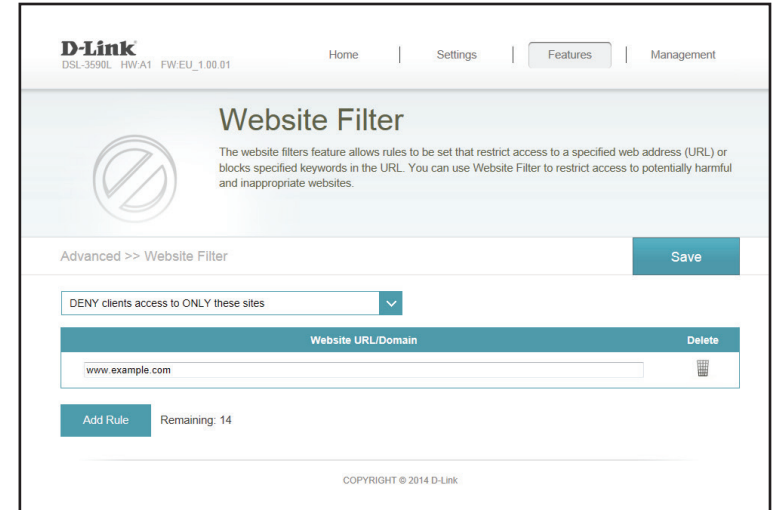



# Static Routes

The Static Routes section allows you to define custom routes to control how data traffic is moved around your network.

In the **Features** menu on the bar on the top of the page, click **Static Routes**. To configure IPv6 rules, click **IPv6** and refer to **IPv6** on page 106. To return to the main IPv4 static routes page, click **IPv4**.

If you wish to remove a rule, click on its trash can icon in the Delete column. If you wish to edit a rule, click on its pencil icon in the Edit column. If you wish to create a new rule, click the **Add Rules** button. Click **Save** when you are done. If you edit or create a rule, the following options will appear:

**Name:** Enter a name for the rule.

**Destination Network:** Enter the IP address of packets that will take this route.


**Mask:** Enter the netmask of the route.

**Gateway:** Enter your next hop gateway to be taken if this route is used.

**Metric:** The route metric is a value from 1 to 16 that indicates the cost of using this route. A value 1 is the lowest cost and 15 is the highest cost.

**Interface:** Select the interface that the IP packet must use to transit out of the router when this route is used.

Click **Apply** when you are done.

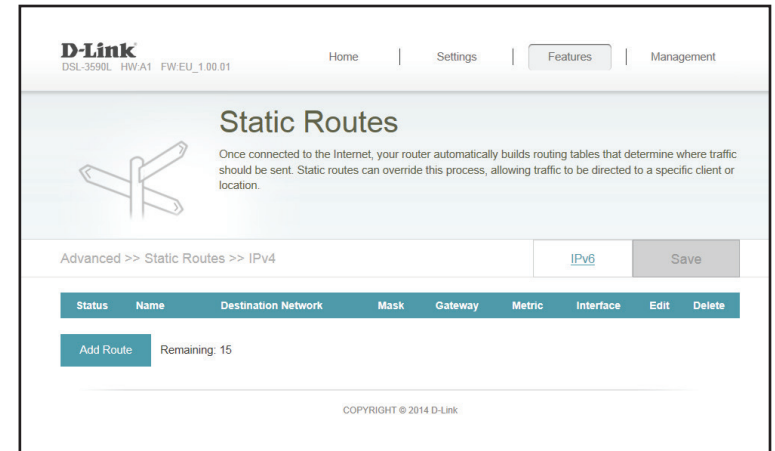

## IPv6

To configure IPv6 rules, on the Static Routes page click **IPv6**. To return to the main IPv4 static routes page, click **IPv4**.

If you wish to remove a rule, click on its trash can icon in the Delete column. If you wish to edit a rule, click on its pencil icon in the Edit column. If you wish to create a new rule, click the **Add Rules** button. Click **Save** when you are done. If you edit or create a rule, the following options will appear:

**Name:** Enter a name for the rule.


**DestNetwork:** This is the IP address of the router used to reach the specified destination.

**PrefixLen:** Enter the IPv6 address prefix length of the packets that will take this route.

**Metric:** Enter the metric value for this rule here.

**Interface:** Select the interface that the IP packet must use to transit out of the router when this route is used.

Click **Apply** when you are done.

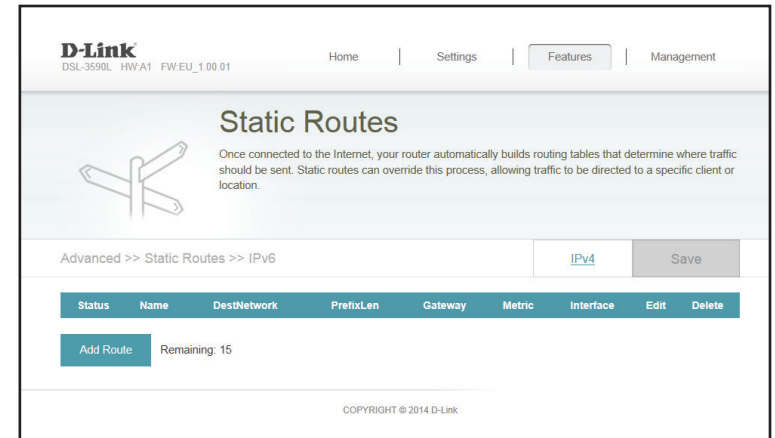

# Dynamic DNS

Most Internet Service Providers (ISPs) assign dynamic (changing) IP addresses. Using a dynamic DNS service provider, people can enter your domain name in their web browser to connect to your server no matter what your IP address is.

In the **Features** menu on the bar on the top of the page, click **Dynamic DNS**.

**Enable Dynamic DNS:** Enabling dynamic DNS will reveal further configuration options.

**Status:** Displays the current dynamic DNS connection status.

**Server Address:** Enter the address of your dynamic DNS server, or select one from the drop-down menu.

**Host Name:** Enter the host name that you registered with your dynamic DNS service provider.

**User Name:** Enter your dynamic DNS username.

**Password:** Enter your dynamic DNS password.

**Time Out:** Enter a timeout time (in hours).

Click **Save** when you are done.

At the bottom of the page are the IPv6 host settings. To configure an IPv6 dynamic DNS host, refer to **IPv6 Host** on page 108.

**D-Link**  
DSL-3590L HW:V1 FW:EU\_1.00.01

Home | Settings | Features | Management

## Dynamic DNS

Dynamic Domain Name Service allows your router to associate an easy-to-remember domain name such as [YourDomainName].com with the regularly changing IP address assigned by your Internet Service provider. This feature is helpful when running a virtual server.

Advanced >> Dynamic DNS Save

Enable Dynamic DNS:  Enabled

Status: Disconnected

Server Address:

Host Name:

User Name:

Password:

Time Out:  hours

Status	Host Name	IPv6 Address	Edit	Delete
<input type="button" value="Add Record"/> Remaining: 10				

COPYRIGHT © 2014 D-Link

## IPv6 Host

The IPv6 host settings are found at the bottom of the Dynamic DNS page.

If you wish to remove a rule, click on its trash can icon in the Delete column. If you wish to edit a rule, click on its pencil icon in the Edit column. If you wish to create a new rule, click the **Add Record** button. Click **Save** when you are done. If you edit or create a rule, the following options will appear:

**Host Name:** Enter the host name that you registered with your dynamic DNS service provider.

**IPv6 Address:** Enter the IPv6 address of the dynamic DNS server. Alternatively, select the server device in the drop-down menu.

Click **Apply** when you are done.

Status	Host Name	IPv6 Address	Edit	Delete
Add Record	Remaining: 10			

COPYRIGHT © 2014 D-Link

### Create New Record

Host Name:

IPv6 Address:  << Computer Name

# Management

## Time & Schedule

### Time

The Time page allows you to configure, update, and maintain the correct time on the internal system clock. From here you can set the time zone, the Network Time Protocol (NTP) server, and enable or disable daylight saving time.

In the Management menu on the bar on the top of the page, click **Time & Schedule**.

**Time Zone:** Select your time zone from the drop-down menu.

**Time:** Displays the current date and time of the router.

**Daylight Saving:** Enable or disable daylight saving time.

**Update Time Using an NTP Server:** Enable or disable to allow an NTP server on the Internet to synchronize the time and date with your router. If you enable this option, select an NTP server from the drop-down menu. To configure the router's time and date manually, disable this option and use the drop-down menus that appear to input the time and date.

Click **Save** when you are done.

To configure and manage your schedules, click **Schedule** and refer to **Schedule** on page 110.

The screenshot shows the D-Link router's web interface for the 'Time' configuration page. At the top, there is a navigation bar with 'Home', 'Settings', 'Features', and 'Management' (selected). Below the navigation bar, the page title is 'Time' with a subtitle: 'Your router's internal clock is used for data logging and schedules for features. The date and time can be synchronized with a public time server on the Internet, or set manually.' A clock icon is visible on the left. The main content area is divided into two sections: 'Time Configuration' and 'Automatic Time Configuration'. In the 'Time Configuration' section, 'Time Zone' is set to '(GMT-12:00) International Date Line West', 'Time' is 'NaN/NaN/NaN NaN:NaN:NaN PM', and 'Enable Daylight Saving' is 'Disabled'. In the 'Automatic Time Configuration' section, 'Update Time Using an NTP Server' is 'Enabled', and 'NTP Server' is 'D-Link NTP Server'. At the bottom, there is a 'COPYRIGHT © 2014 D-Link' notice.

## Schedule

Some configuration rules can be set according to a pre-configured schedule. To create, edit, or delete schedules, from the Time page click **Schedule**. To return to the Time page, click **Time**.




If you wish to remove a rule, click on its trash can icon in the Delete column. If you wish to edit a rule, click on its pencil icon in the Edit column. If you wish to create a new rule, click the **Add Rules** button. Click **Save** when you are done. If you edit or create a rule, the following screen will appear:

First, enter the name of your schedule in the **Name** field.

Each box represents one hour, with the time at the top of each column. To add a time period to the schedule, simply click on the start hour and drag to the end hour. You can add multiple days to the schedule, but only one period per day.

To remove a time period from the schedule, click on the cross icon.

Click **Apply** when you are done.

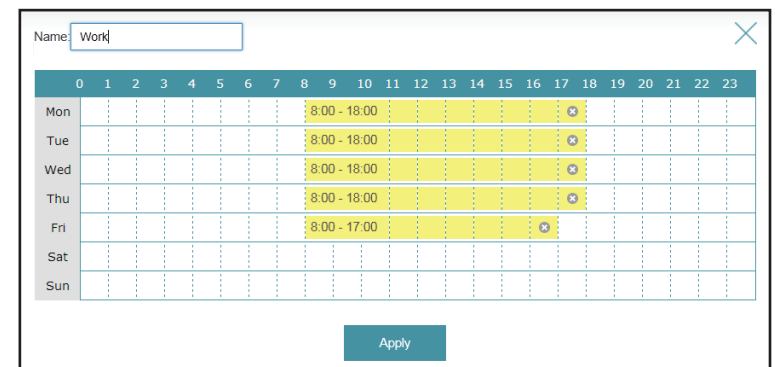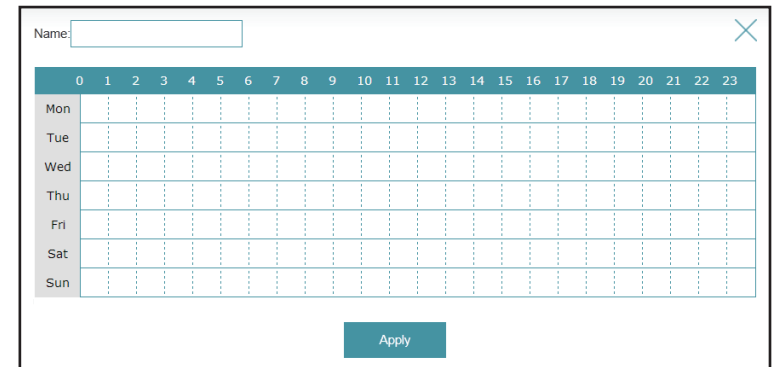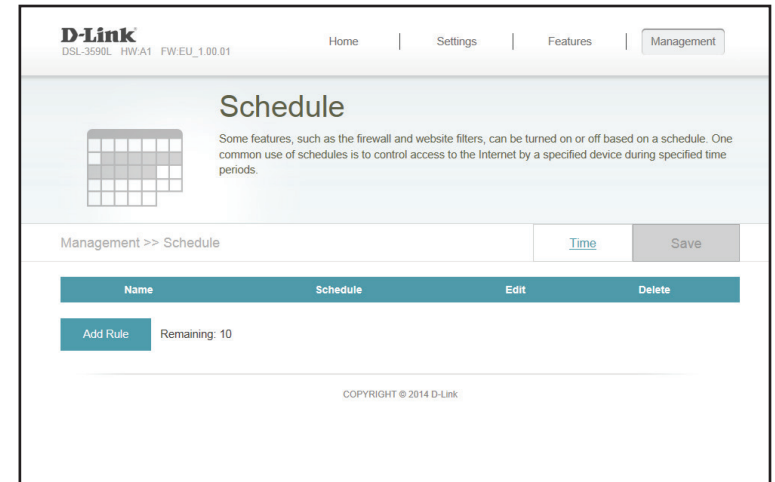

# System Log

The router keeps a running log of events. This log can be sent to a Syslog server, and sent to your email address. In the Management menu on the bar on the top of the page, click **System Log**.

**Enable Logging to Syslog Server:** Check this box to send the router logs to a SysLog Server. If this is disabled, there will be no other options on this page.

**SysLog Server IP Address:** Enter the IP address for the Syslog server. If the Syslog server is directly connected to the router, select it from the drop-down menu to automatically populate the field.

**Enable Email Notification:** If you want the logs to be automatically sent to an email address, enable this option.

Enter the settings for your email account. These are obtained from your email service provider.

**Send when Log Full:** If email notification is enabled, this option will set the router to send the log by email when the log is full.

**Send on Schedule:** This option can be enabled to send an email according to a pre-configured schedule. See below.

**Schedule:** If you enable **Send on Schedule**, use the drop-down menu to select the time schedule that the rule will be enabled on. The schedule may be set to **Always Enable**, or you can create your own schedules in the **Schedules** section (refer to **Schedule** on page 110).

Click **Save** when you are done.

The screenshot shows the D-Link System Log configuration interface. At the top, there is a navigation bar with 'Home', 'Settings', 'Features', and 'Management'. The main heading is 'System Log' with a sub-heading 'On-board diagnostics run continually in the background to monitor the health of your router. The results are recorded in the system log if it is enabled. This info can be used to diagnose common problems or help Customer Support resolve issues more quickly.' Below this, there is a 'Save' button and a breadcrumb 'Management >> System Log'. The 'SysLog Settings' section includes 'Enable Logging to Syslog Server' (checked), 'SysLog Server IP Address' (empty), and a dropdown menu for 'Computer Name'. The 'E-mail Settings' section includes 'Enable E-mail Notification' (checked), 'From E-mail Address', 'To E-mail Address', 'SMTP Server Address', 'SMTP Server Port' (set to 25), 'Enable Authentication' (checked), 'Account Name', and 'Password'. The 'E-mail Log When Full or On Schedule' section includes 'Send When Log Full' (checked), 'Send on Schedule' (checked), and a 'Schedule' dropdown menu set to 'Always Enable'.

# Admin

This page will allow you to change the administrator (Admin) password and enable remote management.

In the Management menu on the bar on the top of the page, click **Admin**.

**Password:** Enter a new password for the administrator account. You will need to enter this password whenever you configure the router using a web browser.

**Enable Graphical Authentication (CAPTCHA):** Enables a challenge-response test to require users to type letters or numbers from a distorted image displayed on the screen to prevent online hackers and unauthorized users from gaining access to your router's network settings.

**Enable HTTPS Server:** Check to enable HTTPS to connect to the router securely. This means to connect to the router, you must enter **https://dlinkrouter.local/** instead of **http://dlinkrouter.local/**

**Enable Remote Management:** Remote management allows the DSL-3590L to be configured from the Internet by a web browser. A password is still required to access the web management interface.

**Remote Admin Port:** The port number used to access the DSL-3590L is used in the URL. Example: **http://x.x.x.x:8080** where x.x.x.x is the Internet IP address of the DSL-3590L and 8080 is the port used for the web management interface.

**Note:** If you enabled **HTTPS Server** and wish to access the router remotely and securely, you must enter **https://** at the beginning of the address.

**D-Link**  
DSL-3590L HW:V1 FW:EU\_1.00.01

Home | Settings | Features | Management

## Admin

The admin account can change all router settings. To keep your router secure, you should give the admin account a strong password.

Management >> Admin System Save

**Admin Password**

Password:

Enable Graphical Authentication (CAPTCHA):

[Advanced Settings...](#)

**Administration**

Enable HTTPS Server:

Enable Remote Management:

Remote Admin Port:

Use HTTPS:

**SSH**

Enable Local Management:

Enable Remote Management:

Remote SSH Port:

**Telnet**

Enable Local Management:

Enable Remote Management:

Remote Telnet Port:

**TFTP**

Enable Local Management:

Enable Remote Management:

Remote TFTP Port:

COPYRIGHT © 2014 D-Link



**SSH / Telnet / TFTP:** If you want to allow router setup via the SSH, telnet, or TFTP protocols, you can configure it here.

For each protocol, click **Enable Local Management** to allow administrators to configure the network from within, and/or **Enable Remote Management** to allow administrators to configure the network from outside.

If you enabled remote management, enter the remote port number that the router will use for that protocol.

Click **Save** when you are done.

The screenshot shows the D-Link router's Admin configuration page. At the top, there is a navigation bar with 'Home', 'Settings', 'Features', and 'Management' (selected). Below the navigation bar, the page title is 'Admin' with a key icon and a note: 'The admin account can change all router settings. To keep your router secure, you should give the admin account a strong password.' The main content area is divided into several sections:

- Management >> Admin**: Includes 'System' and 'Save' buttons.
- Admin Password**: Contains a 'Password' field (masked with dots), an 'Enable Graphical Authentication (CAPTCHA)' checkbox (disabled), and an 'Advanced Settings...' link.
- Administration**: Contains 'Enable HTTPS Server' (checked), 'Enable Remote Management' (disabled), 'Remote Admin Port' (text input), and 'Use HTTPS' (disabled).
- SSH**: Contains 'Enable Local Management' (disabled), 'Enable Remote Management' (disabled), and 'Remote SSH Port' (text input).
- Telnet**: Contains 'Enable Local Management' (disabled), 'Enable Remote Management' (disabled), and 'Remote Telnet Port' (text input).
- TFTP**: Contains 'Enable Local Management' (disabled), 'Enable Remote Management' (disabled), and 'Remote TFTP Port' (text input).

At the bottom of the page, there is a copyright notice: 'COPYRIGHT © 2014 D-Link'.

To load, save, or reset settings, or reboot the router, click **System** and refer to **System** on page 114.

# System

This page allows you to save the router's current configuration, load a previously saved configuration, reset the router to its factory default settings, or reboot the router.


From the Admin page click **System**. To return to the Admin page, click **Admin**.

**Save Settings To Local Hard Drive:** This option will save the current router configuration settings to a file on your computer.

**Load Settings From Local Hard Drive:** This option will load previously saved router configuration file. This will overwrite the router's current configuration.

**Restore To Factory Default Settings:** This option will restore all configuration settings back to the settings that were in effect at the time the router was shipped from the factory. Any settings that have not been saved will be lost, including any rules that you have created. If you want to save the current router configuration settings, use the **Save Settings To Local Hard Drive** button above.

**Reboot The Device:** Click to reboot the router.

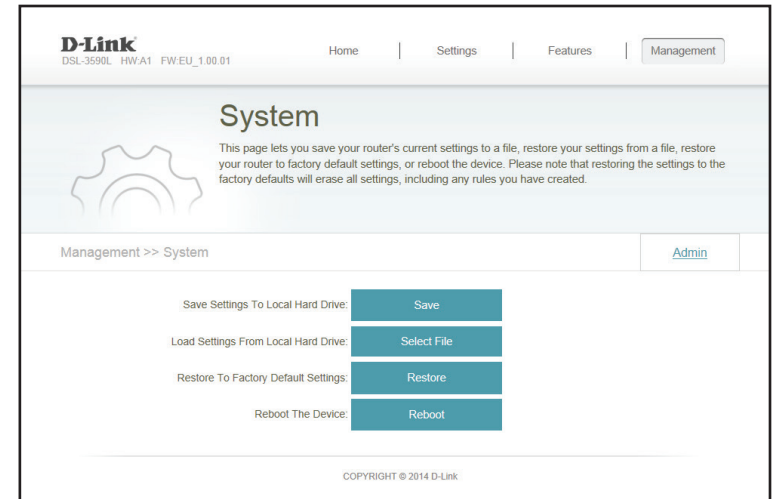

# Upgrade


This page will allow you to upgrade the router's firmware or language pack, either automatically or manually. To manually upgrade the firmware or language pack, you must first download the relevant file from <http://support.dlink.com>.

In the Management menu on the bar on the top of the page, click **Upgrade**.

**Firmware Information:** The current firmware's version and date will be displayed.

**Check for New Firmware:** Click this button to prompt the router to automatically check for a new firmware version. If a newer version is found, it will prompt you to install it.

**Upgrade Firmware:** If you wish to upgrade manually, first download the firmware file you wish to upgrade to. Next, click the **Select File** button and browse to the file to install the new firmware. You can also browse to a language pack file to install a new language pack.

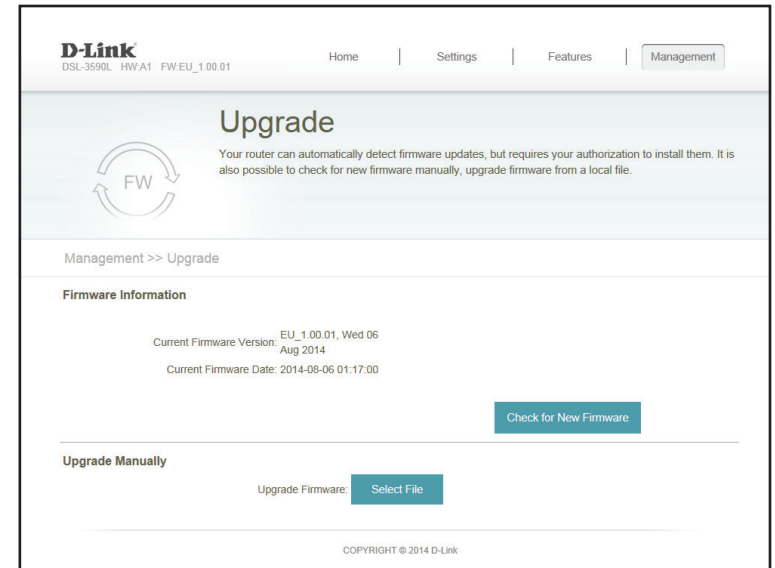


# Statistics

On the Statistics page you can view the amount of packets that pass through the router on the WAN, LAN, and wireless segments.

In the Management menu on the bar on the top of the page, click **Statistics**.

You can view the **Internet**, **LAN**, **Wi-Fi 2.4GHz**, or **Wi-Fi 5GHz** statistics by clicking on the respective tabs at the top. The graph will update in real time. To clear the information on the graph, click **Clear**.

The traffic counter will reset if the device is rebooted.

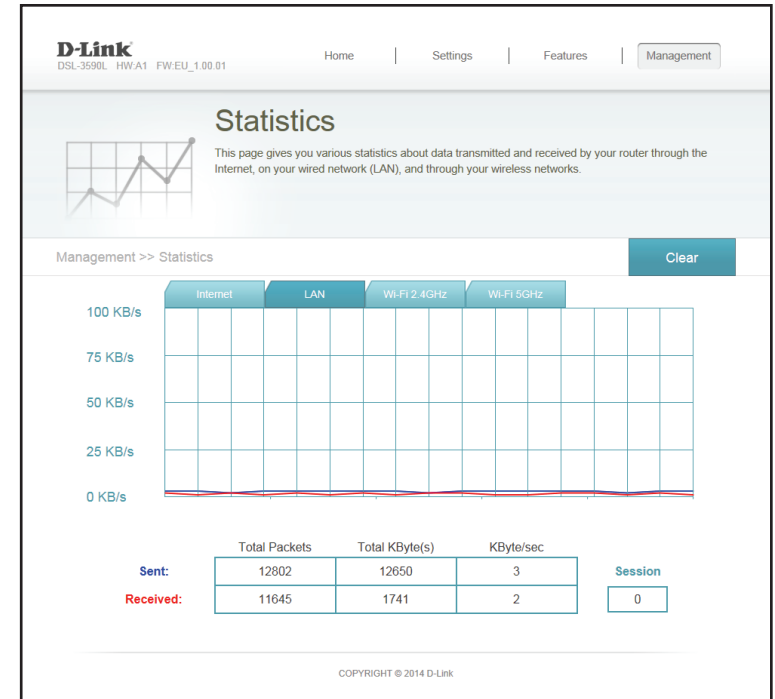


# Connect a Wireless Client to your Router

## WPS Button

The easiest and most secure way to connect your wireless devices to the router is with WPS (Wi-Fi Protected Setup). Most wireless devices such as wireless adapters, media players, Blu-ray DVD players, wireless printers and cameras will have a WPS button (or a software utility with WPS) that you can press to connect to the DSL-3590L router. Please refer to your user manual for the wireless device you want to connect to make sure you understand how to enable WPS. Once you know, follow the steps below:

**Step 1** - Press the WPS button on the DSL-3590L for about 1 second. The Internet LED on the front will start to blink.

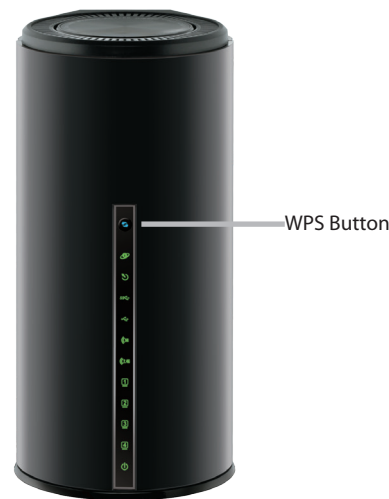

**Step 2** - Within 2 minutes, press the WPS button on your wireless client (or launch the software utility and start the WPS process).

**Step 3** - Allow up to 1 minute for your connection to be configured. Once the Internet light stops blinking, you will be connected and your wireless connection will be secure with WPA2.

# Windows® 8


## WPA/WPA2

It is recommended that you enable wireless security (WPA/WPA2) on your wireless router or access point before configuring your wireless adapter. If you are joining an existing network, you will need to know the security key (Wi-Fi password) being used.

To join an existing network, locate the wireless network icon in the taskbar next to the time display.





Clicking on this icon will display a list of wireless networks that are within connecting proximity of your computer. Select the desired network by clicking on the network name.

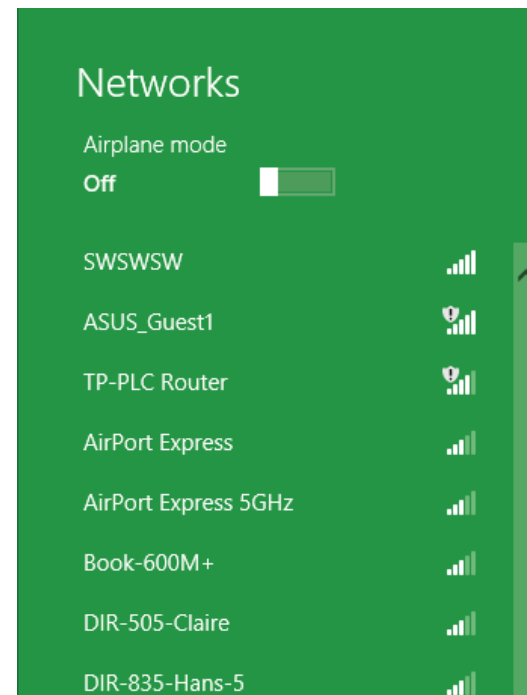

You will then be prompted to enter the network security key (Wi-Fi password) for the wireless network. Enter the password into the box and click **Next**.

If you wish to use Wi-Fi Protected Setup (WPS) to connect to the router, you can also press the WPS button on your router during this step to enable the WPS function.

When you have established a successful connection to a wireless network, the word **Connected** will appear next to the name of the network to which you are connected to.

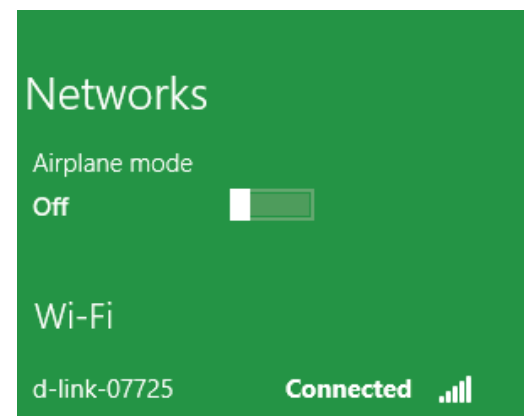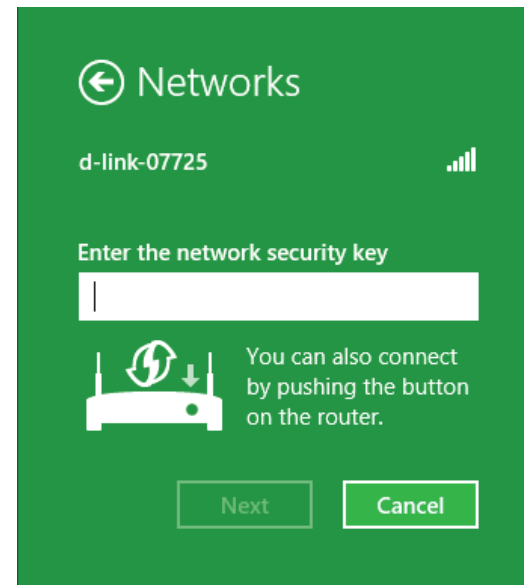


# Windows® 7

## WPA/WPA2

It is recommended that you enable wireless security (WPA/WPA2) on your wireless router or access point before configuring your wireless adapter. If you are joining an existing network, you will need to know the security key or passphrase being used.

1. Click on the wireless icon in your system tray (lower-right corner).

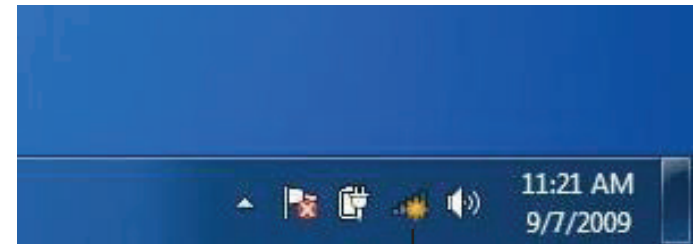

Wireless Icon


2. The utility will display any available wireless networks in your area.






3. Highlight the wireless connection with Wi-Fi name (SSID) you would like to connect to and click the **Connect** button.

If you get a good signal but cannot access the Internet, check your TCP/IP settings for your wireless adapter. Refer to the Networking Basics section in this manual for more information.

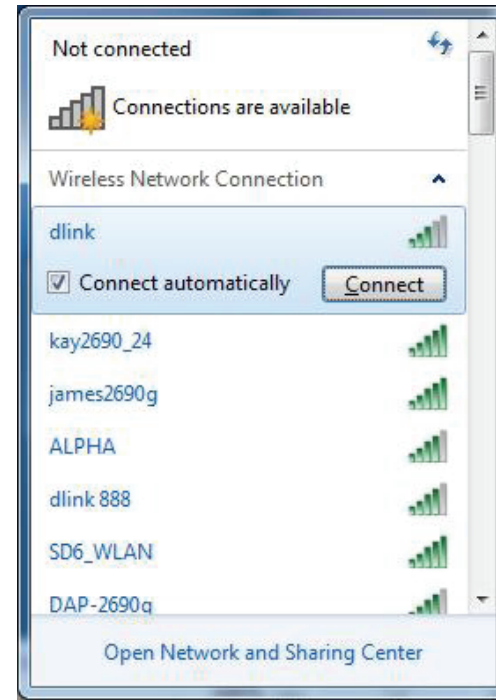


4. The following window appears while your computer tries to connect to the router.

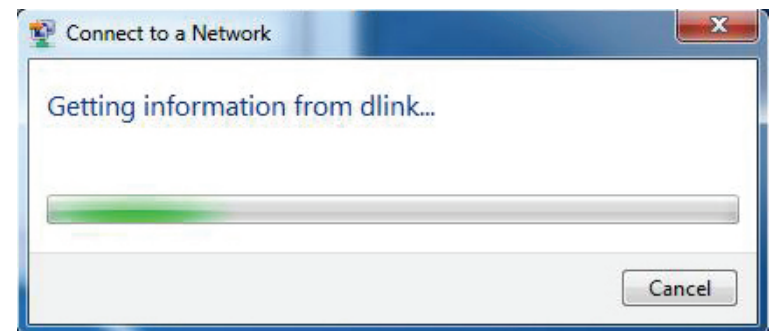

5. Enter the same security key or passphrase (Wi-Fi password) that is on your router and click **Connect**. You can also connect by pushing the WPS button on the router.


It may take 20-30 seconds to connect to the wireless network. If the connection fails, please verify that the security settings are correct. The key or passphrase must be exactly the same as the one on the wireless router.

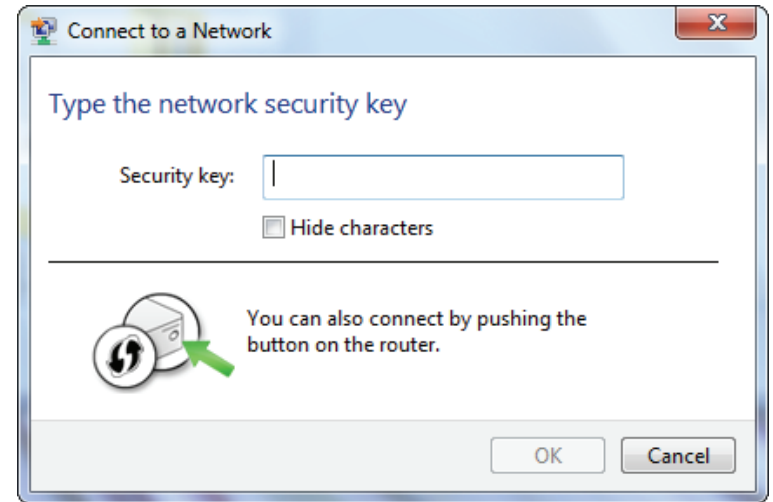


# WPS

The WPS feature of the DSL-3590L can be configured using Windows® 7. Carry out the following steps to use Windows® 7 to configure the WPS feature:


1. Click the **Start** button and select **Computer** from the Start menu.

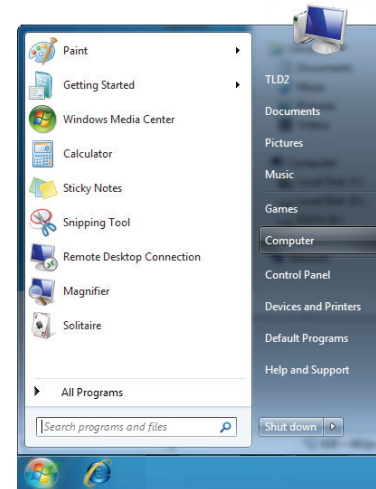


2. Click **Network** on the left side.

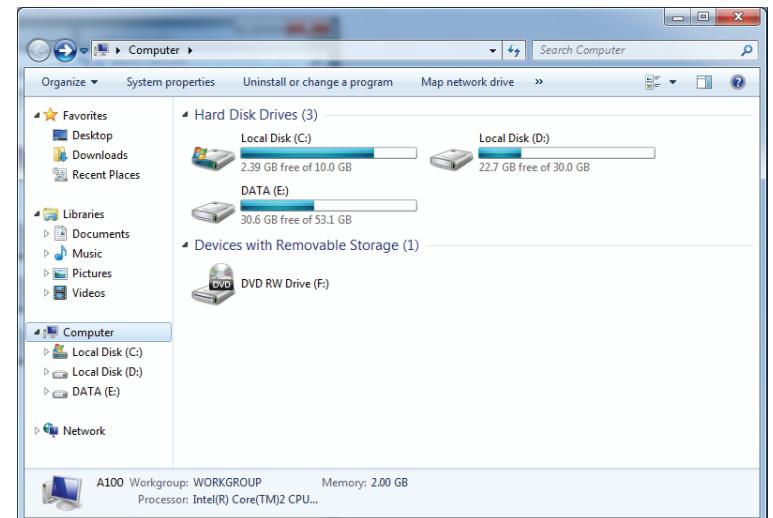


3. Double-click the DSL-3590L.

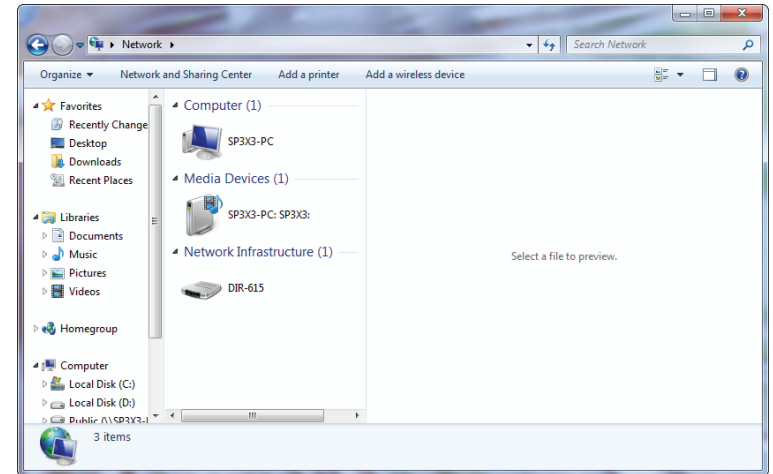

4. Input the WPS PIN number (on the router label) in the **Setup > Wireless Setup** menu in the Router's Web UI) and click **Next**.

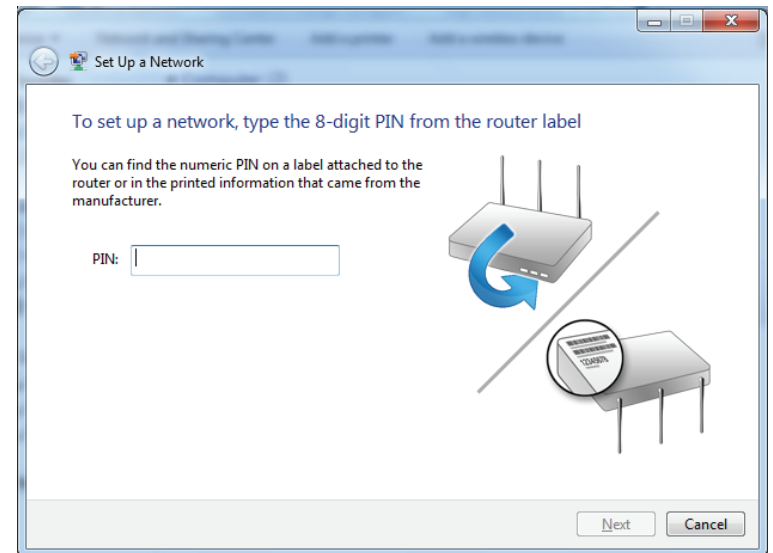


5. Type a name to identify the network.

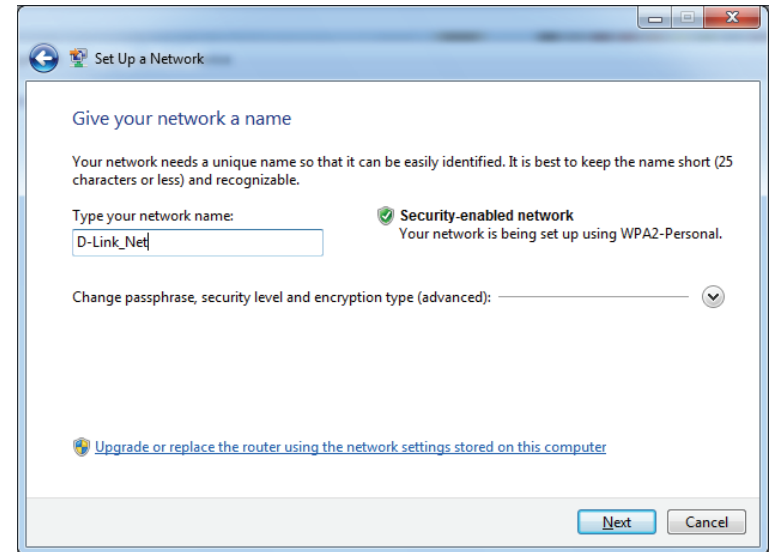


6. To configure advanced settings, click the  icon.

Click **Next** to continue.

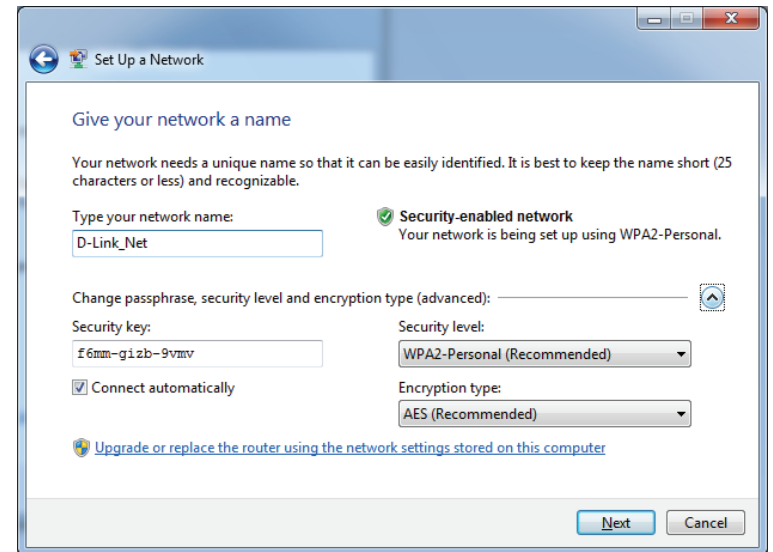

7. The following window appears while the Router is being configured.


Wait for the configuration to complete.

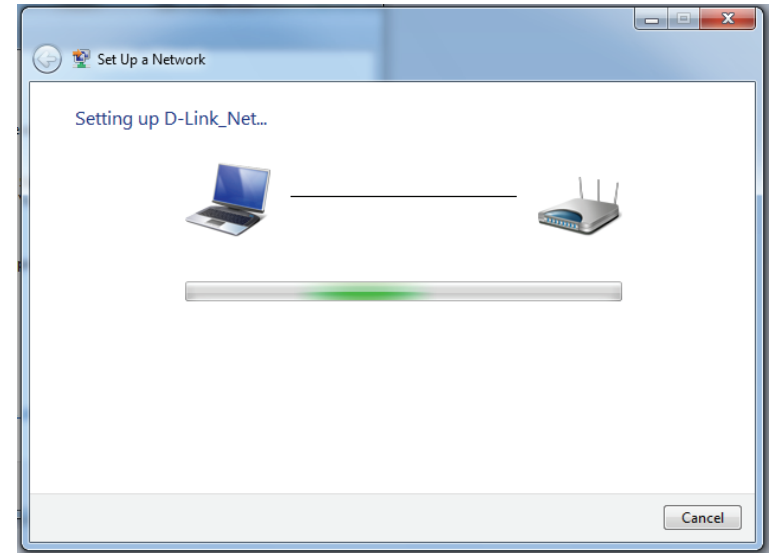

8. The following window informs you that WPS on the router has been set up successfully.

Make a note of the security key as you may need to provide this security key if adding an older wireless device to the network in the future.

9. Click **Close** to complete WPS setup.

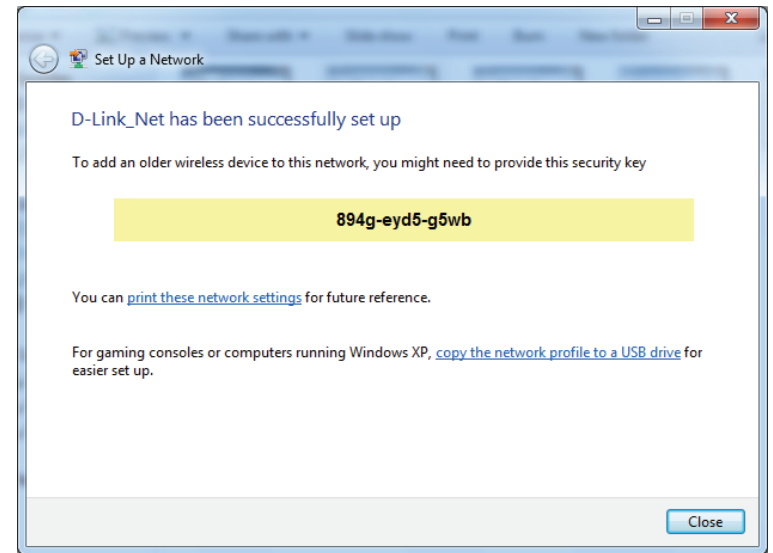

# Windows Vista®

Windows Vista® users may use the built-in wireless utility. If you are using another company's wireless utility, please refer to the user manual of your wireless adapter for help connecting to a wireless network. Most wireless utilities will have a "site survey" option similar to the Windows Vista® utility as seen below.



If you receive the **Wireless Networks Detected** bubble, click on the center of the bubble to access the utility.

or

Right-click on the wireless computer icon in your system tray (lower-right corner next to the time). Select **Connect to a network**.

The utility will display any available wireless networks in your area. Click on a network (displayed using the SSID) and click the **Connect** button.


If you get a good signal but cannot access the Internet, check you TCP/IP settings for your wireless adapter. Refer to the **Networking Basics** section in this manual for more information.

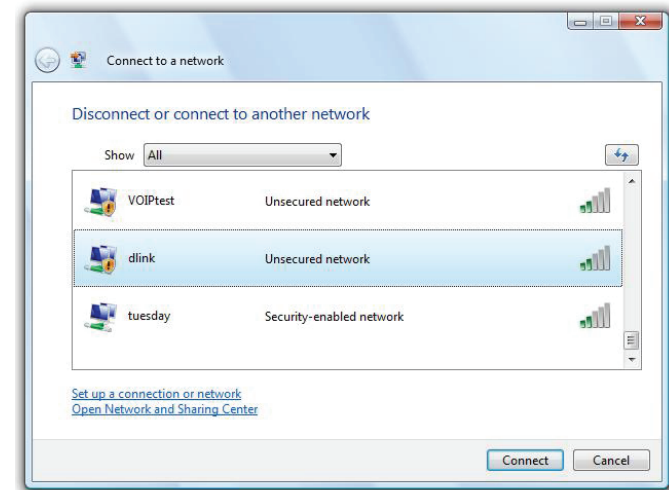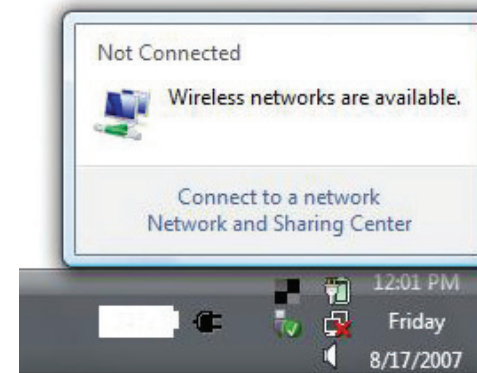


## WPA/WPA2

It is recommended that you enable wireless security (WPA/WPA2) on your wireless router or access point before configuring your wireless adapter. If you are joining an existing network, you will need to know the security key or passphrase being used.

1. Open the Windows Vista® Wireless Utility by right-clicking on the wireless computer icon in your system tray (lower right corner of screen). Select **Connect to a network**.

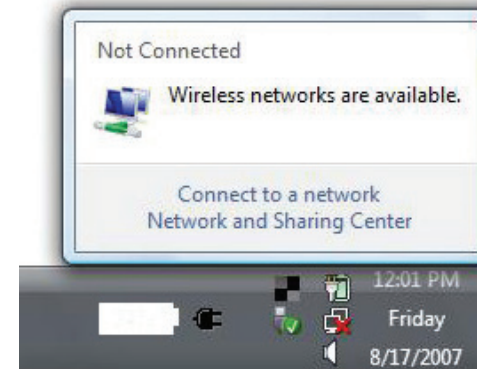


2. Highlight the Wi-Fi name (SSID) you would like to connect to and click **Connect**.

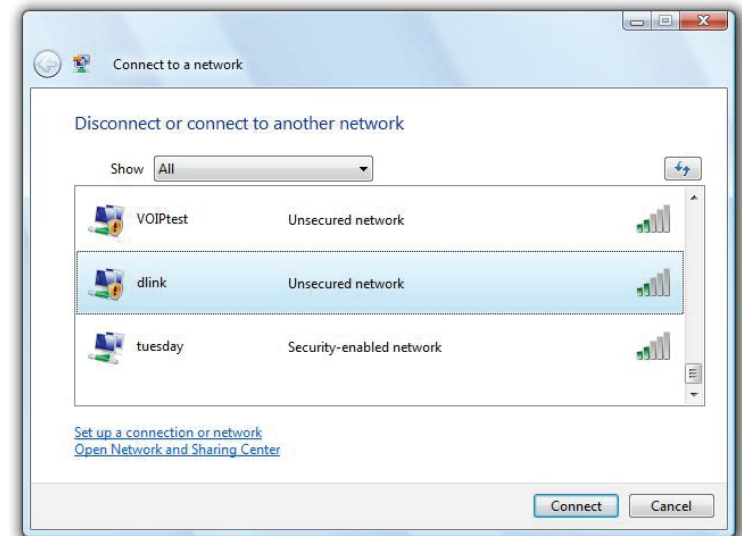



3. Enter the same security key or passphrase (Wi-Fi password) that is on your router and click **Connect**.

It may take 20-30 seconds to connect to the wireless network. If the connection fails, please verify that the security settings are correct. The key or passphrase must be exactly the same as the one on the wireless router.

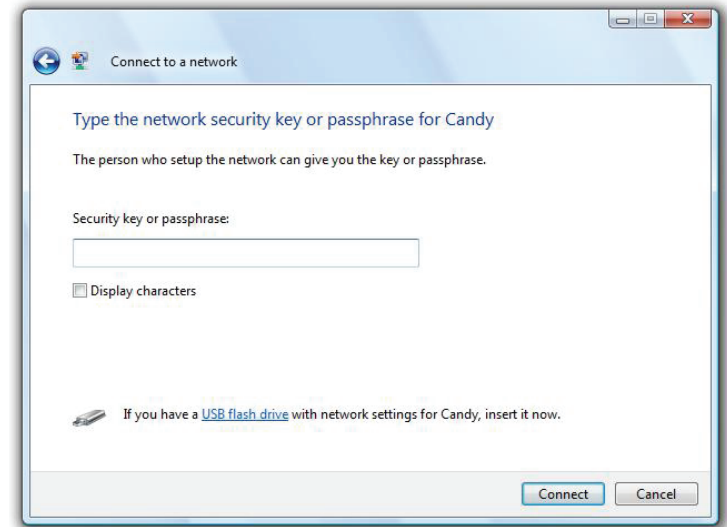


# Windows® XP

Windows® XP users may use the built-in wireless utility (Zero Configuration Utility). The following instructions are for Service Pack 2 users. If you are using another company's utility, please refer to the user manual of your wireless adapter for help with connecting to a wireless network. Most utilities will have a "site survey" option similar to the Windows® XP utility as seen below.

If you receive the **Wireless Networks Detected** bubble, click on the center of the bubble to access the utility.


or

Right-click on the wireless computer icon in your system tray (lower-right corner next to the time). Select **View Available Wireless Networks**.

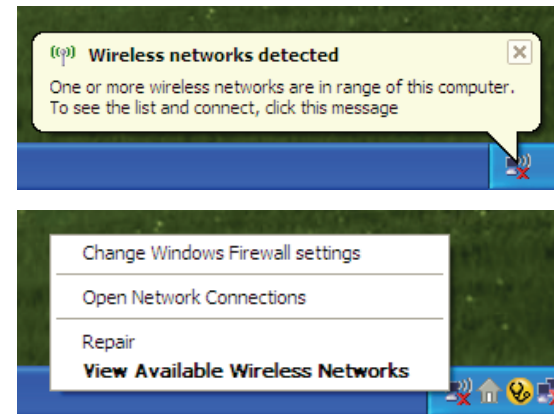

The utility will display any available wireless networks in your area. Click on a Wi-Fi network (displayed using the SSID) and click the **Connect** button.


If you get a good signal but cannot access the Internet, check you TCP/IP settings for your wireless adapter. Refer to the **Networking Basics** section in this manual for more information.

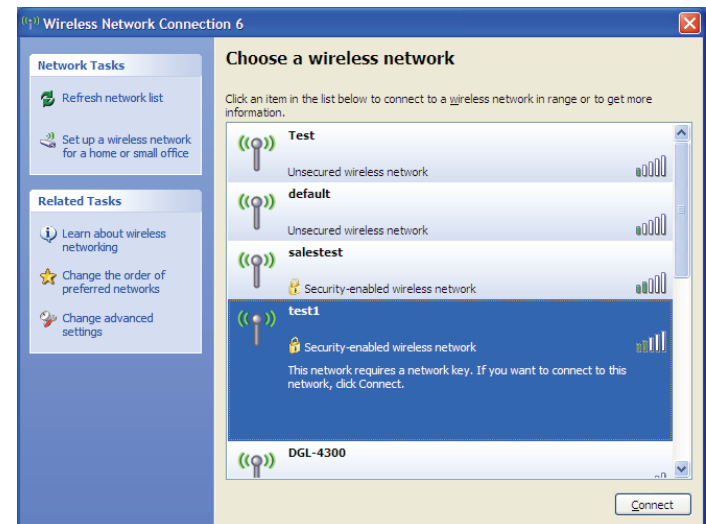


## WPA/WPA2

It is recommended to enable WPA on your wireless router or access point before configuring your wireless adapter. If you are joining an existing network, you will need to know the WPA key being used.

1. Open the Windows® XP Wireless Utility by right-clicking on the wireless computer icon in your system tray (lower-right corner of screen). Select **View Available Wireless Networks**.

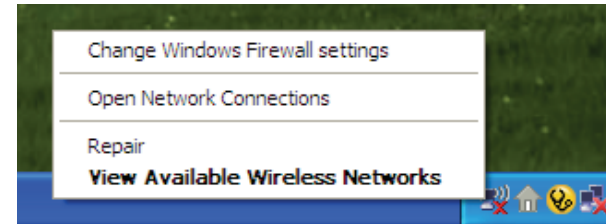


2. Highlight the Wi-Fi network (SSID) you would like to connect to and click **Connect**.

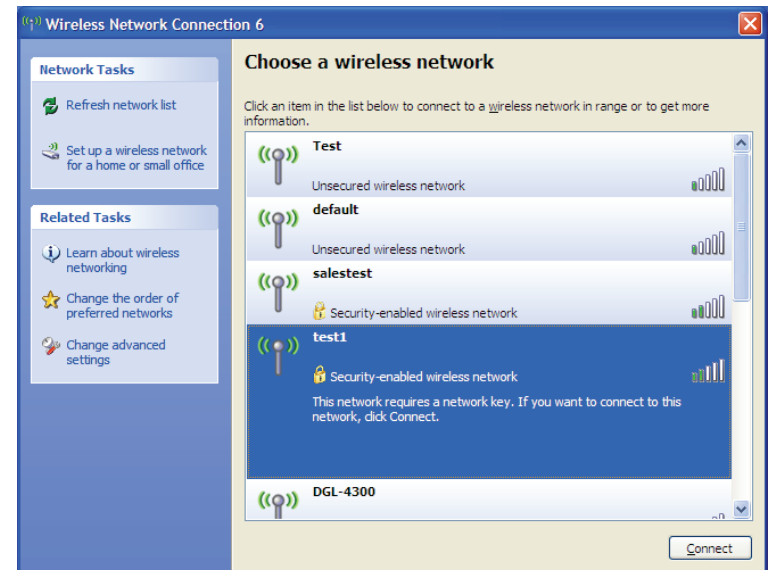

3. The **Wireless Network Connection** box will appear. Enter the WPA-PSK Wi-Fi password and click **Connect**.

It may take 20-30 seconds to connect to the wireless network. If the connection fails, please verify that the WPA-PSK settings are correct. The Wi-Fi password must be exactly the same as on the wireless router.

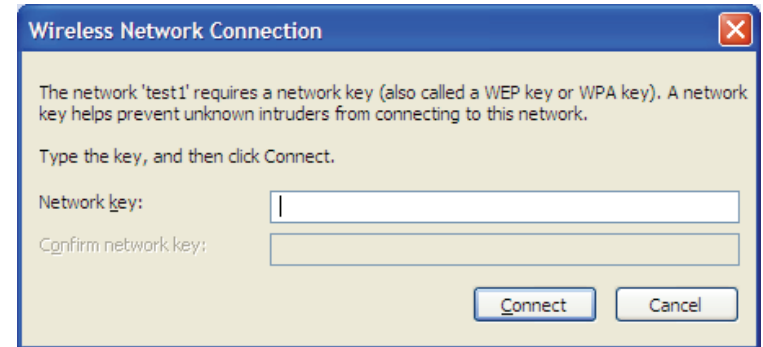

# Troubleshooting

This chapter provides solutions to problems that can occur during the installation and operation of the DSL-3590L. Read the following descriptions if you are having problems. The examples below are illustrated in Windows® XP. If you have a different operating system, the screenshots on your computer will look similar to these examples.

## 1. Why can't I access the web-based configuration utility?

When entering the IP address of the D-Link router (**192.168.1.1** for example), you are not connecting to a website, nor do you have to be connected to the Internet. The device has the utility built-in to a ROM chip in the device itself. Your computer must be on the same IP subnet to connect to the web-based utility.

- Make sure you have an updated Java-enabled web browser. We recommend the following:
  - Microsoft Internet Explorer® 7 or higher
  - Mozilla Firefox 3.5 or higher
  - Google™ Chrome 8 or higher
  - Apple Safari 4 or higher
- Verify physical connectivity by checking for solid link lights on the device. If you do not get a solid link light, try using a different cable, or connect to a different port on the device if possible. If the computer is turned off, the link light may not be on.
- Disable any Internet security software running on the computer. Software firewalls such as ZoneAlarm, BlackICE, Sygate, Norton Personal Firewall, and Windows® XP firewall may block access to the configuration pages. Check the help files included with your firewall software for more information on disabling or configuring it.

- Configure your Internet settings:
  - Go to **Start > Settings > Control Panel**. Double-click the **Internet Options** icon. From the **Security** tab, click the button to restore the settings to their defaults.
  - Click the **Connection** tab and set the dial-up option to Never Dial a Connection. Click the LAN Settings button. Make sure nothing is checked. Click **OK**.
  - Go to the **Advanced** tab and click the button to restore these settings to their defaults. Click **OK** three times.
  - Close your web browser (if open) and open it.
- Access the web management. Open your web browser and enter the IP address of your D-Link router in the address bar. This should open the login page for your web management.
- If you still cannot access the configuration, unplug the power to the router for 10 seconds and plug back in. Wait about 30 seconds and try accessing the configuration. If you have multiple computers, try connecting using a different computer.

## 2. What can I do if I forgot my password?

If you forgot your password, you must reset your router. This process will change all your settings back to the factory defaults.

To reset the router, locate the reset button (hole) on the base of the unit. With the router powered on, use a paperclip to hold the button down for 10 seconds. Release the button and the router will go through its reboot process. Wait about 30 seconds to access the router. The default IP address is **192.168.1.1**. When logging in, use the password **admin**.

### 3. Why can't I connect to certain sites or send and receive emails when connecting through my router?

If you are having a problem sending or receiving email, or connecting to secure sites such as eBay, banking sites, and Hotmail, we suggest lowering the MTU in increments of ten (Ex. 1492, 1482, 1472, etc).

To find the proper MTU Size, you'll have to do a special ping of the destination you're trying to go to. A destination could be another computer, or a URL.

- Click on **Start** and then click **Run**.
- Windows® 95, 98, and Me users type in **command** (Windows® NT, 2000, XP, Vista®, and 7 users type in **cmd**) and press **Enter** (or click **OK**).
- Once the window opens, you'll need to do a special ping. Use the following syntax:

**ping [url] [-f] [-l] [MTU value]**

Example: **ping yahoo.com -f -l 1472**

```
C:\>ping yahoo.com -f -l 1482
Pinging yahoo.com [66.94.234.13] with 1482 bytes of data:
Packet needs to be fragmented but DF set.
Packet needs to be fragmented but DF set.
Packet needs to be fragmented but DF set.
Packet needs to be fragmented but DF set.
Ping statistics for 66.94.234.13:
    Packets: Sent = 4, Received = 0, Lost = 4 (100% loss),
    Approximate round trip times in milli-seconds:
        Minimum = 0ms, Maximum = 0ms, Average = 0ms
C:\>ping yahoo.com -f -l 1472
Pinging yahoo.com [66.94.234.13] with 1472 bytes of data:
Reply from 66.94.234.13: bytes=1472 time=93ms TTL=52
Reply from 66.94.234.13: bytes=1472 time=109ms TTL=52
Reply from 66.94.234.13: bytes=1472 time=125ms TTL=52
Reply from 66.94.234.13: bytes=1472 time=203ms TTL=52
Ping statistics for 66.94.234.13:
    Packets: Sent = 4, Received = 4, Lost = 0 (0% loss),
    Approximate round trip times in milli-seconds:
        Minimum = 93ms, Maximum = 203ms, Average = 132ms
C:\>
```

You should start at 1472 and work your way down by 10 each time. Once you get a reply, go up by 2 until you get a fragmented packet. Take that value and add 28 to the value to account for the various TCP/IP headers. For example, let's say that 1452 was the proper value, the actual MTU size would be 1480, which is the optimum for the network we're working with (1452+28=1480).

Once you find your MTU, you can now configure your router with the proper MTU size.

To change the MTU rate on your router follow the steps below:

- Open your browser, enter the IP address of your router (192.168.1.1) and click **OK**.
- Enter your username (admin) and password (blank by default). Click **OK** to enter the web configuration page for the device.
- Click on **Setup** and then click **Manual Configure**.
- To change the MTU, enter the number in the MTU field and click **Save Settings** to save your settings.
- Test your email. If changing the MTU does not resolve the problem, continue changing the MTU in increments of ten.



# Wireless Basics

D-Link wireless products are based on industry standards to provide easy-to-use and compatible high-speed wireless connectivity within your home, business, or public access wireless networks. Strictly adhering to the IEEE standard, the D-Link wireless family of products will allow you to securely access the data you want, when, and where you want it. You will be able to enjoy the freedom that wireless networking delivers.

A wireless local area network (WLAN) is a cellular computer network that transmits and receives data with radio signals instead of wires. Wireless LANs are used increasingly in both home and office environments, and public areas such as airports, coffee shops and universities. Innovative ways to utilize WLAN technology are helping people work, and communicate more efficiently. Increased mobility and the absence of cabling and other fixed infrastructure have proven to be beneficial for many users.

Wireless users can use the same applications they use on a wired network. Wireless adapter cards used on laptop and desktop systems support the same protocols as Ethernet adapter cards.

Under many circumstances, it may be desirable for mobile network devices to link to a conventional Ethernet LAN in order to use servers, printers or an Internet connection supplied through the wired LAN. A wireless router is a device used to provide this link.

## **What is Wireless?**

Wireless or Wi-Fi technology is another way of connecting your computer to the network without using wires. Wi-Fi uses radio frequency to connect wirelessly so you have the freedom to connect computers anywhere in your home or office network.

## **Why D-Link Wireless?**

D-Link is the worldwide leader and award winning designer, developer, and manufacturer of networking products. D-Link delivers the performance you need at a price you can afford. D-Link has all the products you need to build your network.

## **How does wireless work?**

Wireless works similarly to how cordless phones work, through radio signals that transmit data from one point A to point B. But wireless technology has restrictions as to how you can access the network. You must be within the wireless network range area to be able to connect your computer. There are two different types of wireless networks: Wireless Local Area Network (WLAN), and Wireless Personal Area Network (WPAN).

### **Wireless Local Area Network (WLAN)**

In a wireless local area network, a device called an Access Point (AP) connects computers to the network. The access point has a small antenna attached to it, which allows it to transmit data back and forth over radio signals. With an indoor access point the signal can travel up to 300 feet. With an outdoor access point the signal can reach out up to 30 miles to serve places like manufacturing plants, industrial locations, university and high school campuses, airports, golf courses, and many other outdoor venues.

## **Wireless Personal Area Network (WPAN)**

Bluetooth is the industry standard wireless technology used for WPAN. Bluetooth devices in WPAN operate in a range up to 30 feet away.

Compared to WLAN the speed and wireless operation range are both less than WLAN, but in return it doesn't use nearly as much power. This makes it ideal for personal devices, such as mobile phones, PDAs, headphones, laptops, speakers, and other devices that operate on batteries.

## **Who uses wireless?**

Wireless technology has become so popular in recent years that almost everyone is using it, whether it's for home, office, business, D-Link has a wireless solution for it.

### **Home Uses/Benefits**

- Gives everyone at home broadband access
- Surf the web, check email, instant message, etc.
- Gets rid of the cables around the house
- Simple and easy to use

### **Small Office and Home Office Uses/Benefits**

- Stay on top of everything at home as you would at office
- Remotely access your office network from home
- Share Internet connection and printer with multiple computers
- No need to dedicate office space

## **Where is wireless used?**

Wireless technology is expanding everywhere, not just at home or office. People like the freedom of mobility and it's becoming so popular that more and more public facilities now provide wireless access to attract people. Wireless connections in public places are usually called "hotspots".

Using a D-Link CardBus adapter with your laptop, you can access the hotspot to connect to the Internet from remote locations like: airports, hotels, coffee shops, libraries, restaurants, and convention centers.

Wireless network is easy to setup, but if you're installing it for the first time it could be quite a task not knowing where to start. That's why we've put together a few setup steps and tips to help you through the process of setting up a wireless network.

## **Tips**

Here are a few things to keep in mind, when you install a wireless network.

### **Centralize your router or access point**

Make sure you place the router/access point in a centralized location within your network for the best performance. Try to place the router/access point as high as possible in the room, so the signal gets dispersed throughout your home. If you have a two-story home, you may need a repeater to boost the signal to extend the range.

### **Eliminate interference**

Place home appliances such as cordless telephones, microwaves, and televisions as far away as possible from the router/access point. This would significantly reduce any interference that the appliances might cause since they operate on same frequency.

## Security

Don't let your next-door neighbors or intruders connect to your wireless network. Secure your wireless network by turning on the WPA or WEP security feature on the router. Refer to the product manual for detail information on how to set it up.

# Wireless Modes

There are basically two modes of networking:

- **Infrastructure** – All wireless clients will connect to an access point or wireless router.
- **Ad hoc** – Directly connecting to another computer for peer-to-peer communication using wireless network adapters on each computer, such as two or more DSL-3590L wireless network CardBus adapters.

An Infrastructure network contains an Access Point or wireless router. All the wireless devices, or clients, will connect to the wireless router or access point.

An ad hoc network contains only clients, such as laptops with wireless CardBus adapters. All the adapters must be in ad hoc mode to communicate.

# Networking Basics

## Check your IP address


After you install your new D-Link adapter, by default, the TCP/IP settings should be set to obtain an IP address from a DHCP server (i.e. wireless router) automatically. To verify your IP address, please follow the steps below.

Click on **Start > Run**. In the run box type **cmd** and click **OK**. (Windows® 7/Vista® users type **cmd** in the **Start Search** box.)

At the prompt, type **ipconfig** and press **Enter**.

This will display the IP address, subnet mask, and the default gateway of your adapter.

If the address is 0.0.0.0, check your adapter installation, security settings, and the settings on your router. Some firewall software programs may block a DHCP request on newly installed adapters.

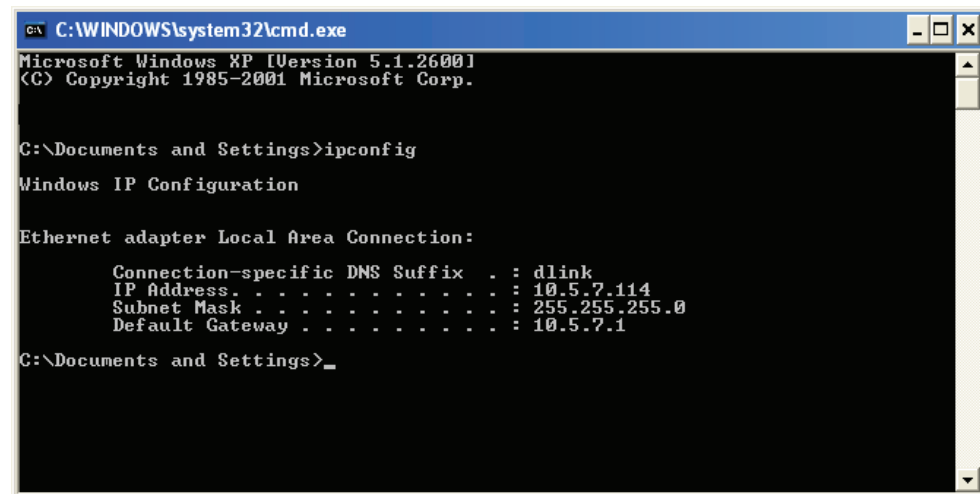

```
C:\WINDOWS\system32\cmd.exe
Microsoft Windows XP [Version 5.1.2600]
(C) Copyright 1985-2001 Microsoft Corp.

C:\Documents and Settings>ipconfig

Windows IP Configuration

Ethernet adapter Local Area Connection:

    Connection-specific DNS Suffix  . : dlink
    IP Address . . . . . : 10.5.7.114
    Subnet Mask . . . . . : 255.255.255.0
    Default Gateway . . . . . : 10.5.7.1

C:\Documents and Settings>_
```

## Statically Assign an IP address

If you are not using a DHCP capable gateway/router, or you need to assign a static IP address, please follow the steps below:

- Step 1**
- Windows® 7 - Click on **Start > Control Panel > Network and Internet > Network and Sharing Center.**
  - Windows Vista® - Click on **Start > Control Panel > Network and Internet > Network and Sharing Center > Manage Network Connections.**
  - Windows® XP - Click on **Start > Control Panel > Network Connections.**
  - Windows® 2000 - From the desktop, right-click **My Network Places > Properties.**

**Step 2**  
Right-click on the **Local Area Connection** which represents your network adapter and select **Properties.**


**Step 3**  
Highlight **Internet Protocol (TCP/IP)** and click **Properties.**

**Step 4**  
Click **Use the following IP address** and enter an IP address that is on the same subnet as your network or the LAN IP address on your router.

Example: If the router's LAN IP address is 192.168.1.1, make your IP address 192.168.0.X where X is a number between 2 and 99. Make sure that the number you choose is not in use on the network. Set the Default Gateway the same as the LAN IP address of your router (I.E. 192.168.1.1).

Set Primary DNS the same as the LAN IP address of your router (192.168.1.1). The Secondary DNS is not needed or you may enter a DNS server from your ISP.

**Step 5**  
Click **OK** twice to save your settings.

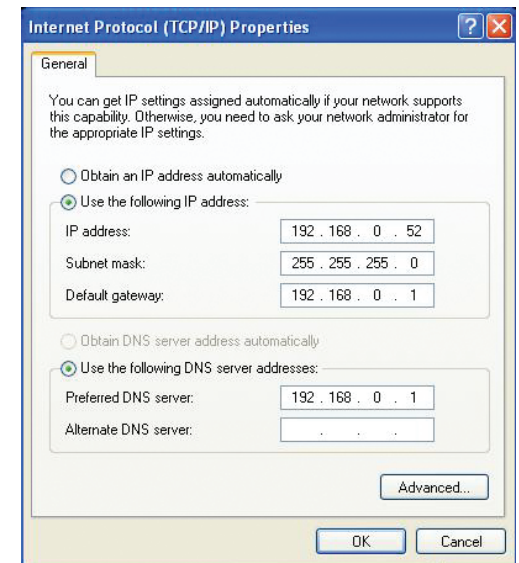

## Wireless Security

This section will show you the different levels of security you can use to protect your data from intruders. The DSL-3590L offers the following types of security:

- WPA2 (Wi-Fi Protected Access 2)
- WPA (Wi-Fi Protected Access)
- WPA2-PSK (Pre-Shared Key)
- WPA-PSK (Pre-Shared Key)

### What is WPA?

WPA (Wi-Fi Protected Access), is a Wi-Fi standard that was designed to improve the security features of WEP (Wired Equivalent Privacy).

The 2 major improvements over WEP:

- Improved data encryption through the Temporal Key Integrity Protocol (TKIP). TKIP scrambles the keys using a hashing algorithm and by adding an integrity-checking feature, ensures that the keys haven't been tampered with. WPA2 is based on 802.11i and uses Advanced Encryption Standard (AES) instead of TKIP.
- User authentication, which is generally missing in WEP, through the extensible authentication protocol (EAP). WEP regulates access to a wireless network based on a computer's hardware-specific MAC address, which is relatively simple to be sniffed out and stolen. EAP is built on a more secure public-key encryption system to ensure that only authorized network users can access the network.

WPA-PSK/WPA2-PSK uses a passphrase or key to authenticate your wireless connection. The key is an alpha-numeric password between 8 and 63 characters long. The password can include symbols (!?\*&\_) and spaces. This key must be the exact same key entered on your wireless router or access point.

WPA/WPA2 incorporates user authentication through the Extensible Authentication Protocol (EAP). EAP is built on a more secure public key encryption system to ensure that only authorized network users can access the network.



# Technical Specifications

## Device Interfaces

- DSL port
- 802.11 a/b/g/n/ac wireless LAN
- Four 10/100/1000 Gigabit LAN ports
- 10/100/1000 Gigabit WAN port
- Two USB ports (1 x USB 3.0 port, 1 x USB 2.0 port)

## Antenna Types

- Internal antenna

## Standards

- IEEE 802.11ac
- IEEE 802.11n
- IEEE 802.11g
- IEEE 802.11b
- IEEE 802.11a
- IEEE 802.3
- IEEE 802.3u

## Security

- WPA - Personal/Enterprise
- WPA2 - Personal/Enterprise
- Wi-Fi Protected Setup (WPS) PIN/PBC

## Power

- Input: 100 ~ 240 V
- Output: 12 V, 2.5 A Input: 100 ~ 240 V
- Maximum Operating Voltage: 12 V
- Maximum Power Consumption: 24 W

## Operating Temperature

- 0 to 40 °C (32 to 104 °F)

## Humidity

- 95% maximum (non-condensing)

## Certifications

- FCC Class B
- CE Class B
- IPv6 Ready
- Wi-Fi Protected Setup (WPS)
- Wi-Fi Multimedia (WMM)
- Compatible with Windows 8

## Dimensions

- L = 123.5 mm (4.86 inches)
- W = 102 mm (4.02 inches)
- H = 220 mm (8.66 inches)

## Weight

- 587.5 grams (1.30 lbs)