

DIR-867



AC1750 High Power Wi-Fi
Gigabit Router
Quick Install Guide

D-Link®

Package Contents



DIR-867 AC1750 High Power Wi-Fi Gigabit Router



Power Adapter



Ethernet Cable



Wi-Fi Configuration Card



Quick Install Guide

If any of the above items are missing, please contact your reseller.

Minimum Requirements

Network Requirements:

- An Ethernet-based broadband modem

App Configuration Requirements


- iPhone®, iPad® or Android™ smartphone or tablet (Refer to the mobile app's store page to see if your device is compatible)

Web-based Configuration Requirements

- Computer, smartphone or tablet with a Web browser*

* We recommend using the latest available browser version for the best compatibility and performance.

Hardware Overview

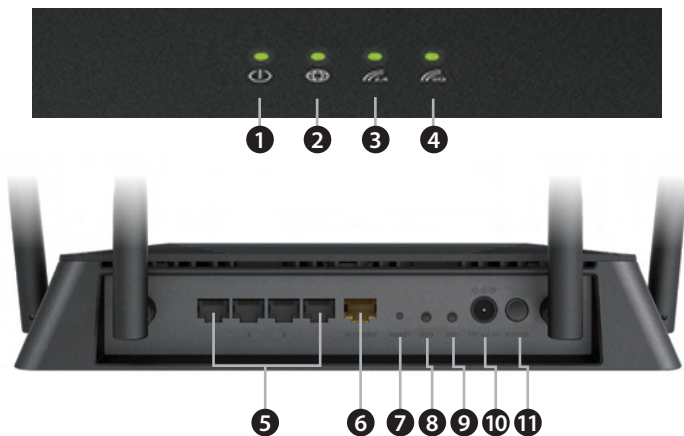


1	Power LED	A solid light indicates a proper connection to the power supply. The light will be a solid orange during boot up.
2	Internet LED	A solid light indicates connection on the Internet port. If the LED is orange, the router cannot connect to the Internet.
3	Wireless (2.4 GHz) LED	A solid light indicates that the 2.4 GHz wireless band is enabled.
4	Wireless (5 GHz) LED	A solid light indicates that the 5 GHz wireless band is enabled.
5	Gigabit LAN Ports (1-4)	Connect Ethernet devices such as computers, switches, storage (NAS) devices and game consoles.
6	Gigabit Internet Port	Connect a broadband modem or gateway to this port using an Ethernet cable.
7	Reset Button	Insert a paperclip in the hole, wait for 10 seconds, and release to reset the router to default settings.
8	WPS Button	Press to start the WPS process and automatically create a secure connection to a WPS client.
9	WiFi Button	Press this button to turn on or off the wireless networks.
10	Power Connector	Connect the supplied power adapter.
11	Power Button	Press to power the router on or off.

Before you Start

- **Users with DSL providers** - If you are using a PPPoE connection, you will need your PPPoE user name and password. If you do not have this information, contact your Internet provider. Do not proceed until you have this information.
- **Users with Cable providers** - Make sure you unplug the power to your modem. In some cases, you may need to turn it off for up to 5 minutes.


Connect your Router

- 1 Unplug the power to your DSL or Cable modem.

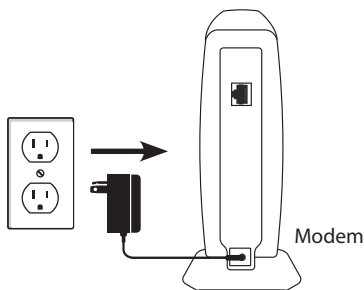


NOTE: If your DSL or cable modem uses a battery backup, please remove the backup battery and ensure all lights are off on the modem. Refer to the modem's user manual if required.


- 2 Connect an Ethernet cable from the yellow Internet port of the router to the Ethernet port on your DSL or Cable modem.

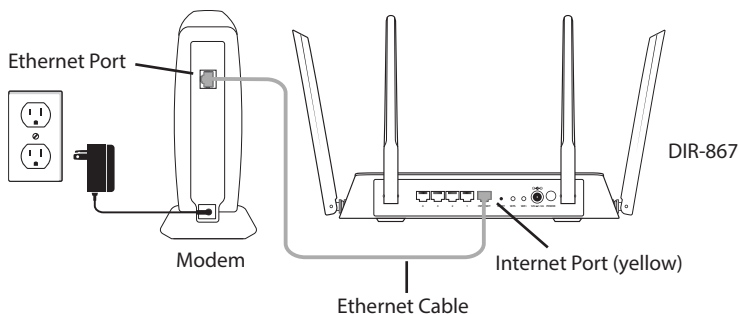

- 3** Plug the power back into your DSL or cable modem. Please wait about one minute before continuing.

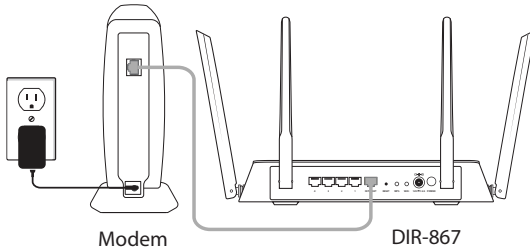

- 4** Plug the power adapter into your router and connect to an available power outlet or surge protector. If the Power LED does not light up, press the Power button on the back of the router.

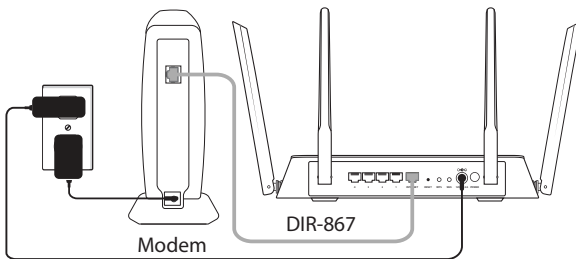

- 5** After the router has powered up, verify that the Power and Internet LEDs are both lit. Proceed with router configuration.

Configuration

There are two ways to configure your router:

- A. **D-Link Wi-Fi app** - Use a mobile device with the D-Link Wi-Fi app. Refer to the *D-Link Wi-Fi App Setup* section for more information.
- B. **Web Browser** - Use a web browser from your computer.

A. D-Link Wi-Fi App Setup

- 1** Scan the code below or search “D-Link Wi-Fi App” (App Store or Google Play) to download the D-Link Wi-Fi App to your iPhone, iPad, or Android device.



iOS



Android




D-Link Wi-Fi App

- 2** Once installed, launch the app. Please follow the on-screen instructions to complete the setup.


Note: To reconnect to your router, launch your wireless utility, select the new Wi-Fi Network you created, and then enter your new Wi-Fi password.

B. Web Browser Configuration

- 1 Connect another Ethernet cable from the Ethernet port on your computer to one of the LAN ports on the router. You can also connect wirelessly to the router with your computer. Use the supplied Wi-Fi Configuration Card for the Wi-Fi network name (SSID) and Wi-Fi password of the router.

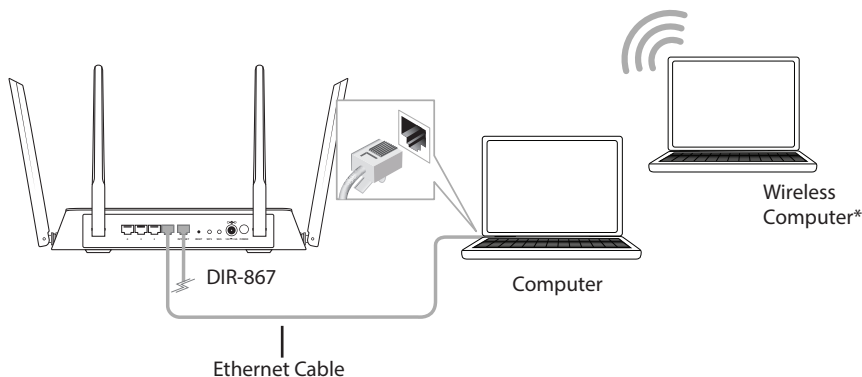

- 2 Open a web browser (e.g. Internet Explorer, Chrome, Firefox, or Safari) and enter **http://dlinkrouter.local/** or the IP address of the router (**http://192.168.0.1**).



3 When the Welcome screen appears, click **Next** to continue.



4 The router will automatically detect your Internet connection type. If it cannot, then select your Internet connection and click **Next** to continue.



For DSL (PPPoE) users, enter your PPPoE user name and password supplied by your ISP. Click **Next** to continue.



If you have a Static IP connection, enter the IP information and DNS settings supplied by your ISP. Click **Next** to continue.

The screenshot shows the 'Static IP' configuration screen. At the top, there is a blue header with the title 'Static IP' and a close button. Below the header, there are three icons: a globe for 'Internet', a Wi-Fi antenna for 'DIR-867', and a smartphone for 'Wi-Fi Client'. A yellow line connects the Internet icon to the DIR-867 icon. Below the icons, there is a paragraph of text: 'To set up this connection you will need to have a complete list of IP information by your Internet Service Provider. If you have a Static IP connection and do not have this information, please contact your ISP.' Underneath this text are five input fields: 'IP Address:', 'Subnet Mask:', 'Gateway Address:', 'Primary DNS Address:', and 'Secondary DNS Address:'. At the bottom right, there are two buttons: 'Back' and 'Next'.

- 5 Create a name and password for your Wi-Fi Network. Your wireless devices (i.e., tablets, smartphones, and laptops) will need to have this information entered to be able to connect to your wireless network. Click **Next** to continue.

The screenshot shows the 'Wi-Fi Settings' configuration screen. At the top, there is a blue header with the title 'Wi-Fi Settings' and a close button. Below the header, there are three icons: a globe for 'Internet', a Wi-Fi antenna for 'DIR-867', and a smartphone for 'Wi-Fi Client'. A line connects the Internet icon to the DIR-867 icon. Below the icons, there is a paragraph of text: 'To setup a Wi-Fi network you will need to give your Wi-Fi network a name (SSID) and password'. Underneath this text are two input fields: 'Wi-Fi Network Name:' with the value 'drikixyz' and 'Wi-Fi Password:' with the value 'u4b1f19b'. Below the password field, there is a paragraph of text: 'The Wi-Fi Network Name is up to 32 characters. You will need to join your Wi-Fi network using this Network Name (SSID).' and 'The password must contain at least 8 characters. You will need to join your Wi-Fi network using this password.' At the bottom right, there are two buttons: 'Back' and 'Next'.

- 6 Continue with the Setup Wizard to finish configuring your DIR-867 router. Once completed, the Internet LED will turn green indicating that your router is connected to the Internet.

Congratulations! You have completed the router installation.

Troubleshooting

How do I connect my wireless devices to the DIR-867 router?

1. Open your wireless network utility that displays available wireless networks.
2. Select the Wi-Fi Network name you assigned in the wizard and connect.

Note: If you did not run the setup wizard or you reset the router to its default settings, refer to the Wi-Fi Configuration Card included for the default Wi-Fi Network Name and Wi-Fi Password.

You can also connect wireless devices to the DIR-867 router using WPS:

1. Press the WPS button on the DIR-867 for three seconds.
2. Within one minute press the WPS button on your wireless device.
3. Allow up to two minutes to connect.

Note: Some devices may require you to log in to a utility to start the WPS process. Refer to the user manual of the device you want to connect to the router if you do not know how to start the WPS process.

How do I change the wireless settings on the DIR-867 router?

1. Open a web browser (e.g., Internet Explorer, Chrome, Firefox, or Safari) and enter **http://dlinkrouter.local/** You can also enter the IP address of the router (**http://192.168.0.1**).
2. At the login screen, enter the router password you created in the wizard.
3. Go to **Settings > Wireless** to create a new Wi-Fi network name (SSID) and Wi-Fi password.

*Documentation available at:

United States: <http://support.dlink.com/DIR-867>

Canada: <http://support.dlink.ca/DIR-867>

GPL Code Statement

This D-Link product includes software code developed by third parties, including software code subject to the GNU General Public License ("GPL") or GNU Lesser General Public License ("LGPL"). As applicable, the terms of the GPL and LGPL, and information on obtaining access to the GPL code and LGPL code used in this product, are available to you at:

<http://tsd.dlink.com.tw/GPL.asp>

The GPL code and LGPL code used in this product is distributed WITHOUT ANY WARRANTY and is subject to the copyrights of one or more authors. For details, see the GPL code and the LGPL code for this product and the terms of the GPL and LGPL.

Written Offer for GPL and LGPL Source Code

Where such specific license terms entitle you to the source code of such software, D-Link will provide upon written request via email and/or traditional paper mail the applicable GPL and LGPL source code files via CD-ROM for a nominal cost to cover shipping and media charges as allowed under the GPL and LGPL.

Please direct all inquiries to:

Email:

GPLCODE@dlink.com

Snail Mail:

Attn: GPLSOURCE REQUEST
D-Link Systems, Inc.
17595 Mt. Herrmann Street
Fountain Valley, CA 92708

GNU GENERAL PUBLIC LICENSE

Version 3, 29 June 2007

Copyright (C) 2007 Free Software Foundation, Inc. <<http://fsf.org/>>

View the full GPL Code Statement at **<http://www.gnu.org/licenses/gpl.html>**

Technical Support

Having trouble installing your new product? D-Link's website contains the latest user documentation and software updates for D-Link products. U.S. and Canadian customers can contact D-Link Technical Support through our website.

United States

Internet: <http://support.dlink.com>

Canada

Internet: <http://support.dlink.ca>

D-Link®

Version 1.00(CA)_128x188

October 12, 2017

610000008079

©2017 D-Link Corporation/D-Link Systems, Inc. All rights reserved. D-Link and the D-Link logo are registered trademarks of D-Link Corporation or its subsidiaries in the United States and other countries. iPhone, iPad, and iPod touch are registered trademarks of Apple Inc. Android is a trademark of Google, Inc. Other trademarks are the property of their respective owners. Maximum wireless signal rate derived from IEEE Standard 802.11ac, 802.11g, and 802.11n specifications. Actual data throughput will vary. Network conditions and environmental factors, including volume of network traffic, building materials and construction, and network overhead, lower actual data throughput rate. Environmental factors will adversely affect wireless signal range. Product specifications, size and shape are subject to change without notice, and actual product appearance may differ from that depicted on the packaging. Visit www.dlink.com for more details.

DIR-867



Routeur Gigabit sans fil AC1750
haute puissance
Guide d'installation rapide

D-Link[®]

Contenu de la boîte



DIR-867 Routeur Gigabit sans fil AC1750 haute puissance



Adaptateur secteur



Câble Ethernet



Carte de configuration du Wi-Fi



Guide d'installation rapide

Contactez votre revendeur s'il manque l'un des éléments ci-dessus.

Exigences minimales

Configuration réseau requise :

- Un modem haut débit Ethernet

Exigences de configuration de l'application :


- iPhone®, iPad® ou téléphone intelligent ou tablette Android™
(Veuillez vous reporter à la page de l'application mobile pour vérifier si votre appareil est compatible)

Exigences relatives à la configuration Web :

- Ordinateur, smartphone ou tablette avec un navigateur web*

* **Remarque :** Nous vous recommandons d'utiliser la dernière version de navigateur disponible pour la meilleure compatibilité et les meilleures performances.

Description du matériel

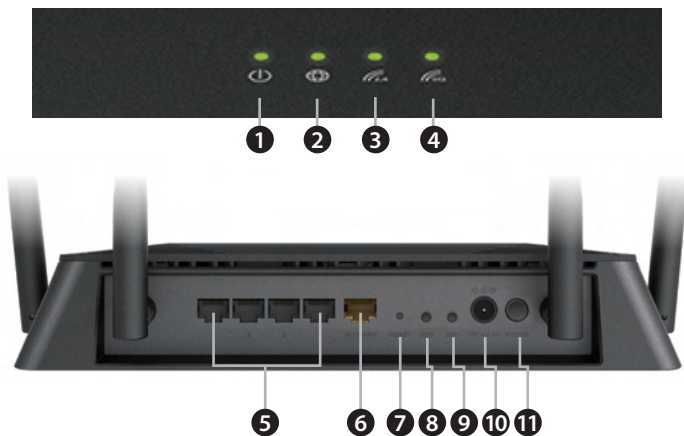


1	Voyant d'alimentation	Un voyant fixe indique une bonne connexion à l'alimentation. Le voyant reste allumé en orange pendant le démarrage.
2	Voyant Internet	Un voyant fixe indique que le port Internet est connecté. Si le voyant est orange, la connexion est bonne mais le routeur ne peut pas se connecter à l'Internet.
3	Voyant 2.4 GHz	Un voyant fixe indique que la fonction sans fil de 2.4 GHz est activée.
4	Voyant 5 GHz	Un voyant fixe indique que la fonction sans fil de 5 GHz est activée.
5	Ports Gigabit LAN (1-4)	Connectez des périphériques Ethernet tels que des ordinateurs, des commutateurs et des consoles de jeu.
6	Port Gigabit Ethernet	Connectez votre modem à large bande ou passerelle à ce port en utilisant un câble Ethernet.
7	Bouton de réinitialisation	Appuyez sur le bouton de réinitialisation avec un trombone pendant dix secondes pour rétablir les paramètres d'usine du routeur.
8	Bouton WPS	Appuyez sur pour démarrer le processus WPS et créer automatiquement une connexion sécurisée à un client WPS.
9	Bouton WiFi	Appuyez sur ce bouton pour désactiver ou activer les réseaux sans fil.
10	Port d'alimentation	Connectez l'adaptateur secteur fourni.
11	Bouton de mise sous tension	Appuyez dessus pour allumer ou éteindre le routeur.

Pré-requis

- **Les utilisateurs qui ont des fournisseurs d'accès DSL** - Si vous utilisez une connexion PPPoE, vous aurez besoin de votre nom d'utilisateur et de votre mot de passe PPPoE. Si vous ne disposez pas de ces informations, contactez votre fournisseur d'accès Internet. Ne continuez pas tant que vous n'avez pas ces informations.
- **Les utilisateurs qui ont des fournisseurs d'accès câblé** - Assurez-vous de débrancher l'alimentation de votre modem. Dans certains cas, vous devrez peut-être l'éteindre pendant un maximum de 5 minutes.


Connectez votre routeur

- 1 Débranchez l'alimentation de votre modem DSL ou câble.

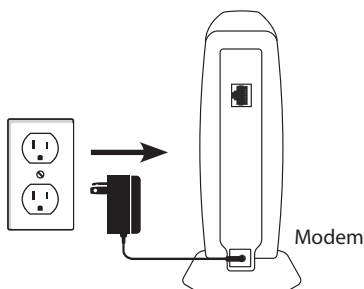


Remarque : si votre modem DSL ou câble utilise une batterie de sauvegarde, retirez la batterie de secours et assurez-vous que toutes les lumières sont éteintes sur le modem. Reportez-vous au mode d'emploi du modem si nécessaire.


- 2 Connectez un câble Ethernet entre le port Internet du routeur et le port Ethernet de votre modem DSL ou câble.

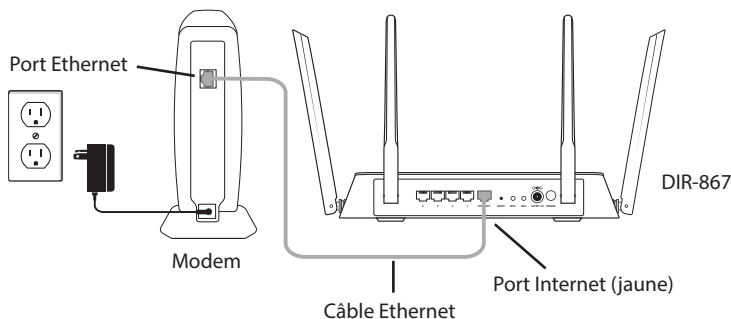

- 3** Rebranchez l'alimentation de votre modem DSL ou câble. Patientez environ une minute avant de continuer.

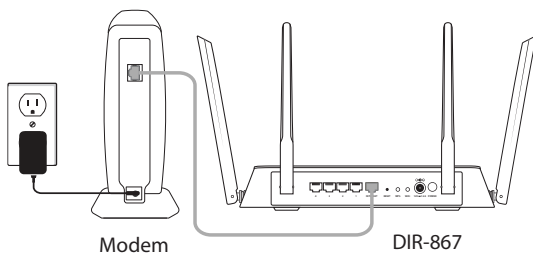

- 5** Branchez l'adaptateur secteur à votre routeur, puis à une prise de courant ou un parasurtenseur disponible. Si le voyant d'alimentation ne s'allume pas, appuyez sur le bouton d'alimentation à l'arrière du routeur.

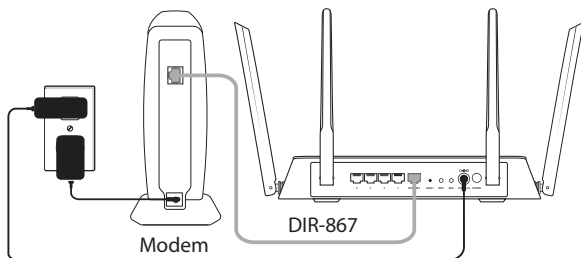

- 6** Après l'allumage du routeur, vérifiez que les voyants d'alimentation et Internet sont allumés. Procéder à la configuration du routeur.

* Si vous souhaitez de connecter sans fil, vous pouvez maintenant vous connecter au routeur à l'aide de la carte de configuration Wi-Fi fourni pour le nom du réseau Wi-Fi (SSID) et le mot de passe.

Configuration

Il existe deux façons de configurer votre routeur :

- A. **Application D-Link Wi-Fi** : utilisez un appareil mobile avec l'application D-Link Wi-Fi. Reportez-vous à la section *Configuration de D-Link Wi-Fi* pour obtenir plus d'informations.
- B. **Navigateur Web** : utilisez un navigateur web sur votre ordinateur.

A. Configuration de l'application Wi-Fi D-Link

- 1 Scannez le code ci-dessous ou recherchez « D-Link Wi-Fi App » (App Store ou Google Play) pour télécharger l'application QRS Mobile sur votre iPhone, iPad ou appareil Android.



iOS



Android




D-Link Wi-Fi App

- 2 Une fois installé, lancer l'application. Veuillez suivre les instructions sur l'écran pour terminer l'installation.


Remarque : Pour vous reconnecter à votre routeur, lancez votre utilitaire sans fil, sélectionnez le nouveau réseau Wi-Fi que vous avez créé, puis saisissez votre nouveau mot de passe Wi-Fi.

B. Configuration du navigateur Web

- 1 Connectez un autre câble Ethernet entre le port Ethernet de votre ordinateur et l'un des ports du réseau local du routeur. Vous pouvez également vous connecter au routeur sans fil avec votre ordinateur. Utilisez la carte de configuration Wi-Fi fourni pour le nom du réseau Wi-Fi (SSID) et le mot de passe du routeur.

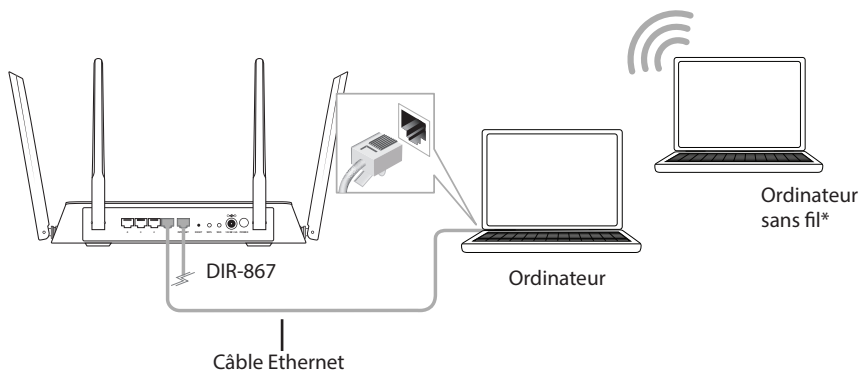

- 2 Ouvrez un navigateur web (par ex. Internet Explorer, Chrome, Firefox ou Safari) et saisissez **http://dlinkrouter.local./**. Vous pouvez également saisir l'adresse IP du routeur (**http://192.168.0.1**).



- 3 Quand l'écran d'accueil s'ouvre, cliquez sur **Next** (Suivant) pour continuer.



- 4 Le routeur détectera automatiquement votre type de connexion Internet. Si ce n'est pas le cas, sélectionnez votre connexion Internet et cliquez sur **Next** (Suivant) pour continuer.

Configure Your Internet Connection

Internet — DIR-867 — Wi-Fi Client

Please select your Internet connection type below:

- DHCP Connection (Dynamic IP Address)**
Choose this option if your Internet connection automatically provides you with an IP Address. Most Cable Modems use this type of connection.
- Username/Password Connection (PPPoE)**
Choose this option if your Internet connection requires a username and password to get online. Most DSL modems use this connection type of connection.
- Static IP Address Connection**
Choose this option if your Internet Service Provider provided you with IP Address information that has to be manually configured.

Back Next

Si vous utilisez le DSL (PPPoE), saisissez votre nom d'utilisateur et mot de passe PPPoE fournis par votre FAI. Cliquez sur **Next** (Suivant) pour continuer.

PPPoE

Internet — DIR-867 — Wi-Fi Client

To setup this Internet connection, you will need to have a User Name from your Internet Service Provider. If you do not have this information, please contact your ISP.

Username:

Password:

Back Next

Si vous avez une connexion IP statique, saisissez les paramètres de l'information et DNS IP fournies par votre FAI. Cliquez sur Next (Suivant) pour continuer.

Static IP

Internet — DIR-867 — Wi-Fi Client

To set up this connection you will need to have a complete list of IP information by your Internet Service Provider. If you have a Static IP connection and do not have this information, please contact your ISP.

IP Address:

Subnet Mask:


Gateway Address:

Primary DNS Address:

Secondary DNS Address:

Back Next

- 5** Créer un nom et un mot de passe un nom et mot de passe pour votre réseau Wi-Fi. Vous devrez saisir ces informations sur vos appareils sans fil (par exemple, vos tablettes, téléphones intelligents et ordinateurs portables) pour pouvoir vous connecter à votre réseau sans fil. Cliquez sur **Next** (Suivant) pour continuer.

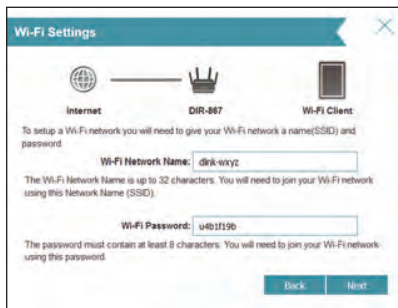

- 6** Continuez l'assistant de configuration pour terminer la configuration de votre routeur DIR-867. Une fois terminé, le voyant Internet s'allume en vert indiquant que votre routeur est connecté à Internet.

Félicitations! Vous avez terminé l'installation du routeur.

Résolution des problèmes

Comment connecter mes périphériques sans fil au routeur DIR-867?

1. Ouvrez votre utilitaire de réseau sans fil qui affiche les réseaux sans fil disponibles.
2. Sélectionnez le nom du réseau Wi-Fi que vous avez attribué dans l'assistant et connectez-vous.

Remarque : *Si vous n'avez pas exécuté l'assistant de configuration ou si vous réinitialisez le routeur à ses paramètres par défaut, reportez-vous à la carte de configuration du Wi-Fi jointe pour obtenir le nom du réseau Wi-Fi et le mot de passe Wi-Fi par défaut.*

Vous pouvez également vous connecter en utilisant le WPS :

1. Appuyez sur le bouton WPS du DIR-867 pendant trois secondes.
2. Dans la minute qui suit, appuyez sur le bouton WPS de votre périphérique sans fil.
3. La connexion peut mettre jusqu'à deux minutes pour devenir effective.

Remarque : *Certains périphériques peuvent vous demander de vous connecter à un utilitaire pour démarrer le processus WPS. Consultez le manuel d'utilisateur du périphérique que vous souhaitez connecter au routeur si vous ne savez pas comment lancer le processus WPS.*

Comment modifier les paramètres sans fil du routeur DIR-867?

1. Ouvrez un navigateur web (par ex., Internet Explorer, Chrome, Firefox ou Safari) et saisissez **http://dlinkrouter.local./**. Vous pouvez également saisir l'adresse IP du routeur (**http://192.168.0.1**).
2. Quand l'écran de connexion apparaît, saisissez **admin** comme nom d'utilisateur et saisissez le mot de passe du routeur que vous avez créé dans l'assistant.
3. Aller dans **Paramètres > Sans fil** pour créer un nouveau nom de réseau Wifi (SSID) et un mot de passe Wi-Fi.

La documentation est disponible sur :

États Unis : <http://support.dlink.com/DIR-867>

Canada : <http://support.dlink.ca/DIR-867>

Déclaration relative au code GPL

Ce produit D-Link comprend des codes de logiciel développés par des tiers, y compris des codes de logiciel soumis à la Licence Publique Générale GNU (« GPL ») ou à la Licence Publique Générale GNU Limitée (« LGPL »). Le cas échéant, les conditions de la GPL et de la LGPL, et les informations sur l'obtention de l'accès au codes GPL et LGPL utilisés dans ce produit, sont disponibles sur :

<http://tsd.dlink.com.tw/GPL.asp>

Les codes GPL et LGPL utilisés dans le produit sont distribués SANS AUCUNE GARANTIE et sont soumis aux droits d'auteur d'un ou de plusieurs auteurs. Pour plus de détails, reportez-vous aux codes GPL et LGPL de ce produit et aux conditions de la GPL et de la LGPL.

Offre écrite pour le code source GPL et LGPL

Si des conditions spécifiques de la licence vous donnent droit au code source du logiciel, D-Link fournira, sur demande écrite par courrier électronique et/ou courrier papier traditionnel, les fichiers de code source GPL et LGPL applicables via CD-ROM à un coût nominal pour couvrir les frais d'expédition et de support comme autorisé par la licence GPL et LGPL.

Veuillez adresser toutes les demandes à :

Courrier électronique :

GPLCODE@dlink.com

Courrier ordinaire :

Attention : GPLSOURCE REQUEST

D-Link Systems, Inc.

17595 Mt. Herrmann Street

Fountain Valley, CA 92708

LICENCE PUBLIQUE GÉNÉRALE GNU

Version 3, 29 juin 2007

Copyright (C) 2007 Free Software Foundation, Inc. <<http://fsf.org/>>

Consultez la déclaration complète relative au code GPL sur
<http://www.gnu.org/licenses/gpl.html>

Assistance technique

Vous avez des difficultés à installer votre nouveau produit? Le site Web de D-Link comporte la documentation de l'utilisateur à jour et les dernières mises à jour logicielles des produits D-Link. Les clients des États-Unis et du Canada peuvent contacter l'assistance technique de D-Link via notre site Web.

États-Unis

Internet : <http://support.dlink.com>

Canada

Internet : <http://support.dlink.ca>

D-Link®

Version 1.00(CA)_128x188

12 octobre 2017

610000008079



Copyright ©2017 D-Link Corporation/D-Link Systems, Inc. Tous droits réservés. D-Link et le logo D-Link sont des marques déposées de D-Link Corporation ou de ses filiales aux États-Unis et dans d'autres pays. iPhone, iPad et iPod touch sont des marques déposées de Apple Inc. Android est une marque de Google, Inc. Les autres marques déposées appartiennent à leurs propriétaires respectifs. Débit maximum du signal sans fil provenant des spécifications des normes IEEE 802.11ac (en version préliminaire), 802.11g et 802.11n. Le débit de transmission réel des données peut varier. Le surdébit, ainsi que les conditions du réseau et les facteurs environnementaux, dont l'importance du trafic réseau, les matériaux de construction et les constructions, peuvent avoir des conséquences négatives sur le débit de transmission réel des données. Les facteurs environnementaux ont des conséquences négatives sur la portée du signal sans fil. Les caractéristiques du produit, sa taille et sa forme sont soumises à modification sans préavis et l'apparence réelle du produit peut différer de celle illustrée sur la boîte. Consultez le www.dlink.com pour de plus amples détails.

Industry Canada statement:

This device complies with ISED's licence-exempt RSSs. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Le présent appareil est conforme aux CNR d'ISED applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) le dispositif ne doit pas produire de brouillage préjudiciable, et (2) ce dispositif doit accepter tout brouillage reçu, y compris un brouillage susceptible de provoquer un fonctionnement indésirable.

Caution :

(i) the device for operation in the band 5150-5250 MHz is only for indoor use to reduce the potential for harmful interference to co-channel mobile satellite systems;

(ii) the maximum antenna gain permitted for devices in the band 5725-5850 MHz shall be such that the equipment still complies with the e.i.r.p. limits specified for point-to-point and non-point-to-point operation as appropriate; and

(iii) Users should also be advised that high-power radars are allocated as primary users (i.e. priority users) of the bands 5650-5850 MHz and that these radars could cause interference and/or damage to LE-LAN devices.

Avertissement:

(i) les dispositifs fonctionnant dans la bande 5150-5250 MHz sont réservés uniquement pour une utilisation à l'intérieur afin de réduire les risques de brouillage préjudiciable aux systèmes de satellites mobiles utilisant les mêmes canaux;

(ii) le gain maximal d'antenne permis (pour les dispositifs utilisant la bande de 5725 à 5 850 MHz) doit être conforme à la limite de la p.i.r.e. spécifiée pour l'exploitation point à point et l'exploitation non point à point, selon le cas;

(iii) De plus, les utilisateurs devraient aussi être avisés que les utilisateurs de radars de haute puissance sont désignés utilisateurs principaux (c.-à-d., qu'ils ont la priorité) pour les bandes 5650-5850 MHz et que ces radars pourraient causer du brouillage et/ou des dommages aux dispositifs LAN-EL.

FOR MOBILE DEVICE USAGE (>20cm/low power)

Radiation Exposure Statement:

This equipment complies with ISED radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 44cm between the radiator & your body.

Déclaration d'exposition aux radiations:

Cet équipement est conforme aux limites d'exposition aux rayonnements ISED établies pour un environnement non contrôlé. Cet équipement doit être installé et utilisé avec un minimum de 44 cm de distance entre la source de rayonnement et votre corps.

Federal Communication Commission Interference Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

For operation within 5.15 ~ 5.25GHz frequency range, it is restricted to indoor environment. This device meets all the other requirements specified in Part 15E, Section 15.407 of the FCC Rules.

FOR MOBILE DEVICE USAGE (>20cm/low power)

Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 38cm between the radiator & your body.